



CDPW-K1S

UK 1 Gang 9-Button Wall Plate Control Keypad



Operation Manual

DISCLAIMERS

The information in this manual has been carefully checked and is believed to be accurate. Cypress Technology assumes no responsibility for any infringements of patents or other rights of third parties which may result from its use.

Cypress Technology assumes no responsibility for any inaccuracies that may be contained in this document. Cypress also makes no commitment to update or to keep current the information contained in this document.

Cypress Technology reserves the right to make improvements to this document and/or product at any time and without notice.

COPYRIGHT NOTICE

No part of this document may be reproduced, transmitted, transcribed, stored in a retrieval system, or any of its part translated into any language or computer file, in any form or by any means—electronic, mechanical, magnetic, optical, chemical, manual, or otherwise—without express written permission and consent from Cypress Technology.

© Copyright 2015 by Cypress Technology.

All Rights Reserved.

TRADEMARK ACKNOWLEDGMENTS

All products or service names mentioned in this document may be trademarks of the companies with which they are associated.





SAFETY PRECAUTIONS

Please read all instructions before attempting to unpack, install or operate this equipment and before connecting the power supply.

Please keep the following in mind as you unpack and install this equipment:

- Always follow basic safety precautions to reduce the risk of fire, electrical shock and injury to persons.
- To prevent fire or shock hazard, do not expose the unit to rain, moisture or install this product near water.
- Never spill liquid of any kind on or into this product.
- Never push an object of any kind into this product through any openings or empty slots in the unit, as you may damage parts inside the unit.
- Do not attach the power supply cabling to building surfaces.
- Use only the supplied power supply unit (PSU). Do not use the PSU if it is damaged.
- Do not allow anything to rest on the power cabling or allow any weight to be placed upon it or any person walk on it.
- To protect the unit from overheating, do not block any vents or openings in the unit housing that provide ventilation and allow for sufficient space for air to circulate around the unit.

REVISION HISTORY

VERSION NO.	DATE (DD/MM/YY)	SUMMARY OF CHANGE
VR0	16/10/15	First release



CONTENTS

- 1. Introduction..... 1**
- 2. Applications..... 1**
- 3. Package Contents 1**
- 4. System Requirements..... 1**
- 5. Features 2**
- 6. Operation Controls and Functions..... 3**
 - 6.1 Front Panel3
 - 6.2 Rear Panel.....4
 - 6.3 Telnet Commands.....5
 - 6.4 Software Application.....7
 - 6.5 Telnet Control8
 - 6.6 WebGUI Control 10
 - 6.6.1 Macro Settings..... 11
 - 6.6.2 Extension Marco 14
 - 6.6.3 Command Settings 14
 - 6.6.4 Schedule 14
 - 6.6.5 Network Settings..... 17
 - 6.6.6 System Settings 17
 - 6.6.7 Time Settings 18
- 7. CONNECTION DIAGRAM..... 19**
- 8. Specifications 20**



1. INTRODUCTION

The Wall-Plate Control System box is a fantastic and useful design for system installer and smart home user. With 9 direct macro buttons and extra 9 macro in WebGUI control which allows up to 18 to be execute within one push and a total of 128 capacity inside this box that can bring out a set of scenes in a seconds. Soft and colorful LED design fitting all environment purpose and PoE (Power over Ethernet) function ease power supply issue without extra DC power burden. Further, relay outputs design and scheduling function control settings can trigger master switch or any main switch of the installation environment that brings the world of control to whole.

2. APPLICATIONS

- Smart Home Installation
- Control Center
- Functional Room
- Show Room
- Ballroom

3. PACKAGE CONTENTS

- Wall-Plate Control System Box
- 1 x USB Type A to Mini USB OTG Cable
- 2 x 3.5mm Terminal Block Pitch
- 1 x 5V DC Power Adaptor
- 1 x Button Stickers (28 pcs)
- Operational Manual

4. SYSTEM REQUIREMENTS


Active internet connection from Hub or Router and output to DC controllable device.

5. FEATURES

- 9 macro buttons and extra 9 macro buttons in WebGUI with up to 128 commands to implant for control system
- Supports Relays to control on/off of other devices
- Supports Scheduling control system and settings
- Supports scheduling memory over power blackout up to 48hrs
- Supports Key Pad, Telnet and WebGUI controls
- Supports PoE function or DC power supply selection
- UK 1 Gang wall plate design with adjustable LED dim light
- Multiple uses for home, hotel room central control or conference room and etc...


6. OPERATION CONTROLS AND FUNCTIONS

6.1 Front Panel

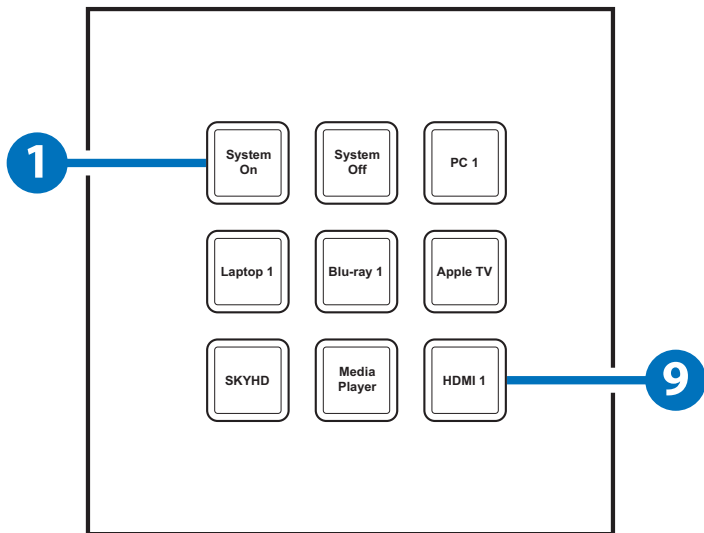

- 1 1~9 Macro Buttons:** Each buttons has 2 colors of LEDs adjustable from dim 0~100% and can be insert up to 16 commands.

6.2 Rear Panel

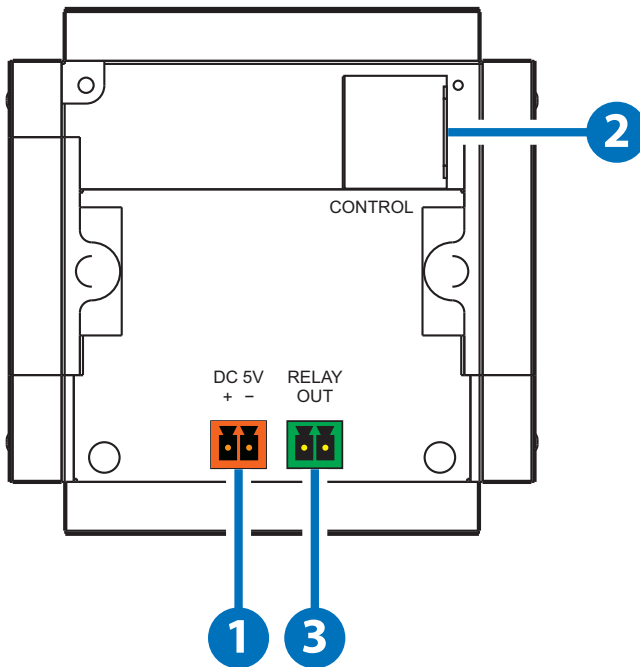

- 1 DC 5V:** Plug the 5V DC power adaptor included in the package and connect to AC wall outlet for power supply.
- 2 Control:** Connect from PC/Laptop with active internet service or Telnet or WebGUI control with RJ-45 terminated cable. This slots supports PoE PD 48V function which means when the connected server/Hub support PSE 48v it can be powered without DC supply connection.
- 3 RELAY OUT:** Connect with device that supports DC 0~24V/8A power or signal that supports relay function.

6.3 Telnet Commands

COMMAND NAME	DESCRIPTION	DESCRIPTION OF PARAMETER
IPCONFIG	<i>Display The Current IP Configure</i>	NONE
SIPADDR XXX.XXX.XXX.XXX	<i>Set Ethernet IP Address</i>	XXX=0~255
SNETMASK XXX.XXX.XXX.XXX	<i>Set Ethernet Net Mask</i>	XXX=0~255
SGATEWAY XXX.XXX.XXX.XXX	<i>Set Ethernet Gateway</i>	XXX=0~255
SIPMODE N	<i>SET ETHERNET IP MODE</i>	N=STATIC/DHCP
VER	<i>Show Unit Firmware Version</i>	NONE
FADEFAULT	<i>ALL CONFIGURE and Macro SET TO FACTORY DEFAULT</i>	NONE
ETH_FADEFAULT	<i>ALL ETHERNET CONFIGURE SET TO FACTORY</i>	NONE
REBOOT	<i>System Reboot</i>	NONE
HELP/?	<i>Show Command List</i>	NONE
HELP N	<i>Show Descript Of Command</i>	N : COMMAND NAME
RELAY N N1	<i>RELAY CONTROL</i>	N(PORT)=1 N1=OPEN/CLOSE/TOGGLE
LEDBLUE N N1	<i>LED BLUE BACKLIGHT CONTROL</i>	N(LEN NO.)=1~8 N1=% (0-100)

COMMAND NAME	DESCRIPTION	DESCRIPTION OF PARAMETER
LEDRED N N1	LED RED BACKLIGHT CONTROL	N(LEN NO.)=1~8 N1=% (0-100)
LEDBLUES N	ALL BLUE LED BACKLIGHT CONTROL	N=% (0-100)
LEDREDS N	ALL RED LED BACKLIGHT CONTROL	N=% (0-100)
LEDSHOW N	LED DIMMING MODE CONTROL	LEDSHOW N N=ON/OFF/TOGGLE
BACKLIGHT N	ALL LED BACKLIGHT CONTROL	N=% (0-100)
KEY_PRESS N RELEASE KEY_PRESS N HOLD	KEY PRESS TRIGGER TYPE	KEY_PRESS N RELEASE N=PORT NUMBER KEY_PRESS N HOLD N=PORT NUMBER
MACRO N	MACRO SETTING	MACRO RUN N N=MACRO ID (1~16) MACRO STOP

Note: All the Telnet command will be not executed unless followed with a carriage return. All commands are case-insensitive.

6.4 Software Application

Please download the software from www.cypress.com.tw with file name CDPS V2.000 and save it in a directory where you may use it later.

Connect the Control System with PC/Laptop through the Ethernet port of an active network system and open the CDPS V2.000 application. Click on Find Devices on Network and a list of the devices connected to the Control System will show up.

Note: The default IP setting is 192.168.1.50 and set Static IP or DHCP via IP mode of CDPS V2.000. Click "Save" then "Reboot" for loading the new IP address.

Find Devices on Network				
Product Name	Description	IP Address	MAC Address	



MAC Address	F8:22:85:00:05:01
IP Address	<input type="text" value="192.168.1.50"/>
Subnet Mask	<input type="text" value="255.255.255.0"/>
Gateway IP	<input type="text" value="192.168.1.254"/>
DNS	<input type="text" value="0.0.0.0"/>
IP Mode	<input type="text" value="Static"/>
Web GUI Port	<input type="text" value="80"/>
Telnet Port	<input type="text" value="23"/>
S / N	SN:2236
Firmware Version	v2.02
Hardware Version	v1.00

6.5 Telnet Control

To access the telnet control under MS windows, click 'Start' menu and type "cmd" in the search field then press enter.

Under Mac OS X, go to Go → Application → Utilities → Terminal

See below for reference.

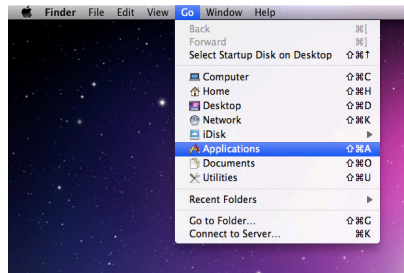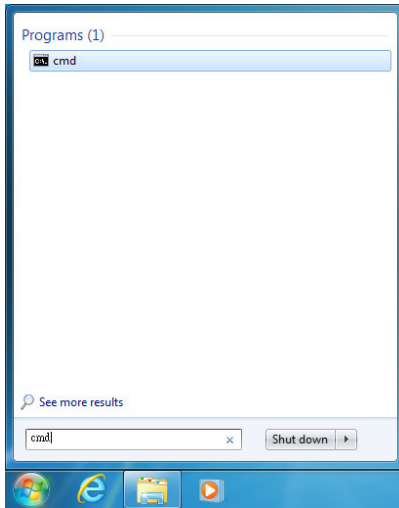

Once in the command line interface (CLI) type "telnet", then the IP address, and hit enter.

```
Microsoft Windows [Version 6.1.7601]
Copyright (c) 2009 Microsoft Corporation. All rights reserved.

C:\Users\Administrator>telnet 192.168.5.80 23
```



Press “Help” or “?” then hit enter to bring up all available commands.

```
>?
HELP          : SHOW DESCRIPT OF COMMAND
               USE <HELP N, N=COMMAND NAME> TO SHOW DESCRIPT OF COMMAND
?             : SHOW DESCRIPT OF COMMAND
               USE <? N, N=COMMAND NAME> TO SHOW DESCRIPT OF COMMAND
IPCONFIG      : DISPLAY THE CURRENT IPCONFIG
SIPADDR       : SET ETHERNET IP ADDRESS
SNETMASK      : SET ETHERNET NETMASK
SGATEWAY      : SET ETHERNET GATEWAY
SIPMODE       : SET ETHERNET IP MODE
VER           : SHOW UNIT FIRMWARE VERSION
FADEFAULT     : ALL CONFIGURE SET TO FACTORY DEFAULT
ETH_FADEFAULT : ALL ETHERNET CONFIGURE SET TO FACTORY DEFAULT
REBOOT        : SYSTEM REBOOT
RELAY         : RELAY CONTROL
LEDBLUE       : LED BLUE BACKLIGHT CONTROL
LEDRED        : LED RED BACKLIGHT CONTROL
KEY_PRESS     : KEY PRESS TRIGGER TYPE
MACRO         : MACRO SETTING
LEDBLUES      : ALL BLUE LED BACKLIGHT CONTROL
LEDREDS       : ALL RED LED BACKLIGHT CONTROL
BACKLIGHT     : ALL LED BACKLIGHT CONTROL
LEDSHOW       : LED DIMMING MODE CONTROL
TELNET_TIMEOUT : SET TELNET TIME OUT ON/OFF
```


Note: Any commands will not be executed unless followed by a carriage return.

Commands are case-insensitive. If the IP is changed then the IP Address required for Telnet access will also change accordingly.

6.6 WebGUI Control


On a PC/Laptop that is connected to an active network system, open a web browser and type device's IP address on the web address entry bar.

Note: The Default IP setting is on Static with address at 192.168.1.50 A security page will appear to ask for User and Password, please key in "admin" for both to enter.

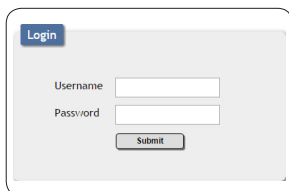


A login form with a blue 'Login' button at the top left. Below it are two input fields: 'Username' and 'Password'. At the bottom right is a 'Submit' button.

The browser will display the device's Macro, Extension Macro, Command setting, Schedule, Network and System Settings pages for users to control.

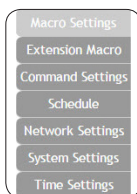

A vertical list of settings pages: Macro Settings, Extension Macro, Command Settings, Schedule, Network Settings, System Settings, and Time Settings.

6.6.1 Macro Settings

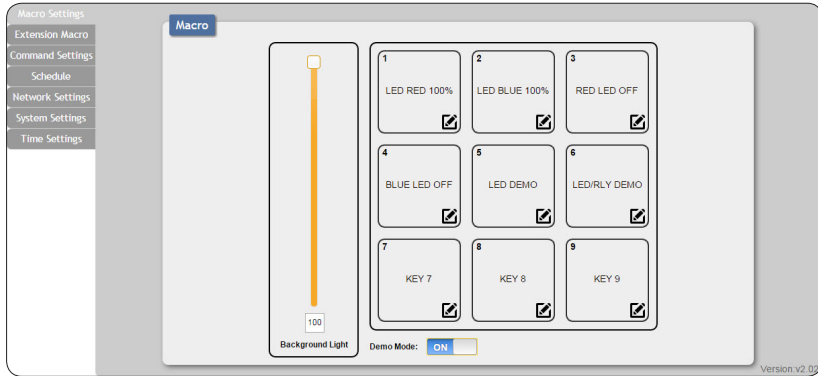


The Background Light Bar allows user with instant change on the LEDs lighting percentage base on the original illuminate setting.


There are 6 Macro inserted as default setting for testing the Wall-Plate Control System's functionality. Click on Macro 1 ~ 6 to demonstrate the function of lighting LEDs.

- Macro 1: Light up the Red backlight LED with 100% brightness sequentially from 1~8 with every 500ms.
- Macro 2: Light up the Blue backlight LED with 100% brightness sequentially from 1~8 with every 500ms.
- Macro 3: Switch off all the read backlight LED with 0% brightness.
- Marco 4: Switch off all the blue backlight LED with 0% brightness.
- Marco 5: LED show mode toggle, switch off Demo Mode
- Macro 6: Light up the Blue backlight LED with 10% brightness, Switch off all the blue backlight LED with 0% brightness, switch Off & On Relay 1 with delay of 1000ms.

To disable default testing mode, click on Demo Mode / Marco 5 to switch it off.

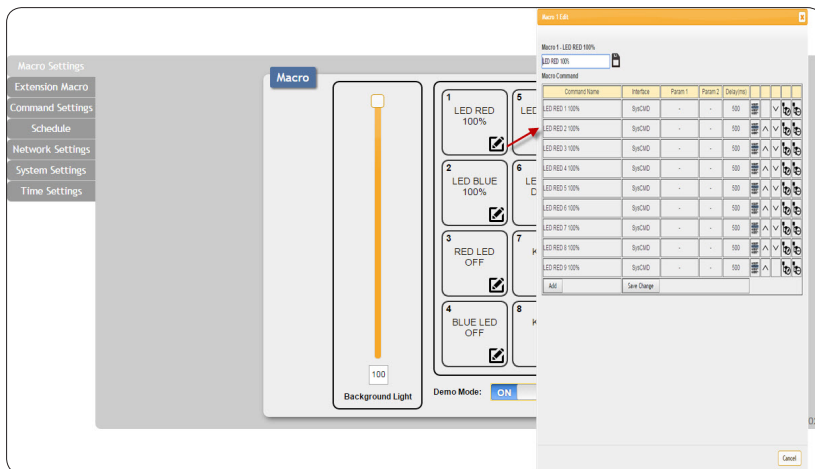


Click on the mark to edit the command settings. Up/down arrows are to move the command up or down and button is to delete the command.

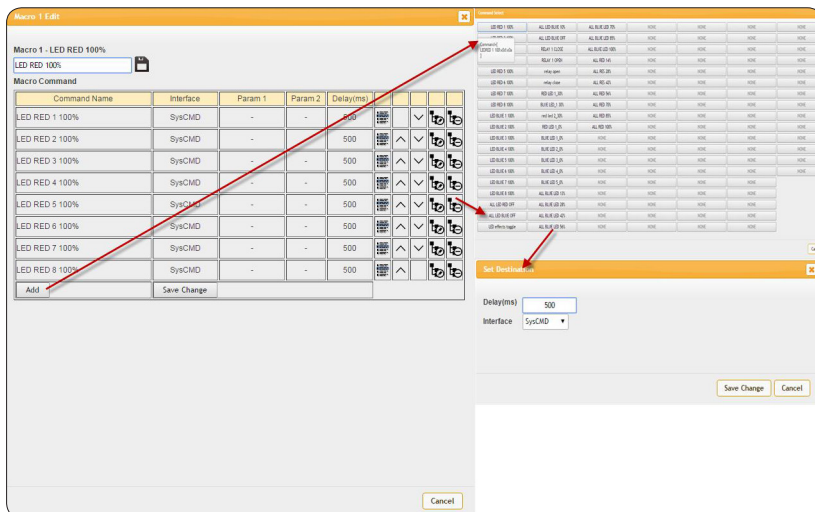


Click on Insert button/Add to insert commands. Command can be set to control the Wall-Plate Control Box/SysCMD, other devices connected within the same Telnet system/ Internet area and Relay connected through the Replay outputs of wall- plate Control Box with

delay time. It is suggested the delay time is >100ms once the setting is confirmed, double click on Save Change.



The 'Set Destination' dialog box has a title bar with a close button. It contains four fields: 'Delay(ms)' with a text input containing '500', 'Interface' with a dropdown menu showing 'TELNET', 'Telnet IP' with a text input containing '192.168.1.24', and 'Port' with a text input containing '23'. At the bottom right are two buttons: 'Save Change' and 'Cancel'.

Command set to control the device within the same telnet system or internet area require to set its IP and Port number and it is strongly recommend to set the delay time>500ms in order to secure a successful command sending. Once the setting is done click on Save change.

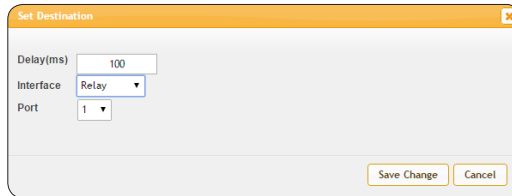


The 'Set Destination' dialog box has a title bar with a close button. It contains four fields: 'Delay(ms)' with a text input containing '100', 'Interface' with a dropdown menu showing 'Relay', and 'Port' with a dropdown menu showing '1'. At the bottom right are two buttons: 'Save Change' and 'Cancel'.

Command set to control the Relay devices require to set the Port number. Click on Save Change to confirm the setting.

6.6.2 Extension Marco

Click on Extension Macro to execute/edit more Macro action up to 9 more.

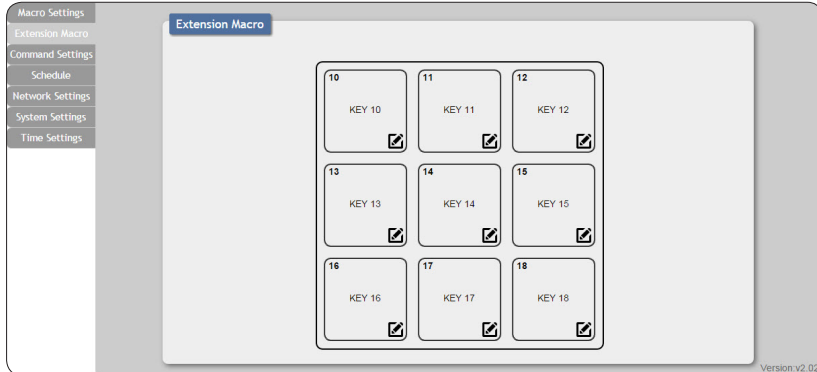


6.6.3 Command Settings

Command under 128 characters including space can be build up to 128 commands, command over 128 characters and under 512 characters including space can be build up to 32 command in addition with 96 commands of 128 characters under. Click on Save Change to save the command inserted.


6.6.4 Schedule

Click on Schedule to set the executing time schedule of the Macro(s).

Note: The scheduling system support up to 48hrs of memory under power blackout after that the system will reset the time automatically back to 2015/01/01 00:00:00.

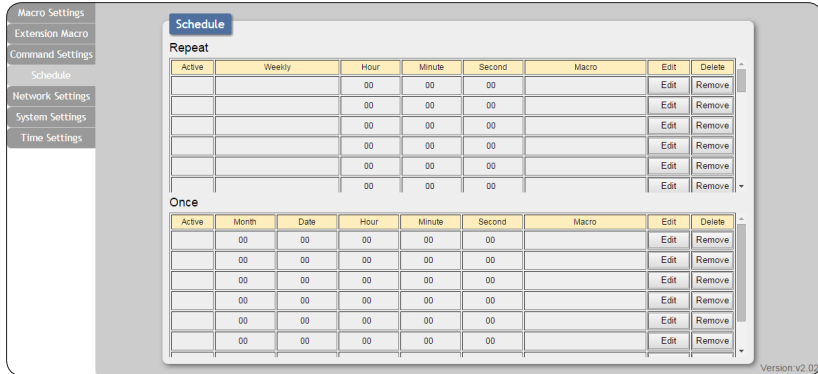

Click on Edit from Repeat column to set the macro command(s) to be activated repeatedly on a set time.

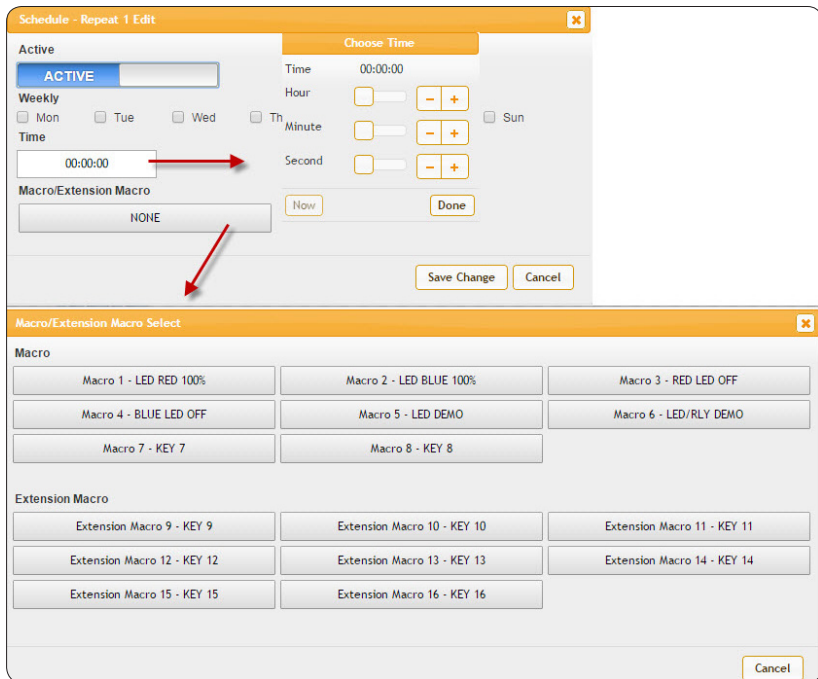

Click on Edit from Once column to set the macro command(s) to be activated on a set time only.

Schedule - Once 1 Edit

Active

ACTIVE

Date & Time

00-00 00:00:00

Macro/Extension Macro

NONE

June 2015

Su	Mo	Tu	We	Th	Fr	Sa
	1	2	3	4	5	6
7	8	9	10	11	12	13
14	15	16	17	18	19	20
21	22	23	24	25	26	27
28	29	30				

Time 00:00:00

Hour

Minute

Second

-

+

-

+

-

+

Now Done

Save Change Cancel

Macro/Extension Macro Select

Macro

Macro 1 - LED RED 100%	Macro 2 - LED BLUE 100%	Macro 3 - RED LED OFF
Macro 4 - BLUE LED OFF	Macro 5 - LED DEMO	Macro 6 - LED/RLY DEMO
Macro 7 - KEY 7	Macro 8 - KEY 8	Macro 9 - RED5-BLUE-RED1-OFF
Macro 10 - RELAY POP 4 TIME	Macro 11 - BLUE 0-100 - RED 0-100	Macro 12 - all blue 100% on
Macro 13 - all blue off	Macro 14 - all red 100% on	Macro 15 - all red off
Macro 16 - all blue 14% on/off		


Extension Macro

Extension Macro 17 -	Extension Macro 18 -	Extension Macro 19 -
Extension Macro 20 -	Extension Macro 21 -	Extension Macro 22 -
Extension Macro 23 -	Extension Macro 24 -	Extension Macro 25 -
Extension Macro 26 -	Extension Macro 27 -	Extension Macro 28 -
Extension Macro 29 -	Extension Macro 30 -	Extension Macro 31 -
Extension Macro 32 -		

Cancel

6.6.5 Network Settings

Click on Network Settings to reset the IP, Netmask or Gateway address.

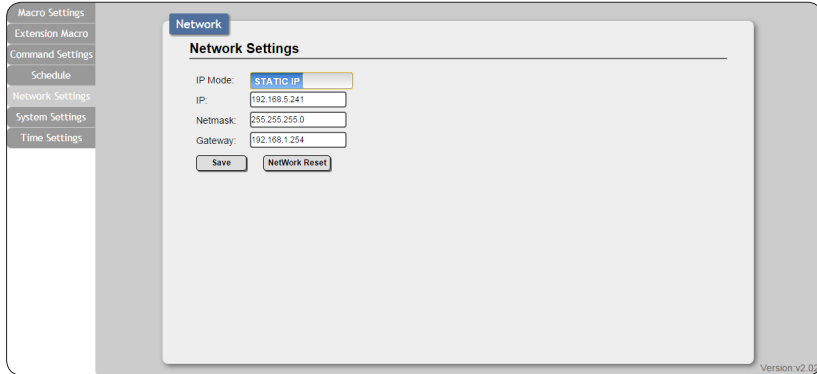


6.6.6 System Settings

Click on System Settings to reset the WebGUI login password and timeout setting and save or download the Macro settings.


Reset to Default allows IP and login ID & password to be reset back to factory default.

System time setting is also done on this page. Simply click on the white column and a calendar will appear for your selection.

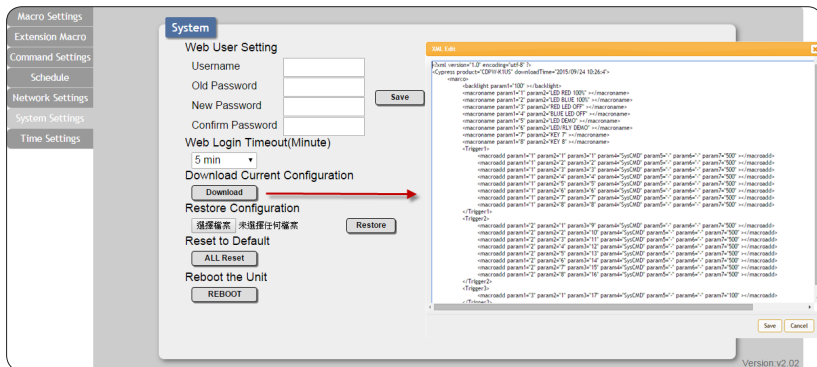


6.6.7 Time Settings

Click on 'Time Settings' to set the system time and to enable/ disable Daylight Saving Time(DST) function. Simply click on the white column and a calendar will appear for your selection with current timing setting. Another simple few clicks to enable/disable DST with its start and end.

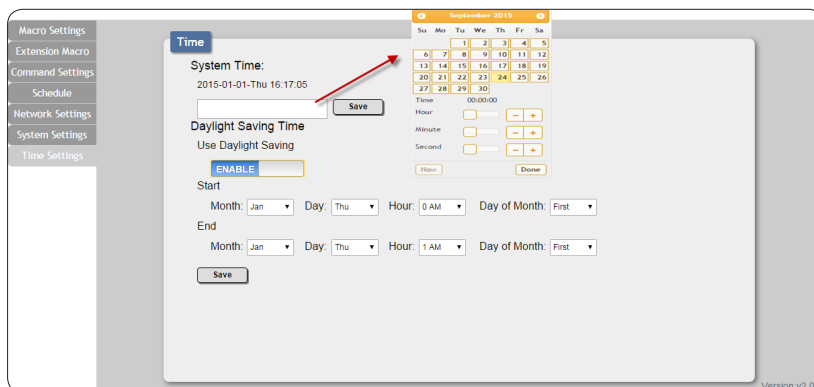

7. CONNECTION DIAGRAM

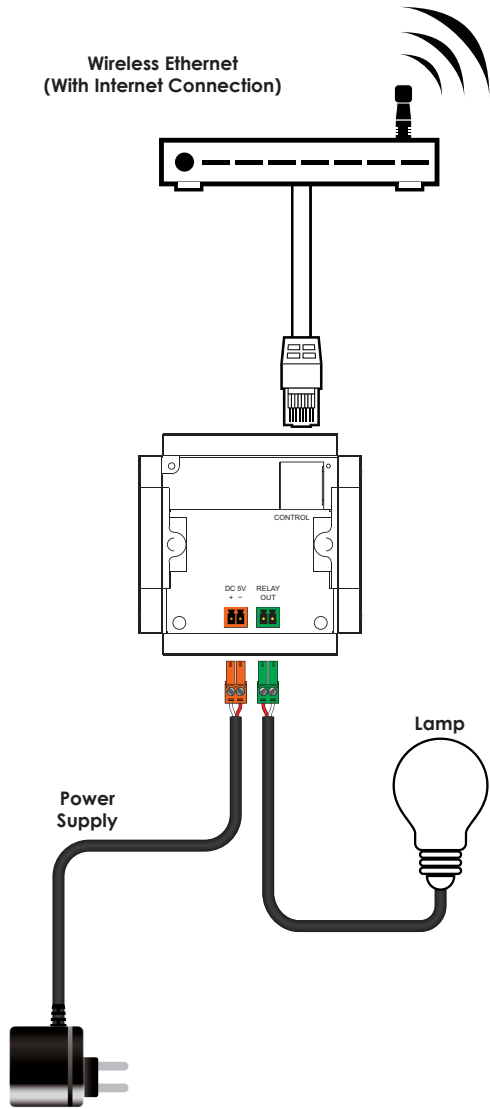

8. SPECIFICATIONS

Input Ports	9 x Button 1 x Control
Output Ports	1 x Relay
Power Supply	5VDC/2.6A (US/EU standards, CE/FCC/ UL certified)
ESD Protection	Human body model: ±8 kV (air-gap discharge) ±4 kV (contact discharge)
Dimensions	87mm(W)x87mm(D)x31mm(H) /Jacks Excluded 87mm(W)x87mm(D)x34mm(H) /Jacks Included
Weight	184 g
Chassis Material	Metal
Color	White
Operating Temperature	0°C~40°C/32°F~104°F
Storage Temperature	-20°C~60°C/-4°F~140°F
Relative Humidity	20~90% RH (non-condensing)
Power Consumption	3.9 W



CYPRESS TECHNOLOGY CO., LTD

Home page: <http://www.cypress.com.tw>

MPM-CDPWK1S