





# TSD-MIX42RT 4x2 Mic/Line Mixer with Priority Sense and Remote Control

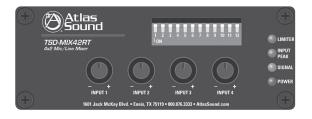

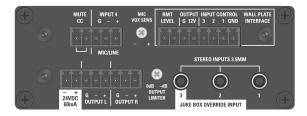



1601 Jack McKay Blvd. • Ennis, Texas 75119 U.S.A. Telephone: 800.876.3333 • Fax: 800.765.3435

AtlasSound.com

- 1 –
 Specifications are subject to change without notice.



## Description

The versatile Atlas Sound TSD-MIX42RT 4x2 mic/line mixer is ideal for applications where paging, priority music override and/or remote input selection with level control are required. Use alone or in conjunction with amplifiers in meeting rooms, digital signage, luxury suites, and/or other applications requiring versatile, stereo or mono multi source mix control.

The unit includes one mic/balanced line input via removable Phoenix style connector and three stereo 3.5mm inputs. Switchable phantom power is provided for the mic input to facilitate condenser microphones. The high quality, low noise internal mic preamps ensure clarity and quiet operation without unwanted coloration. A 12dB/octave high pass filter @ 125Hz also is available on the mic input to minimize bass rumble and low frequency feedback.

Priority paging can be accomplished via contact closure or VOX trigger on Input 1 that will mute Inputs 2, 3, or 4 (assignable). A remote level control feature allows use of the Atlas Sound AAVC-10K or WPD-VC10K decorative wall plate control for convenient remote adjustment of either the entire Master mix bus or Inputs 2, 3, or 4.

Remote Input selection and level control can be accomplished by using the optional WPD-MIX42RT wall controller. The WPD-MIX42RT can be placed up to 200 ft away from the TSD-MIX42RT. The audio quality is not affected by the distance because no audio is present at the WPD wall controller. All that is needed to obtain maximum system control are 8 conductors, a TSD-MIX42RT and a WPD-MIX42RT.

There are several installations that require audio override sensing for applications such as a Juke Box's playback or digital signage advertisement. The TSD-MIX42RT is ideal for these types of installations. When Input 3 is assigned to Juke Box Override and receives a signal, it mutes stereo Inputs 1 and 2. When the audio is not present on Input 3 for 20 seconds, Inputs 1 and 2 fade back in and resumes play.

A variable output limiter provides system protection by reducing clipping and distortion - which is especially useful when mixing mic and/or line sources with varying volumes.

The TSD-MIX42RT is part of a full line of Atlas Sound Time Saving Devices. These compact (1.5" x 4" x 2.5") units are designed to solve some of the common audio system problems in the easiest, most efficient, and cost-effective way. All models are made from high quality components and include removable individual I/O connectors for quick and precise wiring, separate ground terminals for all I/Os assuring secured connections, and removable level controls that can be replaced with tamper-resistant security covers. The TSDs are highly efficient and meet most energy standards as one 24V DC power supply (available separately) can power multiple Atlas Time Saving Devices.




1601 Jack McKay Blvd. • Ennis, Texas 75119 U.S.A. Telephone: 800.876.3333 • Fax: 800.765.3435

AtlasSound.com

– 2 –
 Specifications are subject to change without notice.

# Owner's Manual

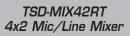



## Features

- Stereo or Mono Configurations
- One Balanced Mic/Line Input
- Switchable 24V Phantom Power
- Three Unbalanced Stereo Line Inputs 3.5mm
- Vox Sense and Contact Closure, Priority Mute
- Variable Output Limiter
- Remote Level Control
- 12dB/Octave Low Cut Filter @ 125Hz Mic/Line
- Remote Control Input Select & Level Control
- Audio Auto Sensing Juke Box Override
- Input Signal & Peak Indicator LEDs
- High Gain Output for Driving Long Balanced Lines
- Separate Ground Connections
- Security Covers Included for All Front Panel Controls
- Cable Management System
- Multiple Mounting Configurations
- Removable Phoenix Style I/O Connectors
- Meets Most Energy Standards
- Compact Chassis Design

# Audio Applications

- Mixer
- Mic Preamp
- Line Preamp
- Stereo Summing Preamp
- Line Drive
- Remote Level Control
- Priority Paging
- Music Override
- Digital Signal Auto Sense

## Installation


- Restaurants
- Sports Bars
- Schools
- Industrial Facilities
- House of Worship



1601 Jack McKay Blvd. • Ennis, Texas 75119 U.S.A. Telephone: 800.876.3333 • Fax: 800.765.3435




# **Front Panel Description**

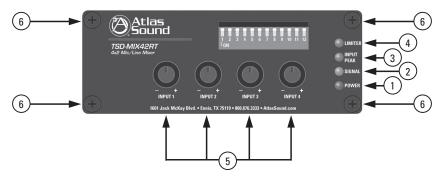


- 1. Power LED Illuminates Blue when 24VDC power is present.
- 2. Signal LED Illuminates Green when the input signal strength reaches 25mV to verify a signal path. Note: The LED will not illuminate if the input level is turned Off.
- Input Peak LED Illuminates Red when the output signal reaches 3dBV below when signal clipping will occur. Occasional flashing is normal but if this indicator is continuously On, then reduce the input level using the input level control on the front panel.
- 4. Limiter LED Adjustment of the Limiter feature should be done after the input gain(s) have been properly set. Each Input should be adjusted so the Output Limiter control can be set so this LED flashes to indicate that the limiter circuit is active.
- Input Level Controls 1, 2, 3, and 4 Independently adjust the level of input signals 1 through 4. Turn clockwise to increase the signal level and counter-clockwise to decrease it. Note: The Input Level Control knobs can be removed and replaced with a supplied security cover to prevent unauthorized adjustment.
- Bracket Retainer Points Each TSD includes two mounting brackets for securing the TSD to a cabinet or wall. Remove screws and align the bracket with the panel hole before firmly tightening the screws.



1601 Jack McKay Blvd. • Ennis, Texas 75119 U.S.A. Telephone: 800.876.3333 • Fax: 800.765.3435

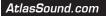

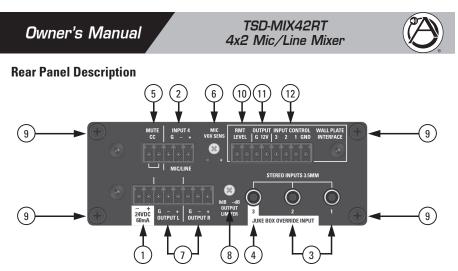

TSD Input/Output connections are removable for easy system wiring. The connectors have a 3.5mm pitch between pins.

- 1. DC Power Input Each TSD that requires DC power comes with a 2 position connector for an external 24VDC power supply (sold separately). Because of the TSD's low power consumption, a single external power supply may power more than one TSD. Please refer to the specifications on current requirements in milliamps to match with the appropriate power supply. Please observe the polarity of the wiring to this connector. Note: It is acceptable to exceed the current requirements of the TSDs but NOT safe to use a power supply that is below the current requirement of the device.
- Mic/Line Input 4 Connects to balanced line or mic level sources. For gain or source input type selection, refer to the "Dip Switch Function Identification" chart. Note: Unbalanced line inputs can be inserted with proper wire configuration by connecting the (G) and (-) terminals together.
- 3. Unbalanced Inputs 1 & 2 Stereo 3.5mm (1/s") Stereo Unbalanced Audio Signals.
- 4. Unbalanced Input 3 Stereo Unbalanced Audio Signal. Input 3 is also the auto sense Juke Box Override input. Note: Juke Box Override will not work when Remote Wall Plate is activated.
- Remote Mute To mute Input 1, 2, or 3 via a remote switch, assign which channels you want to be muted via the dip switch provided and short the two terminals together using a dry contact closure.
- 6. **VOX Sense** Adjusts the sensitivity of the Mute circuit for priority pages. Assign the input to be muted via the corresponding dip switch.
- Balanced Left & Right Output Provides output for connection to balanced line level devices. Note: Unbalanced line level devices can be used with proper wire configuration by connecting the (G) and (-) terminals together. Mono or stereo configurations are assigned via the associated dip switch.



1601 Jack McKay Blvd. • Ennis, Texas 75119 U.S.A. Telephone: 800.876.3333 • Fax: 800.765.3435




# TSD-MIX42RT 4x2 Mic/Line Mixer

- 8. **Output Limiter Control** Sets peak output levels by increasing or decreasing the sensitivity. The Limiter LED on the front panel indicates when limiter is in use.
- 9. **Cable Management Retainer Points** Use the rear panel screws for connecting the included cable retainers. Each TSD comes with two cable retainers for simplified cable management.
- 10. **Remote Level** For remote gain control, connect the Atlas Sound AAVC-10K (or equal) wall plate to this terminals. Set dip switch 10 to control a mixed signal or Inputs 1, 2, and 3 signal only.
- 11.DC Output (Remote LED) A 12VDC output is provided to power a remote system ON LED Indicator on the WPD-MIX42RT wall controller.
- 12. Wall Plate Interface Input Selection Inputs 1, 2, and 3 can be remotely selected by shorting the terminals 1, 2 or 3 to ground. The WPD-MIX42RT provides proper connectivity to easily do this.

# Wall Plate Interface

The TSD-MIX42RT is designed to mate with the optional wall plate WPD-MIX42RT. This control accessory allows you to select Inputs to be sent to the Output, along with a system level control and a remote system on power indicator. To activate the input selection section, you must assign the corresponding dip switch. **Note:** Placement of the WPD-MIX42RT can be placed up to 200 ft away from the TSD-MIX42RT. The audio quality is not affected by the distance because no audio is present at the WPD wall controller. All that is needed to obtain maximum system control is 8 conductors, TSD-MIX42RT and a WPD-MIX42RT. Cat5 cable is ok to use. **Note:** Juke Box Override will not work when Remote Wall Plate is activated.

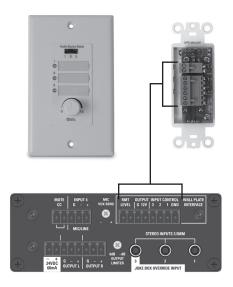



1601 Jack McKay Blvd. • Ennis, Texas 75119 U.S.A. Telephone: 800.876.3333 • Fax: 800.765.3435



## **Dip Switch Function Identification**

| 1       | 2       | 3   | 4       | 5               | 6        | 7        | 8        | 9       | 10              | 11            | 12 |
|---------|---------|-----|---------|-----------------|----------|----------|----------|---------|-----------------|---------------|----|
| INPUT 4 | INPUT 4 |     | INPUT 3 | INPUT 3<br>JUKE | INPUT 3  | INPUT 2  | INPUT 1  | STEREO/ | REMOTE<br>LEVEL | WALL<br>PLATE | NC |
| PHANTOM |         |     | JUKE OR | MUTE DELAY      | MUTE RCV | MUTE RCV | MUTE RCV |         |                 |               | NC |
| OFF     | LINE    | OFF | OFF     | 20 SEC          | OFF      | OFF      | OFF      | STEREO  | MASTER          | OFF           | NC |
| ON      | MIC     | ON  | ON      | 3 SEC           | ON       | ON       | ON       | MONO    | INPUT 1,2,3     | ON            | NC |

SWITCH FUNCTIONS

## Switch Position

- Dip Switch # 1 24VDC Phantom Power applies power for condenser mic operation to corresponding input terminal. Down position is ON.
- Dip Switch # 2 Input Mic or Line Select for input gain selection for Input 4. Up position is Line, down position is Microphone.
- Dip Switch # 3 Low Cut Filter engages at 125Hz with a roll off rate of 12dB per octave. This filter
  operates either in the Line or Mic mode and is available on Input 4. Ideal for vocal microphones
  to reduce low frequency energy and to increase intelligibility. Down position is ON.
- Dip Switch # 4 Input 3 can be used as an Audio Override to Mute Inputs 1 & 2. When set to the
  ON position, if Input 3 receives a signal it will mute Inputs 1 or 2 if they are set to Mute Receive
  ON. This is also known as a Juke box Override feature. See DIP SW 5 for delay settings. If the
  switch is in the OFF position, standard mix summing Inputs 1, 2 and 3 can be done. Note: VOX &
  Remote CC will also Mute Inputs 1, 2, and 3 if they are assigned to Mute Receive.
- Dip Switch # 5 Corresponds with DIP SW 4 ON settings. When Input 3 receives a signal to
  mute Inputs 1 or 2, you need to select the length of time needed to sustain the mute. This will
  depend on the application and/or audio source material triggering the Override function at
  Input 3; you may want short or long Mute Delay (hold) time after the signal has stopped at
  Input 3 to assure a smooth transition from Input 3 to inputs 1 or 2.
- Dip Switch # 6 Input 3 will be muted when audio is present at Input 4 or when the mute CC pins are shorted together. Down position is mute receive ON.
- Dip Switch # 7 Input 2 will be muted when audio is present at Input 4 or when the mute CC pins are shorted together. Down position is mute receive ON.
- Dip Switch # 8 Input 1 will be muted when audio is present at Input 4 or when the mute CC pins are shorted together. Down position is mute receive ON.
- Dip Switch # 9 Outputs left and right can be configured for stereo left and right or combined into a summed mono output. Up position is stereo and down is summed mono.
- Dip Switch # 10 Remote level sets whether the remote volume control adjusts all inputs mixed (Inputs 1, 2, 3, and 4) or Inputs 1, 2, and 3 only. Up position is all Inputs, down position is Inputs 1, 2, and 3.
- Dip Switch # 11 Wall Plate Activation This switch is used for the optional WPD-MIX42RT remote wall controller. When the switch is in the UP position, it is OFF, meaning that all inputs are active to the outputs. When in the ON position the wall controller selects Inputs 1, 2, or 3 to be at the output of the TSD. Note: Input 4 is always present at the outputs in either mode. Note: Juke Box Override will not work when Remote Wall Plate is activated.
- Dip Switch # 12 Not Used



1601 Jack McKay Blvd. • Ennis, Texas 75119 U.S.A. Telephone: 800.876.3333 • Fax: 800.765.3435



## TSD-MIX42RT 4x2 Mic/Line Mixer

## **Knob and Security Cover**

All front panel level controls feature a removable knob that can be replaced with an included security cover. Follow these steps to prevent potentiometer damage or unwanted changes.

- 1. Knob Installation Turn the potentiometer shaft fully counter-clockwise. Align the knob indicator to the lowest setting on the panel and the potentiometer shaft slot. Carefully press the knob onto the potentiometer shaft. Do not force or damage may occur to the potentiometer.
- 2. Security Cover Installation Remove the knob from the panel and insert the cover. Do not force or damage may occur to the potentiometer. Small pliers may be required to remove the knobs.


## Mounting

There are three ways to securely mount this TSD:

- 1. Velcro<sup>™</sup> Each unit includes industrial-grade Velcro<sup>™</sup> with adhesive backing to adhere to any flat surface.
- 2. Brackets Each unit includes two mounting brackets to secure to a cabinet or wall.
- 3. Rack Mount Panel The optional TSD-RMK rack mount panel supports up to four TSDs in a 1RU space.



1601 Jack McKay Blvd. • Ennis, Texas 75119 U.S.A. Telephone: 800.876.3333 • Fax: 800.765.3435

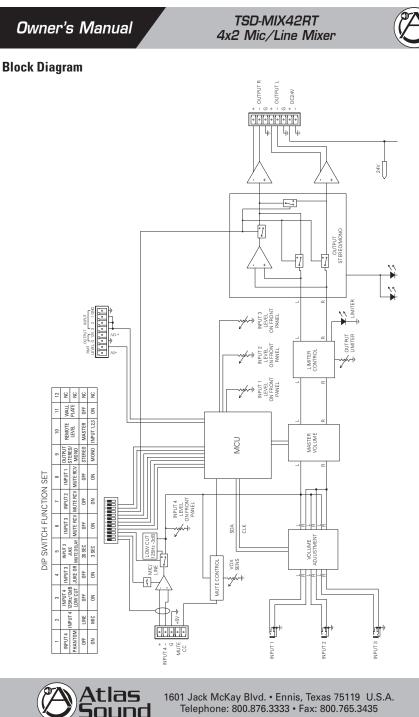

1601 Jack McKay Blvd. • Ennis, Texas 75119 U.S.A. Telephone: 800.876.3333 • Fax: 800.765.3435

Ind



## Specifications

Description

Chassis Color Chassis Material

### Inputs

Type Connection Impedance Input Level

- Type
- Connection Impedance Phantom Low Cut Filter Line Input Level

Mic Input Level

## Outputs

Type Connection Impedance Line Output Level

## Controls

Input Level Control Mute CC

VOX Mute Sens Output Limiter Remote Level

DC 12V Output

Wall Controller Interface

4 x 2 Stereo Line Mixer with Priority Sense & Remote Level Black Aluminum Ωty 3, Unbalanced 3.5mm Stereo 10kΩ 316mV (-10dB) = 2V (+6dBV) Balanced Output, Maximum Input 1.6V (4.1dBV) Qty 1, Balanced Mic or Line Selectable

City 1, Balanced Mic of Line Selectable Removable 3 Position Captive Screw 3.5mm Spacing 1.2kΩ Balanced, 600Ω Unbalanced 24VDC Defeatable 125Hz/12dB Defeatable 1V (0dBV) Balanced = 2V (+6dBV) Balanced Output, Maximum Input 6V (6dBV) 46dB Gain, 10mV (-40dB) Balanced = 2V (+6dBV) Balanced Output, Maximum Input 40mV (-27dBV)

Qty 2, Balanced Line, Left & Right Removable 3 Position Captive Screw 3.5mm Spacing 300Ω Balanced, 150Ω Unbalanced 1V (0dBV) In = 2V (+6dBV), Maximum Output 6V (15dBV)

 Qty 4, Removable Knobs with Security Covers

 Contact Closure, Removable 2 Position Captive Screw

 3.5mm Spacing

 Trim Adjust for Mic Sensitivity

 Threshold Adjust

 Control Port 10kΩ External Pot, Removable 2 Position Captive

 Screw 3.5mm Spacing

 12V DC to power wall controller LED, Removable 2 Position Captive

 Screw 3.5mm Spacing

 Connects to optional WPD-MIX42RT wall controller, Removable 4

 Position Captive Screw 3.5mm Spacing

 Note: Juke Box Override will not work when Remote Wall Plate is activated.



1601 Jack McKay Blvd. • Ennis, Texas 75119 U.S.A. Telephone: 800.876.3333 • Fax: 800.765.3435

# Owner's Manual

## TSD-MIX42RT 4x2 Mic/Line Mixer



#### **Dip Switch Function**

Dip Switch # 1 Dip Switch # 2 Dip Switch # 3 Dip Switch # 4 Dip Switch # 5 Dip Switch # 5 Dip Switch # 7 Dip Switch # 7 Dip Switch # 8 Dip Switch # 9 Dip Switch # 10 Dip Switch # 12

#### Indicators

Input Signal Input Peak Limiter Power

## Electrical

Frequency Response THD Signal to Noise

#### **Output Limiter**

### Mounting

Velcro™ Brackets TSD-RMK Cable Retainer

### **Power Requirements**

Voltage Power Consumption Current Power Consumption VA Watts

Dimensions

Weight

### Accessories

WPD-MIX42RT TSD 24VDC TSD-RMK

# Safety and Certifications

External Power Supply

24VDC Phantom Power Input 4 Mic or Line Select Low Cut Filter 125Hz Juke Box Override Juke Box Override Mute Hold Delay Input 3 Mute Receive Input 1 Mute Receive Outputs Left and Right Stereo/Mono Remote Level Master/Inputs 1,2,3 Wall Plate Activation Not Used

Green, 25mV ON Threshold, Qty 1 Red, -3dB Before Clip, Qty 1 Red, Limiter Activation, Qty 1 Blue, Qty 1

20Hz - 20kHz (±1dB) .06% @ 1kHz Line to Line: 85dBV Mic to Line: 78dBV Threshold Adjust 50mV Minimum Output to No Limit

Industrial-Grade, Included Qty 2, Included Optional 1 RU Rack Mount Panel (Supports 4 TSD Units) Qty 2, Included

24VDC, 60mA 60mA 1.4W

H 1.5" (39mm) x W 4" (101mm) x D 2.5" (70mm)

13oz, .3kg

Wall Controller Power Supply 1RU Rack Panel

cUL, CE, RoHS, TUV



1601 Jack McKay Blvd. • Ennis, Texas 75119 U.S.A. Telephone: 800.876.3333 • Fax: 800.765.3435

AtlasSound.com

Specifications are subject to change without notice.



# **Limited Warranty**

All products manufactured by Atlas Sound are warranted to the original dealer/installer, industrial or commercial purchaser to be free from defects in material and workmanship and to be in compliance with our published specifications, if any. This warranty shall extend from the date of purchase for a period of three years on all Atlas Sound products, including SOUNDOLIER brand, and ATLAS SOUND brand products except as follows: one year on electronics and control systems; one year on replacement parts; and one year on Musician Series stands and related accessories. Additionally, fuses and lamps carry no warranty. Atlas Sound will solely at its discretion, replace at no charge or repair free of charge defective parts or products when the product has been applied and used in accordance with our published operation and installation instructions. We will not be responsible for defects caused by improper storage, misuse (including failure to provide reasonable and necessary maintenance), accident, abnormal atmospheres, water immersion, lightning discharge, or malfunctions when products have been modified or operated in excess of rated power, altered, serviced or installed in other than a workman like manner. The original sales invoice should be retained as evidence of purchase under the terms of this warranty. All warranty returns must comply with our returns policy set forth below. When products returned to Atlas Sound do not qualify for repair or replacement under our warranty, repairs may be performed at prevailing costs for material and labor unless there is included with the returned product(s) a written request for an estimate of repair costs before any nonwarranty work is performed. In the event of replacement or upon completion of repairs, return shipment will be made with the transportation charges collect.

EXCEPT TO THE EXTENT THAT APPLICABLE LAW PREVENTS THE LIMITATION OF CONSEQUENTIAL DAMAGES FOR PERSONAL INJURY, ATLAS SOUND SHALL NOT BE LIABLE IN TORT OR CONTRACT FOR ANY DIRECT, CONSEQUENTIAL OR INCIDENTAL LOSS OR DAMAGE ARISING OUT OF THE INSTALLATION, USE OR INABILITY TO USE THE PRODUCTS. THE ABOVE WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES INCLUDING BUT NOT LIMITED TO WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

Atlas Sound does not assume, or does it authorize any other person to assume or extend on its behalf, any other warranty, obligation, or liability. This warranty gives you specific legal rights and you may have other rights which vary from state to state.

# Service

Should your Atlas TSD require service, please contact the Atlas Sound warranty department at 1-877-689-8055, ext. 1274 to obtain an RA number.


Atlas Sound Tech Support can be reached at 1-800-876-3333.

Visit our website at www.AtlasSound.com to see other Atlas products

@2012 Atlas Sound L.P. All rights reserved. Atlas Sound is a trademark of Atlas Sound L.P. All other trademarks are the property of their respective owners. ATS004403 RevC 10/12



1601 Jack McKay Blvd. • Ennis, Texas 75119 U.S.A. Telephone: 800.876.3333 • Fax: 800.765.3435

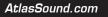

- 12 -Specifications are subject to change without notice.