

Kramer Electronics, Ltd.



USER MANUAL

Model:

VS-41H

4x1 HDMI Switcher

Contents

| | | |
|----------|---|-----------|
| 1 | Introduction | 1 |
| 2 | Getting Started | 1 |
| 2.1 | Quick Start | 2 |
| 3 | Overview | 3 |
| 3.1 | Defining EDID | 3 |
| 3.2 | About HDMI | 4 |
| 3.3 | About HDCP | 5 |
| 3.4 | Recommendations for Best Performance | 5 |
| 4 | Your VS-41H 4x1 Switcher | 5 |
| 5 | Installing the VS-41H in a Rack | 8 |
| 6 | Connecting a VS-41H 4x1 HDMI Switcher | 9 |
| 7 | Operating the VS-41H | 11 |
| 7.1 | The PC and DVD Modes | 11 |
| 7.2 | Setting the EDID | 12 |
| 7.2.1 | Acquiring / Changing the EDID | 12 |
| 7.2.2 | Resetting the Default EDID | 12 |
| 7.3 | Connecting a PC | 13 |
| 7.4 | Controlling the VS-41H via the ETHERNET Port | 13 |
| 7.4.1 | Connecting the ETHERNET Port directly to a PC (Crossover Cable) | 13 |
| 7.4.2 | Connecting the ETHERNET Port via a Network Hub (Straight-Through Cable) | 14 |
| 7.4.3 | Control Configuration via the Ethernet Port | 15 |
| 8 | Technical Specifications | 15 |
| 9 | Kramer Protocol 2000 | 16 |

Figures

| | | |
|-----------|--|----|
| Figure 1: | VS-41H 4x1 HDMI Switcher | 6 |
| Figure 2: | Connecting a VS-41H 4x1 HDMI Switcher | 10 |
| Figure 3: | Local Area Connection Properties Window | 14 |
| Figure 4: | Internet Protocol (TCP/IP) Properties Window | 14 |

Tables

| | | |
|----------|--|----|
| Table 1: | VS-41H 4x1 HDMI Switcher Features | 7 |
| Table 2: | DVD Mode and PC Mode Characteristics | 12 |
| Table 3: | Technical Specifications of the VS-41H | 15 |
| Table 4: | Protocol Definitions | 16 |
| Table 5: | Instruction Codes for Protocol 2000 | 17 |

1 Introduction

Welcome to Kramer Electronics! Since 1981, Kramer Electronics has been providing a world of unique, creative, and affordable solutions to the vast range of problems that confront the video, audio, presentation, and broadcasting professional on a daily basis. In recent years, we have redesigned and upgraded most of our line, making the best even better! Our 1,000-plus different models now appear in 11 groups¹ that are clearly defined by function.

Thank you for purchasing your Kramer **VS-41H** *4x1 HDMI Switcher*.

Note, that the Kramer VS-41H is identical to the VS-41HDMI; just the name has changed replacing the suffix “HDMI” by “H” (according to the HDMI Guideline).

The **VS-41H** is ideal for conference room presentations and advertising applications, as well as for rental and staging. Each package includes the following items:

- **VS-41H** *4x1 HDMI Switcher*
- Power cord, rack “ears” and null-modem adapter
- Windows[®]-based Kramer control software² and Windows[®]-based Ethernet Configuration Manager and Virtual Serial Port Manager
- Kramer **RC-IR3** Infrared Remote Control Transmitter (including the required batteries and a separate user manual³)
- This user manual³

2 Getting Started

We recommend that you:

- Unpack the equipment carefully and save the original box and packaging materials for possible future shipment
- Review the contents of this user manual
- Use Kramer high performance high resolution cables⁴

1 GROUP 1: Distribution Amplifiers; GROUP 2: Switchers and Matrix Switchers; GROUP 3: Control Systems; GROUP 4: Format/Standards Converters; GROUP 5: Range Extenders and Repeaters; GROUP 6: Specialty AV Products; GROUP 7: Scan Converters and Scalers; GROUP 8: Cables and Connectors; GROUP 9: Room Connectivity; GROUP 10: Accessories and Rack Adapters; GROUP 11: Sierra Products


2 Downloadable from our Web site at <http://www.kramerelectronics.com>

3 Download up-to-date Kramer user manuals from our Web site at <http://www.kramerelectronics.com>

4 The complete list of Kramer cables is on our Web site at <http://www.kramerelectronics.com>

2.1 Quick Start

This quick start chart summarizes the basic setup and operation steps.

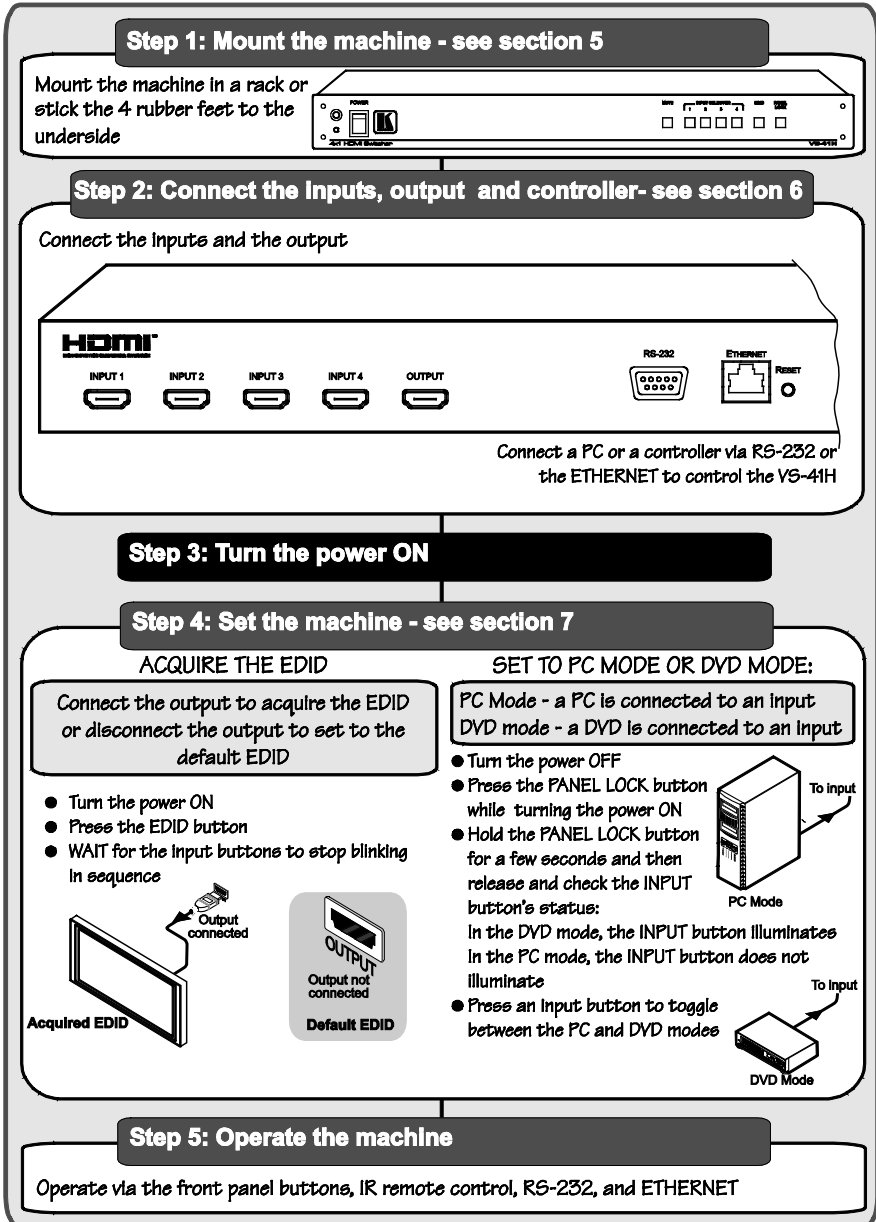

3 Overview

The **VS-41H** is a high-performance switcher for HDMI signals. It reclocks and equalizes the signal and switches one of the 4 inputs to a single HDMI output.

In particular, the **VS-41H** features:

- Support for up to 2.25Gbps bandwidth per graphic channel¹
- HDMI support – HDMI (V.1.4 with Deep Color, x.v.Color™, Lip Sync, HDMI Uncompressed Audio Channels, Dolby TrueHD, DTS-HD, CEC)
- HDCP support (High Definition Digital Content Protection)
- EDID pass-through that passes EDID/HDCP signals from source to display
- 3D pass-through
- Four input selector buttons
- A MUTE button to disconnect the output and a PANEL LOCK button to prevent unwanted tampering with the buttons on the front panel
- Installation in one vertical space of a standard 19” professional rack enclosure

Control the **VS-41H** using the front panel buttons, or remotely via:

- RS-232 serial commands transmitted by a touch screen system, PC, or other serial controller
- The Kramer Infrared remote control transmitter
- The ETHERNET

3.1 Defining EDID

The Extended Display Identification Data (EDID²) is a data-structure, provided by a display, to describe its capabilities to an HDMI source. The EDID enables the **VS-41H** to “know” what kind of monitor is connected to the output. The EDID includes the manufacturer’s name, the product type, the timing data supported by the display, the display size, luminance data and (for digital displays only) the pixel mapping data.

¹ Suitable for resolutions up to UXGA at 60Hz, and for all HD resolutions

² Defined by a standard published by the Video Electronics Standards Association (VESA)

3.2 About HDMI

High-Definition Multimedia Interface (HDMI) is an uncompressed all-digital¹ audio/video interface, widely supported in the entertainment and home cinema industry. It delivers the highest high-definition image and sound quality. Note that Kramer Electronics Limited is an HDMI Adopter and an HDCP Licensee.

In particular, HDMI:

- Provides a simple² interface between any audio/video source, such as a set-top box, DVD player, or A/V receiver and video monitor, such as a digital flat LCD / plasma television (DTV), over a single lengthy³ cable
- Supports standard, enhanced, high-definition video, and multi-channel digital audio⁴ on a single cable
- Transmits all ATSC HDTV standards and supports 8-channel digital audio, with bandwidth to spare to accommodate future enhancements and requirements
- Benefits consumers by providing superior, uncompressed digital video quality via a single cable⁵, and user-friendly connector
- Is backward-compatible with DVI (Digital Visual Interface)
- Supports two-way communication between the video source (such as a DVD player) and the digital television, enabling new functionality such as automatic configuration and one-button play

HDMI has the capacity to support existing high-definition video formats (720p, 1080i, and 1080p/60), as well as standard definition formats such as NTSC or PAL.

1 Ensuring an all-digital rendering of video without the losses associated with analog interfaces and their unnecessary digital-to-analog conversions

2 With video and multi-channel audio combined into a single cable, the cost, complexity, and confusion of multiple cables currently used in A/V systems is reduced

3 HDMI technology has been designed to use standard copper cable construction at up to 15m

4 HDMI supports multiple audio formats, from standard stereo to multi-channel surround-sound HDMI has the capacity to support Dolby 5.1 audio and high-resolution audio formats

5 HDMI provides the quality and functionality of a digital interface while also supporting uncompressed video formats in a simple, cost-effective manner

3.3 About HDCP

The High-Bandwidth Digital Content Protection (HDCP) standard¹, protects digital video and audio signals transmitted over DVI or HDMI connections between two HDCP-enabled devices to eliminate the reproduction of copyrighted material. To protect copyright holders (such as movie studios) from having their programs copied and shared, the HDCP standard provides for the secure and encrypted transmission of digital signals.

3.4 Recommendations for Best Performance

To achieve the best performance:

- Use only good quality connection cables² to avoid interference, deterioration in signal quality due to poor matching, and elevated noise levels (often associated with low quality cables).
- Avoid interference from neighboring electrical appliances that may adversely influence signal quality and position your Kramer **VS-41H** away from moisture, excessive sunlight and dust

4 Your VS-41H 4x1 Switcher

[Figure 1](#) and [Table 1](#) define the **VS-41H**.

¹ Developed by Intel

² Available from Kramer Electronics on our Web site at <http://www.kramerelectronics.com>

Your VS-41H 4x1 Switcher

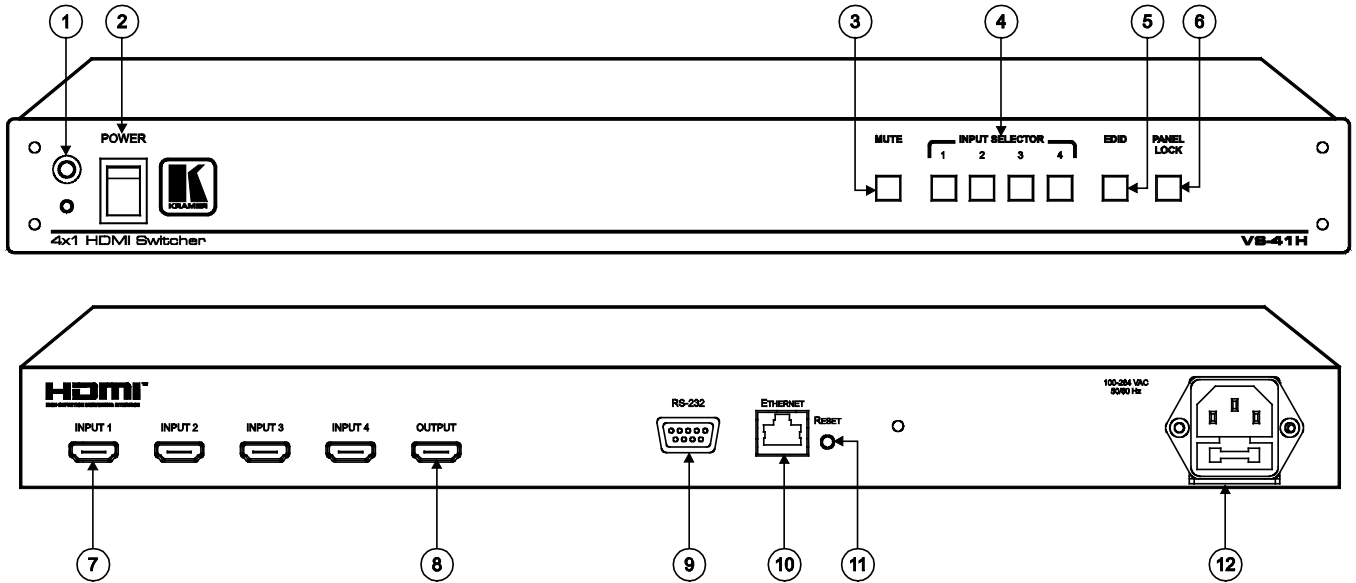


Figure 1: VS-41H 4x1 HDMI Switcher

Your VS-41H 4x1 Switcher

Table 1: VS-41H 4x1 HDMI Switcher Features

| # | Feature | Function |
|----|---------------------------|---|
| 1 | IR Receiver | The LED lights when receiving signals from the Infrared remote control transmitter |
| 2 | POWER Switch | Illuminated switch for turning the unit ON or OFF |
| 3 | MUTE Button | Press to toggle disconnecting the output |
| 4 | INPUT SELECTOR Buttons | Press an INPUT button to select an input (from 1 to 4) |
| 5 | EDID Button ¹ | Press to acquire the EDID |
| 6 | PANEL LOCK Button | Press to toggle disengaging the front panel buttons and to set to the PC/DVD mode |
| 7 | INPUT HDMI Connectors | Connect to the HDMI sources (from 1 to 4) |
| 8 | OUTPUT HDMI Connector | Connect to the HDMI acceptor |
| 9 | RS-232 9-pin D-sub Port | Connects to the PC or the RS-232 Remote Controller |
| 10 | ETHERNET Connector | Connects to the PC or other Ethernet Controller |
| 11 | RESET Button | Press the ETHERNET factory reset button to reset to the factory default definitions ² : IP number – 192.168.1.39 Mask – 255.255.255.0 Gateway – 192.168.1.1 |
| 12 | Power Connector with Fuse | AC connector enabling power supply to the unit |

¹ Illuminates when configuring the EDID

² First disconnect the power cord and then connect it again while pressing the RESET button. The unit will power up and load its memory with the factory default definitions.

5 Installing the VS-41H in a Rack

This section provides instructions for rack mounting the unit.

Before Installing in a Rack

Before installing in a rack, be sure that the environment is within the recommended range:

| | |
|-----------------------------|--------------------------------|
| Operating temperature range | +5° to +45° C (41° to 113° F) |
| Operating humidity range | 10 to 90% RHL, non-condensing |
| Storage temperature range | -20° to +70° C (-4° to 158° F) |
| Storage humidity range | 5 to 95% RHL, non-condensing |



CAUTION!


When installing on a 19" rack, avoid hazards by taking care that:

1. It is located within the recommended environmental conditions, as the operating ambient temperature of a closed or multi unit rack assembly may exceed the room ambient temperature.
2. Once rack mounted, enough air will still flow around the machine.
3. The machine is placed straight in the correct horizontal position.
4. You do not overload the circuit(s). When connecting the machine to the supply circuit, overloading the circuits might have a detrimental effect on overcurrent protection and supply wiring. Refer to the appropriate nameplate ratings for information. For example, for fuse replacement, see the value printed on the product label.
5. The machine is earthed (grounded) in a reliable way and is connected only to an electricity socket with grounding. Pay particular attention to situations where electricity is supplied indirectly (when the power cord is not plugged directly into the socket in the wall), for example, when using an extension cable or a power strip, and that you use only the power cord that is supplied with the machine.

How to Rack Mount

To rack-mount a machine:

1. Attach both ear brackets to the machine. To do so, remove the screws from each side of the machine (3 on each side), and replace those screws through the ear brackets.

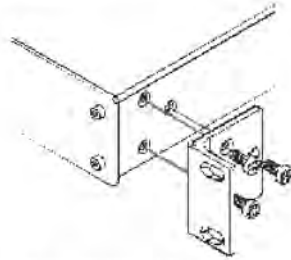

2. Place the ears of the machine against the rack rails, and insert the proper screws (not provided) through each of the four holes in the rack ears.

Note:

- In some models, the front panel may feature built-in rack ears
- Detachable rack ears can be removed for desktop use
- Always mount the machine in the rack before you attach any cables or connect the machine to the power
- If you are using a Kramer rack adapter kit (for a machine that is not 19"), see the Rack Adapters user manual for installation instructions available from: <http://www.kramerlectronics.com>

6 Connecting a VS-41H 4x1 HDMI Switcher

To connect the **VS-41H 4x1 HDMI Switcher** (as illustrated in [Figure 2](#)), do the following¹:

1. If required:
 - Set the appropriate INPUTS to the DVD mode (see section [7.1](#))
 - Acquire the EDID (see section [7.2](#))
2. Connect² the HDMI sources as follows³:
 - A multimedia player to INPUT 1
 - A set top box to INPUT 2
 - A DVD player to INPUT 3
 - A DVD player to INPUT 4
3. Connect the OUTPUT HDMI connector to an HDMI acceptor (for example, a plasma display).
4. If required, connect a PC and/or controller to the RS-232 port (see section [7.3](#)) and/or the ETHERNET port (see section [7.4](#)).
5. Connect the power connector to the mains electricity (not shown in [Figure 2](#)).

Press an INPUT SELECTOR button (from 1 to 4) to choose which HDMI input to route to the output.

1 Switch OFF the power on each device before connecting it to your VS-41H. After connecting your VS-41H, switch on its power and then switch on the power on each device.

2 You do not have to connect all the HDMI sources.

3 Alternatively, you can connect a PC to any of the inputs and set those inputs to the PC mode (see section [7.1](#)).

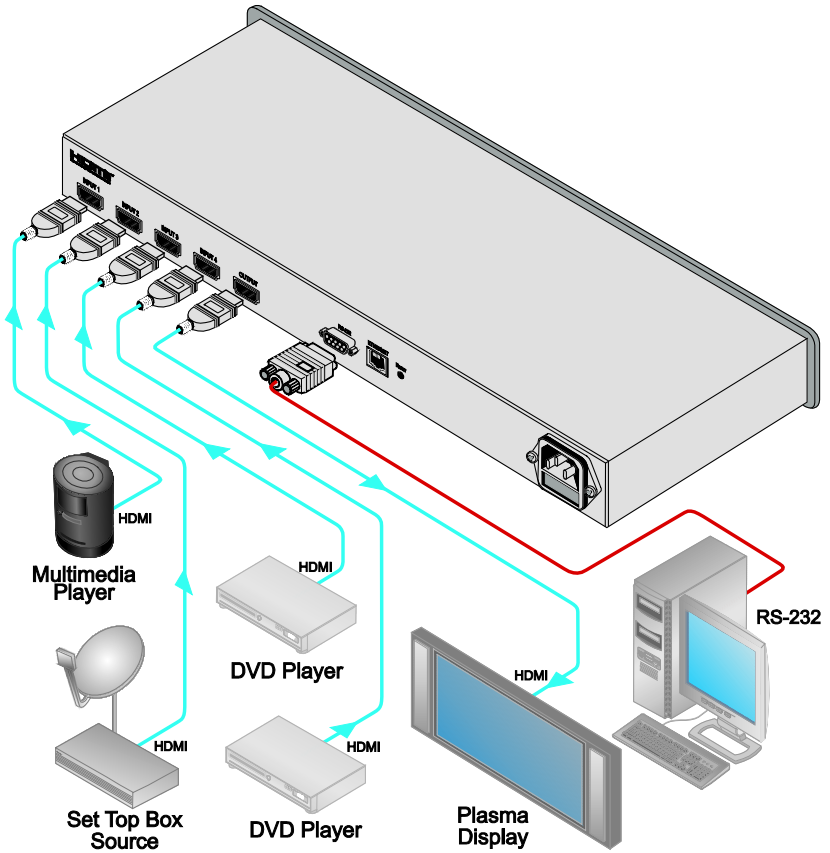


Figure 2: Connecting a VS-41H 4x1 HDMI Switcher

7 Operating the VS-41H

This section describes:

- The PC mode and the DVD mode (see section [7.1](#))
- How to acquire the EDID (see section [7.2](#))
- How to control the machine via RS-232 (see section [7.3](#))
- How to control the machine via the ETHERNET port (see section [7.4](#))

7.1 The PC and DVD Modes

The **VS-41H** has two operation modes that are specific per input: the PC mode¹ and the DVD mode:

- The PC mode is used when connecting a computer or several computers to one or more of the inputs via a DVI-to-HDMI converter cable²
- The DVD mode is used when connecting a DVD or several DVDs to the inputs

When in the PC mode, the input has access to the EDID (default or acquired) to prevent the computer from resetting if an output is not connected. In the DVD mode, the EDID of the connected output is available only when the input to which the DVD is connected, is switched to the output.

The PC mode and the DVD mode can be applied to a single unit or to several inputs. For example, if you want to connect a computer to INPUT 1, another computer to INPUT 2, and DVD machines to INPUT 3 and INPUT 4, set INPUT 1 and INPUT 2 to the PC mode and INPUT 3 and INPUT 4 to the DVD mode.

To set the inputs to either the PC or DVD mode, do the following:

1. Turn the POWER off.
2. Press the PANEL LOCK button while turning the POWER on again.
3. Keep pressing and holding the PANEL LOCK button for a few seconds and then release it.

The LOCK button blinks.

If an input button illuminates, this indicates that that input is set to the DVD mode.

¹ The default

² For example, the Kramer HDMI-DVI Gold Plated Cable in various lengths (3", 6", 10" and 15")

If an input button is not illuminated, this indicates that that input is set to the PC mode.

4. Toggle between the PC mode (input button not illuminated) and the DVD mode (input button illuminated) by pressing that input.
5. Press the PANEL LOCK button to exit this mode.
6. You can connect a computer to the input(s) that is set to the PC mode and a DVD to the input(s) that is set to the DVD mode.

[Table 2](#) summarizes the differences between the PC mode and the DVD mode:

Table 2: DVD Mode and PC Mode Characteristics

| PC Mode | DVD Mode |
|--|--|
| The input is connected to a computer | The input is connected to a multimedia application, such as a DVD, a set top box and so on |
| The EDID is available at all times (to prevent computer reset) | The EDID is available only when that input is connected to an output |
| The input EDID source is the default EDID or an acquired EDID (see section 7.2) | The input EDID source is acquired directly from the connected output |

7.2 Setting the EDID

You can acquire or change the EDID (see section [7.2.1](#)) or reset the machine to the default EDID (see section [7.2.2](#)).

7.2.1 Acquiring / Changing the EDID

You can work with the default EDID or acquire or change an EDID via the connected output. Use the EDID button to acquire the output EDID information.

To acquire or change the EDID of a new output display:

1. Connect the power supply.
2. Connect the new output display device.
3. Press the EDID button.

The INPUT buttons blink in sequence until the EDID is acquired.

7.2.2 Resetting the Default EDID

To reset the default EDID, disconnect the output and repeat the steps in section [7.2.1](#).

7.3 Connecting a PC

You can connect to the **VS-41H** via an RS-232 connection using, for example, a PC. Note that a null-modem adapter/connection is not required.

To connect to the **VS-41H** via RS-232:

- Connect the RS-232 9-pin D-sub rear panel port on the **VS-41H** unit via a 9-wire straight cable (only pin 2 to pin 2, pin 3 to pin 3, and pin 5 to pin 5 need to be connected) to the RS-232 9-pin D-sub port on your PC

7.4 Controlling the VS-41H via the ETHERNET Port

You can connect the **VS-41H** via the Ethernet, using a crossover cable (see section [7.4.1](#)) for direct connection to the PC or a straight through cable (see section [7.4.2](#)) for connection via a network hub or network router¹.

7.4.1 Connecting the ETHERNET Port directly to a PC (Crossover Cable)

You can connect the Ethernet port of the **VS-41H** to the Ethernet port on your PC, via a crossover cable with RJ-45 connectors.

This type of connection is recommended for identification of the factory default IP Address of the **VS-41H** during the initial configuration

After connecting the Ethernet port, configure your PC as follows:

1. Right-click the My Network Places icon on your desktop.
2. Select **Properties**.
3. Right-click Local Area Connection Properties.
4. Select **Properties**.
The Local Area Connection Properties window appears.
5. Select the Internet Protocol (TCP/IP) and click the **Properties** Button (see [Figure 3](#)).

¹ After connecting the Ethernet port, you have to install and configure your Ethernet Port. For detailed instructions, see the "Ethernet Configuration (FC-11) guide pdf" file in the technical support section on our Web site:

<http://www.kramerelectronics.com>

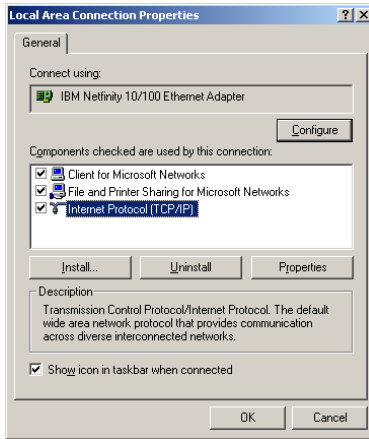


Figure 3: Local Area Connection Properties Window

6. Select Use the following IP Address, and fill in the details as shown in [Figure 4](#).
7. Click **OK**.

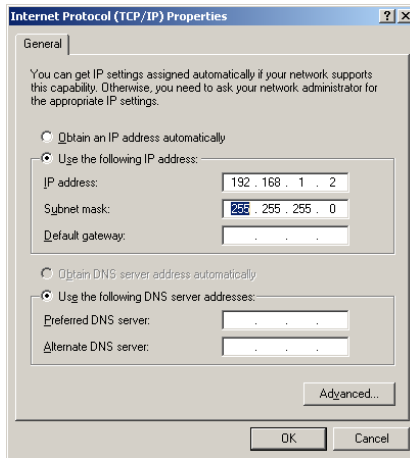


Figure 4: Internet Protocol (TCP/IP) Properties Window

7.4.2 Connecting the ETHERNET Port via a Network Hub (Straight-Through Cable)

You can connect the Ethernet port of the **VS-41H** to the Ethernet port on a network hub or network router, via a straight through cable with RJ-45 connectors.

7.4.3 Control Configuration via the Ethernet Port

To control several units via the Ethernet, connect the unit via the Ethernet port to the LAN port of your PC. Use your PC initially to configure the settings (see [Section 7.4](#)).

8 Technical Specifications

[Table 3](#) includes the technical specifications:

Table 3: Technical Specifications¹ of the VS-41H

| | |
|--------------------------------|--|
| INPUTS: | 4 HDMI connectors |
| OUTPUT: | 1 HDMI connector |
| BANDWIDTH: | Supports up to 2.25Gbps bandwidth per graphic channel |
| COMPLIANCE WITH HDMI STANDARD: | Supports HDMI and HDCP |
| RESOLUTION: | Up to UXGA; 1080p |
| POWER SOURCE: | 100–240V AC; 50/60Hz, 10VA |
| CONTROLS: | Front panel buttons, infrared remote control transmitter, RS-232, Ethernet |
| DIMENSIONS: | 19" x 7" x 1U (W, D, H) |
| WEIGHT: | 2.5kg (5.5lbs) approx. |
| ACCESSORIES: | Power cord, rack "ears" and IR remote control |
| OPTIONS: | Kramer HDMI cables ² |

¹ Specifications are subject to change without notice

² For best results, use Kramer cables such as the C-HM/HM series, the C-HM/DM series and/or our HDMI over fiber optics C-FOHM/FOHM series

9 Kramer Protocol 2000

The **VS-41H** is compatible with Kramer's Protocol 2000¹ (version 0.50) (below). This RS-232/RS-485 communication protocol uses four bytes of information as defined below. For RS-232, a null-modem connection between the machine and controller is used. The default data rate is 9600 baud, with no parity, 8 data bits and 1 stop bit.

Table 4: Protocol Definitions

| MSB | | | | | | | | LSB | |
|----------|-----|----------------|----|----|-------------|----|----|-----|--|
| | | DESTINATION | | | INSTRUCTION | | | | |
| 0 | D | N5 | N4 | N3 | N2 | N1 | N0 | | |
| 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 | | |
| 1st byte | | | | | | | | | |
| | | INPUT | | | | | | | |
| 1 | 6 | I5 | I4 | I3 | I2 | I1 | I0 | | |
| 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 | | |
| 2nd byte | | | | | | | | | |
| | | OUTPUT | | | | | | | |
| 1 | O6 | O5 | O4 | O3 | O2 | O1 | O0 | | |
| 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 | | |
| 3rd byte | | | | | | | | | |
| | | MACHINE NUMBER | | | | | | | |
| 1 | OVR | X | M4 | M3 | M2 | M1 | M0 | | |
| 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 | | |
| 4th byte | | | | | | | | | |

1st BYTE: Bit 7 – Defined as 0

D – “DESTINATION”: 0 - for sending information to the switchers (from the PC);

1 - for sending to the PC (from the switcher)

N5 N0 – “INSTRUCTION”

The function that is to be performed by the switcher(s) is defined by the INSTRUCTION (6 bits) Similarly, if a function is performed via the machine's keyboard, then these bits are set with the INSTRUCTION NO, which was performed. The instruction codes are defined according to the table below (INSTRUCTION NO is the value to be set for N5 N0)

2nd BYTE: Bit 7 – Defined as 1

I6 I0 – “INPUT”

When switching (ie instruction codes 1 and 2), the INPUT (7 bits) is set as the input number which is to be switched. Similarly, if switching is done via the machine's front-panel, then these bits are set with the INPUT NUMBER which was switched. For other operations, these bits are defined according to the table

3rd BYTE: Bit 7 – Defined as 1

O6 O0 – “OUTPUT”

When switching (ie instruction codes 1 and 2), the OUTPUT (7 bits) is set as the output number which is to be switched. Similarly, if switching is done via the machine's front-panel, then these bits are set with the OUTPUT NUMBER which was switched. For other operations, these bits are defined according to the table

4th BYTE: Bit 7 – Defined as 1

Bit 5 – Don't care

OVR – Machine number override

M4 M0 – MACHINE NUMBER

Used to address machines in a system via their machine numbers. When several machines are controlled from a single serial port, they are usually configured together with each machine having an individual machine number. If the OVR bit is set, then all machine numbers will accept (implement) the command, and the addressed machine will reply

¹ You can download our user-friendly “Software for Calculating Hex Codes for Protocol 2000” from our Web site:

<http://www.kramerelectronics.com>

For a single machine controlled via the serial port, always set M4 M0 = 1, and make sure that the machine itself is configured as MACHINE NUMBER = 1

Table 5: Instruction Codes for Protocol 2000

Note: All values in the table are decimal, unless otherwise stated

| INSTRUCTION | | DEFINITION FOR SPECIFIC INSTRUCTION | | NOTE |
|-------------|-------------------------------------|---|--|-------|
| # | DESCRIPTION | INPUT | OUTPUT | |
| 0 | RESET VIDEO | 0 | 0 | 1 |
| 1 | SWITCH VIDEO | Set equal to video input which is to be switched (0 = disconnect) | Set equal to video output which is to be switched (0 = to all the outputs) | 2, 15 |
| 5 | REQUEST STATUS OF A VIDEO OUTPUT | Set as SETUP # | Equal to output number whose status is reqd | 4, 3 |
| 16 | ERROR / BUSY | For invalid / valid input (i.e. OUTPUT byte = 4 or OUTPUT byte = 5), This byte is set as the input # | 0 - error 1 - invalid instruction 2 - out of range 3 - machine busy 4 - invalid input 5 - valid input | 9, 25 |
| 24 | INCREASE / DECREASE AUDIO PARAMETER | Equal to input / output number whose parameter is to be increased / decreased (0 = all) | 0 - increase output 1 - decrease output 2 - increase left output 3 - decrease left output 4 - increase right output 5 - decrease right output 6 - increase input 7 - decrease input 8 - increase left input 9 - decrease left input 10 - increase right input 11 - decrease right input | 24 |
| 30 | LOCK FRONT PANEL | 0 - Panel unlocked 1 - Panel locked | 0 | 2 |
| 61 | IDENTIFY MACHINE | 1 - video machine name 2 - audio machine name 3 - video software version 4 - audio software version 5 - RS422 controller name 6 - RS422 controller version 7 - remote control name 8 - remote software version 9 - Protocol 2000 revision | 0 - Request first 4 digits 1 - Request first suffix 2 - Request second suffix 3 - Request third suffix 10 - Request first prefix 11 - Request second prefix 12 - Request third prefix | 13 |
| 62 | DEFINE MACHINE | 1 - number of inputs 2 - number of outputs 3 - number of setups | 1 - for video 2 - for audio 3 - for SDI 4 - for remote panel 5 - for RS-422 controller | 14 |

NOTES on the above table:

NOTE 1 - When the master switcher is reset, (e.g. when it is turned on), the reset code is sent to the PC. If this code is sent to the switchers, it will reset according to the present power-down settings.

NOTE 5 – For the OUTPUT byte set as 6, the VIS source is the input selected using the OUTPUT byte. Similarly, for the OUTPUT byte set as 7, the VIS source is the output selected using the OUTPUT byte. Note also, that on some machines the sync source is not software selectable, but is selected using switches, jumpers, etc!

NOTE 16 - The reply to the “REQUEST WHETHER PANEL IS LOCKED” is as in NOTE 4 above, except that here the OUTPUT is assigned with the value 0 if the panel is unlocked, or 1 if it is locked.

LIMITED WARRANTY

Kramer Electronics (hereafter *Kramer*) warrants this product free from defects in material and workmanship under the following terms

HOW LONG IS THE WARRANTY

Labor and parts are warranted for three years from the date of the first customer purchase

WHO IS PROTECTED?

Only the first purchase customer may enforce this warranty

WHAT IS COVERED AND WHAT IS NOT COVERED

Except as below, this warranty covers all defects in material or workmanship in this product. The following are not covered by the warranty:

- 1 Any product which is not distributed by Kramer, or which is not purchased from an authorized Kramer dealer. If you are uncertain as to whether a dealer is authorized, please contact Kramer at one of the agents listed in the Web site www.kramerelectronics.com
- 2 Any product, on which the serial number has been defaced, modified or removed, or on which the WARRANTY VOID IF TAMPERED sticker has been torn, reattached, removed or otherwise interfered with
- 3 Damage, deterioration or malfunction resulting from:
 - i) Accident, misuse, abuse, neglect, fire, water, lightning or other acts of nature
 - ii) Product modification, or failure to follow instructions supplied with the product
 - iii) Repair or attempted repair by anyone not authorized by Kramer
 - iv) Any shipment of the product (claims must be presented to the carrier)
 - v) Removal or installation of the product
 - vi) Any other cause, which does not relate to a product defect
 - vii) Cartons, equipment enclosures, cables or accessories used in conjunction with the product

WHAT WE WILL PAY FOR AND WHAT WE WILL NOT PAY FOR

We will pay labor and material expenses for covered items. We will not pay for the following:

- 1 Removal or installation charges
- 2 Costs of initial technical adjustments (set-up), including adjustment of user controls or programming. These costs are the responsibility of the Kramer dealer from whom the product was purchased
- 3 Shipping charges

HOW YOU CAN GET WARRANTY SERVICE

- 1 To obtain service on your product, you must take or ship it prepaid to any authorized Kramer service center
- 2 Whenever warranty service is required, the original dated invoice (or a copy) must be presented as proof of warranty coverage, and should be included in any shipment of the product. Please also include in any mailing a contact name, company, address, and a description of the problem(s)
- 3 For the name of the nearest Kramer authorized service center, consult your authorized dealer

LIMITATION OF IMPLIED WARRANTIES

All implied warranties, including warranties of merchantability and fitness for a particular purpose, are limited in duration to the length of this warranty

EXCLUSION OF DAMAGES

The liability of Kramer for any effective products is limited to the repair or replacement of the product at our option. Kramer shall not be liable for:

- 1 Damage to other property caused by defects in this product, damages based upon inconvenience, loss of use of the product, loss of time, commercial loss; or:
- 2 Any other damages, whether incidental, consequential or otherwise. Some countries may not allow limitations on how long an implied warranty lasts and/or do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you

This warranty gives you specific legal rights, and you may also have other rights, which vary from place to place

NOTE: All products returned to Kramer for service must have prior approval. This may be obtained from your dealer.

This equipment has been tested to determine compliance with the requirements of:

- EN-50081: "Electromagnetic compatibility (EMC);
generic emission standard
Part 1: Residential, commercial and light industry"
- EN-50082: "Electromagnetic compatibility (EMC) generic immunity standard
Part 1: Residential, commercial and light industry environment"
- CFR-47: FCC* Rules and Regulations:
Part 15: "Radio frequency devices
Subpart B Unintentional radiators"

CAUTION!

☒ Servicing the machines can only be done by an authorized Kramer technician. Any user who makes changes or modifications to the unit without the expressed approval of the manufacturer will void user authority to operate the equipment.

☒ Use the supplied DC power supply to feed power to the machine.

☒ Please use recommended interconnection cables to connect the machine to other components.

* FCC and CE approved using STP cable (for twisted pair products)



For the latest information on our products and a list of Kramer distributors, visit our Web site: www.kramerelectronics.com, where updates to this user manual may be found. We welcome your questions, comments and feedback.



Caution

Safety Warning:

Disconnect the unit from the power supply before opening/servicing.



Kramer Electronics, Ltd.

Web site: www.kramerelectronics.com

E-mail: info@kramereel.com

P/N: 2900-000667 REV 2