



Scan for full manual

RC-306 Quick Start Guide


This guide helps you install and use your **RC-306** for the first time.

Go to www.kramerav.com/downloads/RC-306 to download the latest user manual and check if firmware upgrades are available.

Step 1: Check what's in the box


- ☒ **RC-306** Ethernet and K-NET Control Keypad
- ☒ 1 Button-cap remover (tweezers)
- ☒ Frame (or frame set) and faceplate
- ☒ 1 Set of button label sheets
- ☒ 1 Quick start guide
- ☒ 6 Button caps
- ☒ 1 Power adapter and cord

Step 2: Get to know your RC-306

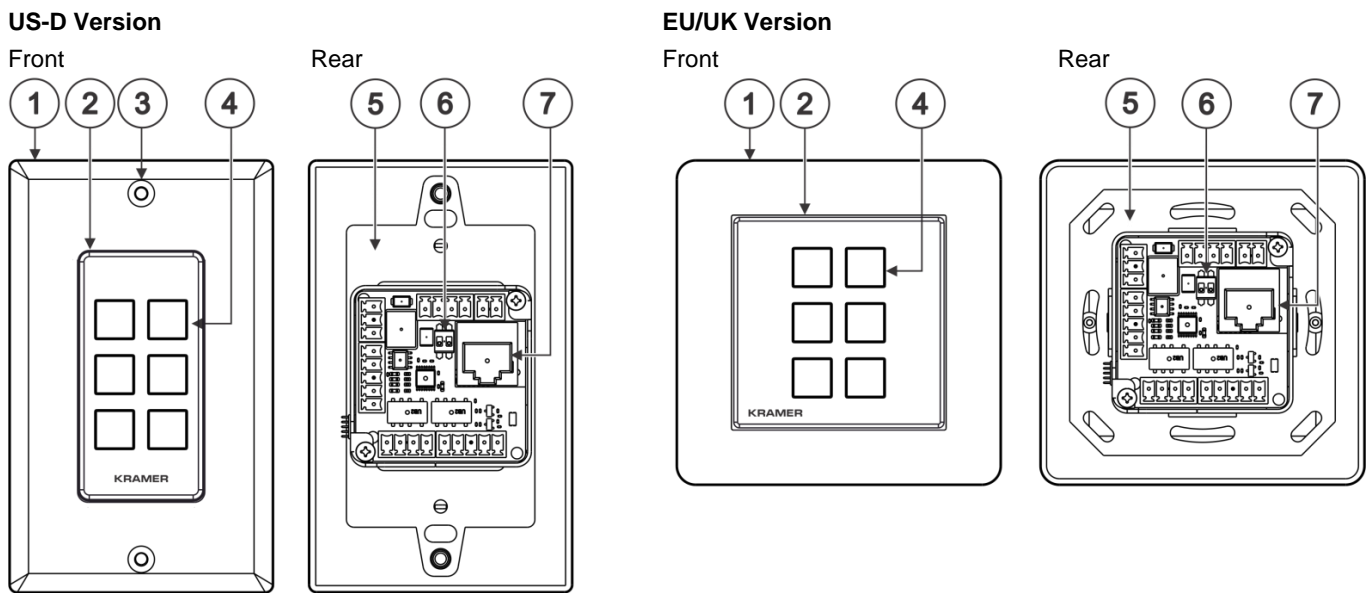

#	Feature	Function
1	Designed 1 Gang Wall Frame	For fixing the RC-306 to the wall. DECORA™ design frames are included in US-D models. DECORA™ is a registered trademark of Leviton Manufacturing Co., Inc.
2	Button Faceplate	Covers the button area after inserting the button labels.
3	Mounting Screw Holes	For securing the frame to the wall (US version only).
4	Configurable RGB Backlit Buttons (6)	Configured to control the room and A/V devices. Remove button covers to insert button labels (included).
5	Mounting Bracket	For fixing the frame to the in-wall box.
6	DIP-Switches	For K-NET: The last physical device on a K-NET bus must be terminated.
		For RS-485: The first and the last units on the RS-485 line should be terminated. Other units should remain unterminated.
		<div><div></div><div>DIP-switch 1 (to the left) K-NET Line Termination</div><div>DIP-switch 2 (to the right) RS-485 Line Termination</div></div>
		<div><div>Slide down (ON)</div><div>For line termination.</div><div>Slide up (OFF, default)</div><div>To leave bus unterminated.</div></div>
7	PoE ETHERNET RJ-45 Connector	Connect to a PoE-providing Ethernet LAN for control, firmware upgrade and for uploading the configuration.



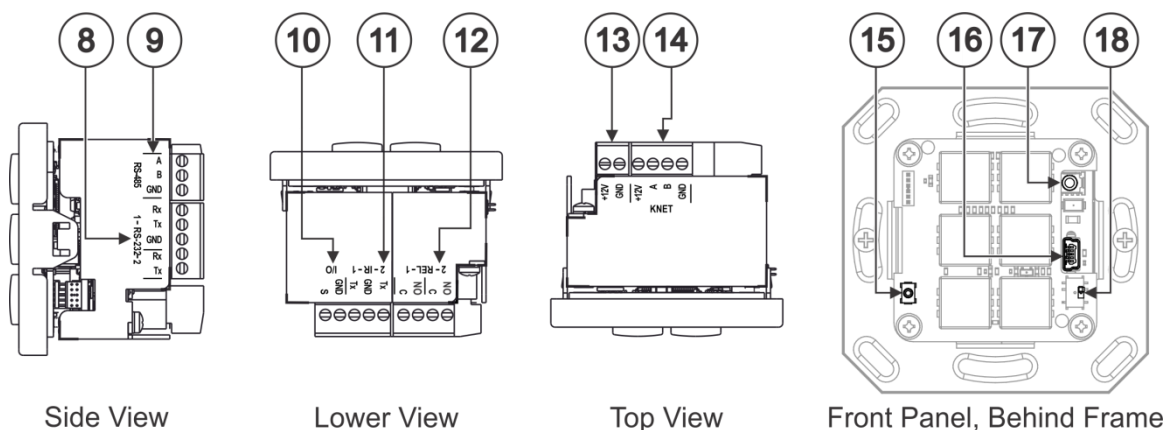

#	Feature	Function
8	RS-232 3-pin Terminal Block Connectors (Rx, Tx, GND)	Connect to RS-232 controlled devices (1 and 2, with common GND).
9	RS-485 3-pin Terminal Block Connector	Connect to the RS-485 terminal block connector on another device or PC.
10	I/O 2-pin Terminal Block Connector (GPIO, GND)	Connect to a sensor or device to be controlled, for example, a motion sensor. This port may be configured as a digital input, digital output, or analog input.
11	IR 2-pin Terminal Block Connectors (Tx, GND)	Connect to an IR emitter cable (1 and 2, with common GND).
12	REL 2-pin Terminal Block Connectors	Connect to a device to be controlled by relay. For example, a motorized projection-screen (1 and 2).
13	12V Power Supply 2-pin Terminal Block Connector (+12V, GND)	Connect to a power supply: Connect GND to GND and 12V to 12V. You can also power the unit via a PoE provider.
14	KNET 4-pin Terminal Block Connector	Connect the GND pin to the Ground connection; pin B (-) and pin A (+) are for RS-485, and the +12V pin is for powering the connected unit.
15	Factory Reset Button	Press while connecting the power and then release to reset the device to its default parameters. To access this button, you need to remove the Button Faceplate.
16	Mini USB Type B Port	Connect to your PC for firmware upgrade or for uploading the configuration. To access the USB port, you need to remove the Button Faceplate.
17	IR Sensor	For learning commands from an IR remote control transmitter.
18	Programing DIP-switch	For internal use.


Step 3: Configure RC-306

To configure RC-306 buttons via K-Config:

- Configure **RC-306** (go to www.kramerav.com/product/K-Config).
- Connect **RC-306** to a PC via the Ethernet or connect via the mini USB port.
- Sync the configuration to **RC-306**.


To insert a button label for the first time:

1. Cut out the appropriate button label from the button label sheets and place a label inside the button cover in the correct orientation (ledges are sideways).
2. Cover with the button cap in the correct orientation (with ledges sideways).

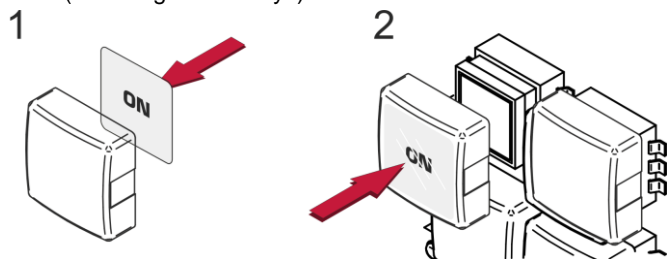

To replace a label:


1. Using the supplied tweezers, grip the button via the left and right ledges and remove the button cap.
2. Replace the label and cover the button with the button cap.

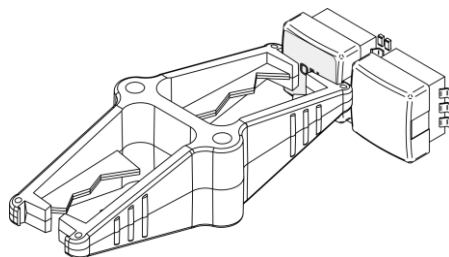

You do not have to detach the faceplate to remove a button.

Step 4: Connect the inputs and outputs


Always switch OFF the power on each device before connecting it to your **RC-306**. For best results, we recommend that you always use Kramer high-performance cables to connect AV equipment to **RC-306**.

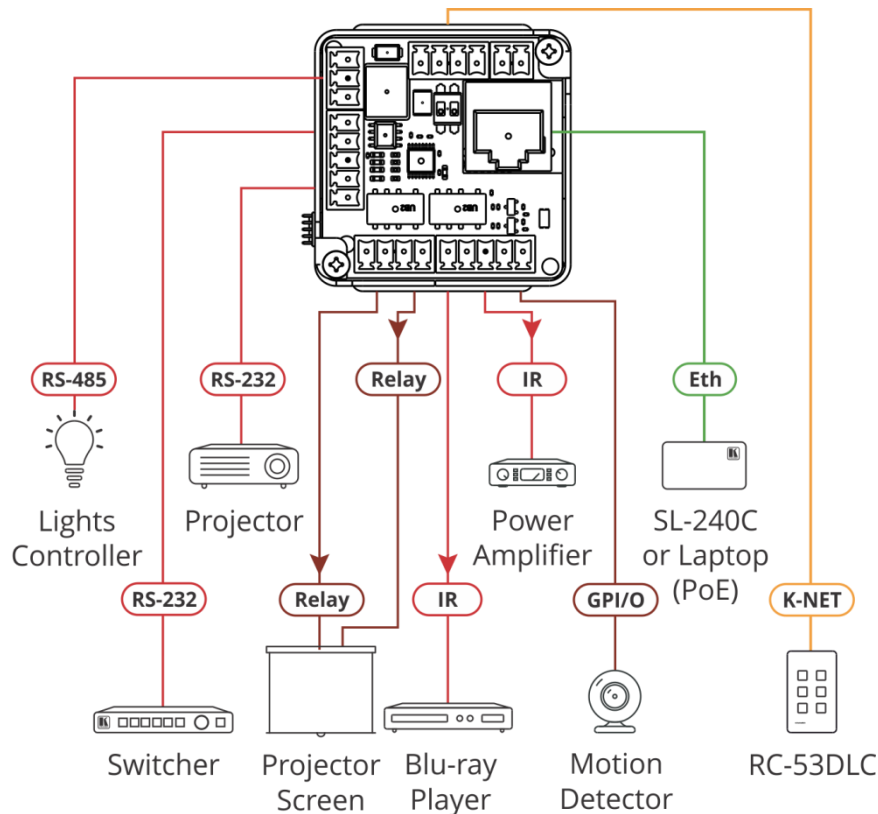


Step 5: Install RC-306

After connecting the ports, insert the device into the in-wall box and connect the parts as shown in the illustrations below:

European Version

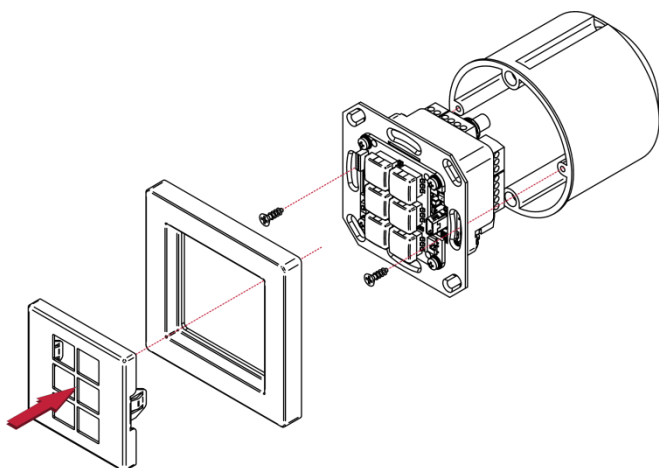

US-D Version

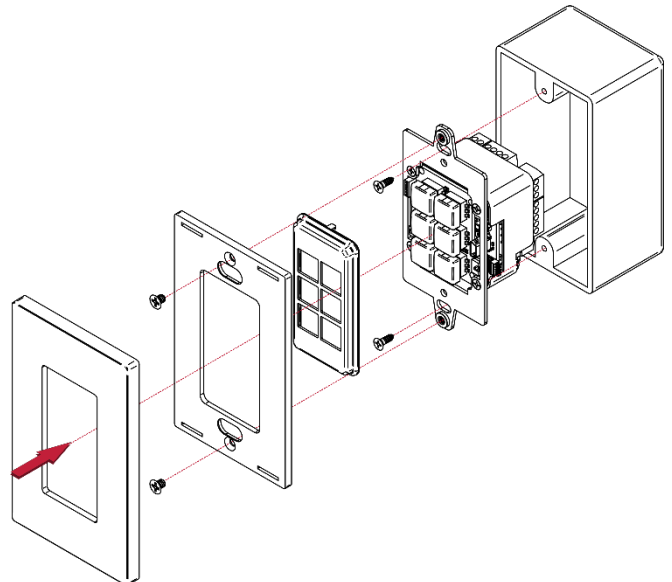

We recommend that you use any of the following standard 1 Gang in-wall junction boxes (or their equivalent):

- **US-D:** 1 Gang US electrical junction boxes.
- **EU:** 1 Gang in-wall junction box, with a cut-hole diameter of 68mm and depth that can fit in both the device and the connected cables (DIN 49073).
- **UK:** 1 Gang in-wall junction box, 75x75mm (W, H), and depth that can fit in both the device and the connected cables (BS 4662).

Step 6: Connect the power

If the device is not powered via PoE, connect the 12V DC power adapter to the **RC-306** and plug the adapter into the mains.

Safety Instructions



Caution: There are no operator serviceable parts inside the unit.
Warning: Disconnect the power and unplug the unit from the wall before installing.
See www.KramerAV.com for updated safety information.

Step 7: Operate RC-306

Operate **RC-306** via the front panel buttons, as a room controller keypad configured via **K-Config**.

Technical Specifications

Inputs	1 IR Sensor	For IR learning
Outputs	2 IR	On 3-pin terminal block connectors
Ports	2 RS-232	On 5-pin terminal block connectors
	1 RS-485	On a 3-pin terminal block connector
	1 K-NET	On a 4-pin terminal block connector
	2 Relays	On 2-pin terminal block connectors (30V DC, 1A)
	1 GPI/O	On a 2-pin terminal block connector
	1 Mini USB	On a female mini USB-B connector for configuration and firmware upgrade
	1 Ethernet	On an RJ-45 female connector for device configuration, control and firmware upgrade
Default IP Settings	DHCP Enabled	To connect to the RC-306 on first installation, you need to identify the IP address that has been automatically assigned to the RC-306
Power	Consumption	12V DC, 780mA
	Source	PoE or 12V DC, 2A with open DC head
Environmental Conditions	Operating Temperature	0° to +40°C (32° to 104°F)
	Storage Temperature	-40° to +70°C (-40° to 158°F)
	Humidity	10% to 90%, RHL non-condensing
Regulatory Compliance	Safety	CE
	Environmental	RoHs, WEEE
Enclosure	Size	1 Gang wall plate
	Cooling	Convection ventilation
General	Net Dimensions (W, D, H)	US-D: 7.9cm x 4.7cm x 12.4cm (3.1" x 1.9" x 4.9) EU: 8cm x 4.7cm x 8cm (3.1" x 1.9" x 3.1) UK: 8.6cm x 4.7cm x 8.6cm (3.4" x 1.9" x 3.4")
	Shipping Dimensions (W, D, H)	23.2cm x 13.6cm x 10cm (9.1" x 5.4" x 3.9")
	Net Weight	0.11kg (0.24lbs)
	Shipping Weight	0.38kg (0.84lbs) approx.
Accessories	Included	Special tweezers for removing button caps 1 Power adapter, 1 power cord US-D version: 2 US Frame sets and faceplates (1 in black and 1 in white) European version: 1 EU white frame, 1 UK white frame, 1 EU/UK white faceplate
	Optional	For optimum range and performance use the recommended USB, Ethernet, serial and IR Kramer cables available at www.kramerav.com/product/RC-306

Specifications are subject to change without notice at www.kramerav.com