

KRAMER



USER MANUAL

MODEL:

FC-54P

Ethernet Gateway - Serial/IR/GPIO/Relay



Scan for full manual

FC-54P Quick Start Guide


This guide helps you install and use your **FC-54P** for the first time.

Go to www.kramerav.com/downloads/FC-54P to download the latest user manual and check if firmware upgrades are available.


Step 1: Check what's in the box

- FC-54P** Ethernet Gateway
- 4 Rubber feet
- 1 Bracket set
- 1 Power supply (5V DC)
- 1 Quick start guide

Step 2: Get to know your FC-54P

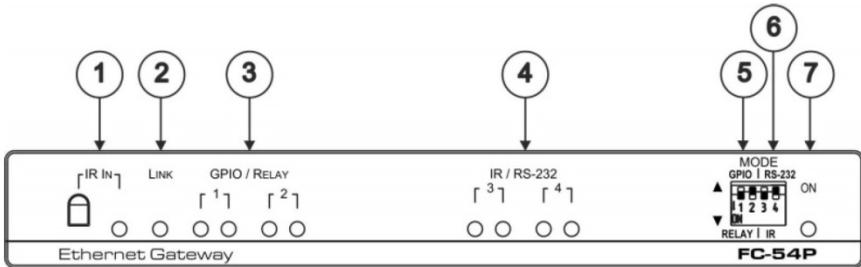

#	Feature	Function
1	IR IN Sensor and LED	Sensor for IR learning, LED lights during activity
2	LINK LED	Shows the Ethernet link is active
3	GPIO/RELAY 1/2 LED pairs	Blue LED pair shows the activity status of port 1 and port 2: When set as GPIO, the left LED of the pair indicates active IO-P1 and right LED indicates active IO-P2 When set as RELAY, the left LED of the pair indicates active Relay-P1 and right LED indicates active Relay-P2
4	IR/RS-232 3/4 LED pairs	Blue LED pair show the activity status of port 3 and port 4: When set as RS-232, the left LED of the pair indicates Tx and right LED indicates Rx When set as IR, the left LED of the pair indicates IR-P1 Tx and right LED indicates IR-P2 Tx
5	MODE DIP-switches (Port 1 and Port 2)	Switch up (off) for GPIO, switch down (on) for Relay The default setting is port 1 GPIO (up) and port 2 Relay (down)
6	MODE DIP-switches (Port 3 and Port 4)	Switch up for RS-232, switch down for IR The default setting is port 3 RS-232 (up) and port 4 IR (down)
7	ON LED	Lights green when the unit is on

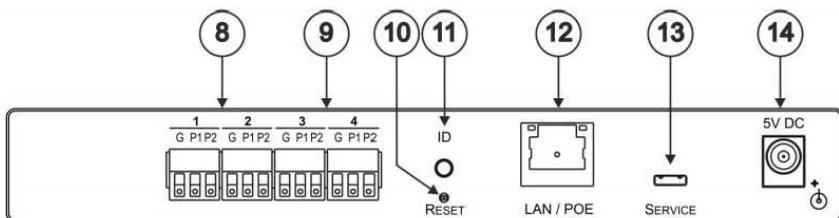

#	Feature	Function
8	Port 1/2 I/O 3-pin Terminal Block	Terminal block ports 1 and 2 connect to two GPIO ports or two Relays each
9	Port 3/4 I/O 3-pin Terminal Block	Terminal block ports 3 and 4 connect to one bidirectional RS-232 port (or RS-485, port 3 only) or two IR outputs each
10	RESET Button	Press and hold while cycling the device power to reset to factory default parameters
11	ID	Press to broadcast ID message for auto-discovery of the device
12	LAN/POE RJ-45 Connector	Connects to a PoE source (Power over Ethernet) for powering and an IP client or other controller, either directly or via a LAN
13	SERVICE Mini USB Connector	Connects to a USB power source for powering and to a PC for a local firmware upgrade
14	5V DC Connector	For extra power resiliency, connect to the 5V DC power supply, center pin positive. Not needed when the device is supplied power by PoE or a USB power source

FC-54P Function Table

Port IO Function	Terminal Block Connections			IO Port Default	TCP Default Port [P1/P2]	Blue Activity LED Pair	Comment
	G	P1	P2				
GPIO	Ground	IO ₁	IO ₂	Digital In x 2	5000	ON when IO ports are active	GPIO Analog in & Digital out via Web
Relay	Common	NO ₁	NO ₂	Normally Open x 2	5000	ON when Relay ports are active	
RS-232	Ground	Rx	Tx	9600,8,N,1	5001/2	Flashes when port is transmitting & receiving data	Other serial configurations via Web, including RS-485 for Port 3
IR	Ground	IR ₁	IR ₂		5000	ON when ports are transmitting IR data	

Key:

P1 / P2 – Port 1 / Port 2

IO₁ / IO₂ – GPIO Port 1 / GPIO Port 2

NO₁ / NO₂ – Normally open Port 1 / Normally open Port 2

Tx – Transmit, Rx – Receive; 9600, 8, N, 1 – 9600 baud, 8-bits, no parity, 1 stop bit

IR₁ / IR₂ – IR Port 1 / IR Port 2

Step 3: Install the FC-54P


You can mount this Kramer MegaTOOLS™ next to a USB power source behind an AV device, in the ceiling, on a desk top, wall or similar area. Install **FC-54P** using one of the following methods:

- Attach the rubber feet and place the unit on a flat surface.
- Fasten a bracket (included) on each side of the unit and attach it to a flat surface.
For more information go to www.kramerav.com/downloads/FC-54P
- Mount the unit in a rack using an optional **RK-T2B** rack adapter.



Step 4: Connect the inputs and outputs

Always switch OFF the power on each device before connecting it to your **FC-54P**. For best results, we recommend that you always use Kramer high-performance cables to connect controlled equipment to the **FC-54P**.

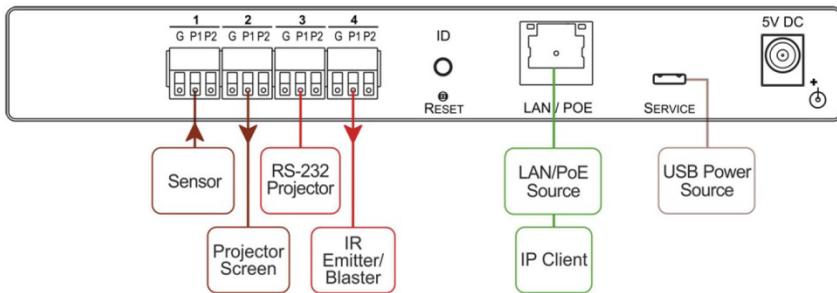

Step 5: Connect the power

Connect the PoE or a USB power source and/or a 5V DC power adapter to the **FC-54P** and plug it into the mains electricity.

Safety Instructions



- Caution:** There are no operator serviceable parts inside the unit.
Warning: Use only the Kramer Electronics power supply that is provided with the unit.
Warning: Disconnect the power and unplug the unit from the wall before installing.
See www.KramerAV.com for updated safety information.

Step 6: Configure and operate the FC-54P

Note: The **FC-54P** is shipped from the factory with DHCP enabled and a random IP address. To connect the **FC-54P** on first installation, you must identify what IP address has been automatically assigned to the **FC-54P**. To discover the IP address of **FC-54P**, use **K-LAN Configurator**, available for download from our website at www.kramerav.com.

To reset the device to its factory default settings:

1. Turn off the power to the device.
2. Press and hold the Reset button on the rear panel.
3. Turn on the power to the device while holding down the Reset button for a few seconds.
4. Release the button.
The device is reset to the factory default settings.

To browse the FC-54P Web UI (User Interface) on taking the device out of the box:

Use the default host name: **FC-54P-xxxx**, where **xxxx** are the last four digits of the serial number of the device.

To configure and operate the FC-54P:

1. Using the device Web UI, configure the control gateway:
 - Set DHCP or assign a static IP address
 - Associate IP port(s) with the relevant port(s)
 - Configure the relevant port parameters
2. Configure IP client connection port(s) on a Kramer control or any other control software application.
3. Set the control application to use the control gateway ports for sending and receiving control communication over the IP connections.

Contents

1	Introduction	1
2	Getting Started	2
2.1	Achieving the Best Performance	2
2.2	Safety Instructions	2
2.3	Recycling Kramer Products	3
3	Overview	4
4	Defining the FC-54P Ethernet Gateway - Serial/IR/GPIO/Relay	6
5	Performing Initial Configuration	8
5.1	Configuring the FC-54P Ethernet Gateway - Serial/IR/GPIO/Relay	8
5.2	Setting Up an Ethernet Connection on the PC	10
6	Connecting the FC-54P	11
6.1	Connecting via Ethernet	12
7	Remote Operation via the Web UI	17
7.1	Browsing the Web UI	17
7.2	Displaying Connected Clients	20
7.3	Setting Device Name and Time Functions	20
7.4	Setting Communication Parameters	22
7.5	Setting Serial Port Parameters	22
7.6	Setting GPIO Port Parameters	25
7.7	Setting Relay Port Status	29
7.8	Configuring IR Command Learning	30
7.9	Activating Security	32
7.10	Using the Logs Page	34
7.11	Kramer Information	35
8	Using FC-54P Operations	36
8.1	Using IR Learning	36
8.2	Resetting to the Factory Default Settings	37
8.3	Upgrading the Firmware	37
9	Technical Specifications	38
9.1	Data Handling Performance	39
9.2	Example Bandwidth Calculation	39
10	Default Parameters	40
11	Kramer Protocol 3000	41
11.1	Kramer Protocol 3000 – Syntax	42
11.2	Kramer Protocol 3000 – Command List	45
11.3	Kramer Protocol 3000 – Detailed Commands	46

Figures

Figure 1: FC-54P Controlling Devices Remotely Using K-Touch 3.0 over a LAN	5
Figure 2: FC-54P Ethernet Gateway - Serial/IR/GPIO/Relay	6
Figure 3: Connecting the FC-54P for Initial Configuration	8
Figure 4: Configuring a Remote Connection	10
Figure 5: Connecting the FC-54P Ethernet Gateway - Serial/IR/GPIO/Relay	11
Figure 6: Terminal Block Connections	12
Figure 7: Local Area Connection Properties Window	13
Figure 8: Internet Protocol Version 4 Properties Window	14
Figure 9: Internet Protocol Version 6 Properties Window	14
Figure 10: Internet Protocol Properties Window	15
Figure 11: General Info Page	18
Figure 12: Connected Clients Page	20
Figure 13: Device Settings Page	21
Figure 14: Communication Page	22
Figure 15: Serial Port Settings Page	23
Figure 16: Serial Port Settings Page – RS-485	24
Figure 17: Serial Port Settings Page – No Serial Ports Configured	24
Figure 18: GPIO Port Settings Page	25
Figure 19: GPIO Port Settings Page – No GPIO Ports Configured	26
Figure 20: GPIO Port Settings Page Digital IN	26
Figure 21: GPIO Port Settings Page Digital OUT	27
Figure 22: Digital Out Selection Warning Popup	27
Figure 23: GPIO Port Settings Page Analog IN	28
Figure 24: Relay Port Settings Page	29
Figure 25: IR Command Learner Page	31
Figure 26: Security Page	32
Figure 27: Security Confirmation Popup	32
Figure 28: Authentication Required Popup	33
Figure 29: Security Activated Page	33
Figure 30: Logs Page	34
Figure 31: About Us Page	35

1 Introduction

Welcome to Kramer Electronics! Since 1981, Kramer Electronics has been providing a world of unique, creative, and affordable solutions to the vast range of problems that confront video, audio, presentation, and broadcasting professionals on a daily basis. In recent years, we have redesigned and upgraded most of our line, making the best even better!

Our 1,000-plus different models now appear in 14 groups that are clearly defined by function: GROUP 1: Distribution Amplifiers; GROUP 2: Switchers and Routers; GROUP 3: Control Systems; GROUP 4: Format/Standards Converters; GROUP 5: Range Extenders and Repeaters; GROUP 6: Specialty AV Products; GROUP 7: Scan Converters and Scalers; GROUP 8: Cables and Connectors; GROUP 9: Room Connectivity; GROUP 10: Accessories and Rack Adapters; GROUP 11: Sierra Video Products; GROUP 12: Digital Signage; GROUP 13: Audio; and GROUP 14: Collaboration.

Congratulations on purchasing your Kramer **FC-54P Ethernet Gateway - Serial/IR/GPIO/Relay** that is ideal for use in the following applications:

- Remote IP control of RS-232, IR, GPIO, and relay-controllable devices by any control software app
- K-Touch multi-clients IP room control
- LAN-based expansion of K-Config control system

2 Getting Started

We recommend that you:

- Unpack the equipment carefully and save the original box and packaging materials for possible future shipment
- Review the contents of this user manual



Go to www.kramerav.com/downloads/FC-54P to check for up-to-date user manuals, application programs, and to check if firmware upgrades are available (where appropriate).

2.1 Achieving the Best Performance

To achieve the best performance:

- For optimum range and performance, use the recommended Kramer cables available at www.kramerav.com/product/FC-54P
- Do not secure the cables in tight bundles or roll the slack into tight coils
- Avoid interference from neighbouring electrical appliances that may adversely influence signal quality
- Position your **FC-54P** away from moisture, excessive sunlight and dust



This equipment is to be used only inside a building. It may only be connected to other equipment that is installed inside a building.

2.2 Safety Instructions



Caution: There are no operator serviceable parts inside the unit

Warning: Use only the Kramer Electronics power supply that is provided with the unit

Warning: Disconnect the power and unplug the unit from the wall before installing

2.3 Recycling Kramer Products

The Waste Electrical and Electronic Equipment (WEEE) Directive 2002/96/EC aims to reduce the amount of WEEE sent for disposal to landfill or incineration by requiring it to be collected and recycled. To comply with the WEEE Directive, Kramer Electronics has made arrangements with the European Advanced Recycling Network (EARN) and will cover any costs of treatment, recycling and recovery of waste Kramer Electronics branded equipment on arrival at the EARN facility. For details of Kramer's recycling arrangements in your particular country go to our recycling pages at www.kramerav.com/support/recycling/.

3 Overview

FC-54P is a multi-function PoE control gateway, capable of plug and play deployment over an existing Ethernet LAN for GPI/O, relay, IR and serial control of customer devices. Multiple control clients can be IP-connected to the **FC-54P** control gateway for concurrent control of devices such as projectors, displays, DVD players, lights, shades and screens.

The **FC-54P** features:

- Dual-Function I/O Ports - Remote IP-based control of any device connected to the control gateway I/O ports, with selectable port configuration to bidirectional RS-232/RS-485, IR, GPI/O or relay control. Each port adapts to any room control device by setting a DIP-switch.
- Multiple IP Connected Clients - Remotely connects over a customer Ethernet network that concurrently controls devices connected to the control gateway universal I/O ports.
- Easy & Reliable Installation:
 - Single PoE cable for powering and connectivity, Plug and Play IP installation with dynamic (DHCP) address resolution and auto device discovery over existing LAN.
 - Highly-resilient powering with multiple power options — USB, Power over Ethernet per IEEE 802.3af standard, and/or PSU (included).
 - Compact, designed for piggy-back installation, such as behind a TV or display with the ability to draw power from device USB port and Ethernet connectivity.
- Remote Management - Built-in web UI for remote browser-based management and support, by multiple IP-clients over existing LAN. Easy firmware upgrades, either remotely via existing LAN, or locally via device USB port.
- Size - MegaTOOLSTM - Mount 2 units side-by-side in a 1U rack space with the optional RK-T2B rack adapter.

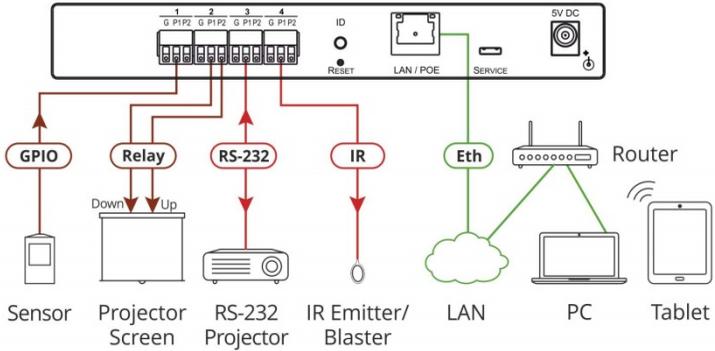


Figure 1: FC-54P Controlling Devices Remotely Using K-Touch 3.0 over a LAN

For example, using Kramer **K-Touch** control software you can design advanced room-control and automation systems that can be operated from iOS or Android touch devices. **K-Touch** can be used to perform device discovery over the network as the **FC-54P** is set to be a DHCP client by default.

You can use the Kramer **LAN Configurator** software to discover devices that are attached to the network, including the **FC-54P**.

4 Defining the FC-54P Ethernet Gateway - Serial/IR/GPIO/Relay

This section defines the **FC-54P**.


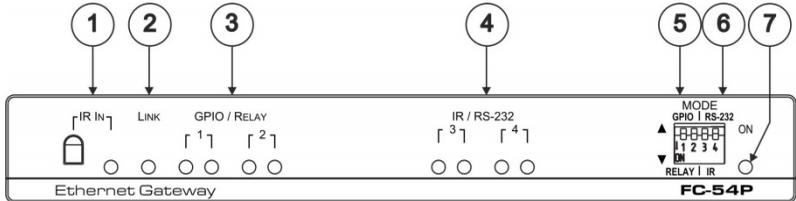


Figure 2: FC-54P Ethernet Gateway - Serial/IR/GPIO/Relay

#	Feature	Function
1	IR IN Sensor and LED	Sensor for IR learning, LED lights during activity
2	LINK LED	Shows the Ethernet link is active
3	GPIO/RELAY 1/ 2 LED pairs	Blue LED pair shows the activity status of port 1 and port 2: When set as GPIO, the left LED of the pair indicates active IO-P1 and right LED indicates active IO-P2 When set as RELAY, the left LED of the pair indicates active Relay-P1 and right LED indicates active Relay-P2
4	IR/RS-232 3/4 LED pairs	Blue LED pair shows the activity status of port 3 and port 4: When set as RS-232, the left LED of the pair indicates Tx and right LED indicates Rx When set as IR, the left LED of the pair indicates IR-P1 Tx and right LED indicates IR-P2 Tx
5	MODE DIP-switches (Port 1 and Port 2)	Switch up (off) for GPIO, switch down (on) for Relay The default setting is port 1 GPIO (up) and port 2 Relay (down)
6	MODE DIP-switches (Port 3 and Port 4)	Switch up for RS-232, switch down for IR The default setting is port 3 RS-232 (up) and port 4 IR (down)
7	ON LED	Lights green when the unit is on

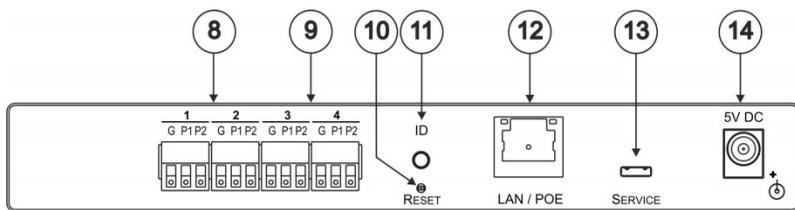

#	Feature	Function
8	Port 1/2 I/O 3-pin Terminal Block	Terminal block ports 1 and 2 connect to two GPIO ports or two Relays each
9	Port 3/4 I/O 3-pin Terminal Block	Terminal block ports 3 and 4 connect to one bidirectional RS-232 port (or RS-485, port 3 only) or two IR outputs each
10	RESET Button	Press and hold while cycling the device power to reset to factory default parameters
11	ID	Press to broadcast ID message for auto-discovery of the device
12	LAN/POE RJ-45 Connector	Connects to a PoE source (Power over Ethernet) for powering and an IP client or other controller, either directly or via a LAN
13	SERVICE Mini USB Connector	Connects to a USB power source for powering and to a PC for a local firmware upgrade
14	5V DC Connector	For extra power resiliency, connect to the 5V DC power supply, center pin positive. Not needed when the device is supplied power by PoE or a USB power source

FC-54P Function Table

Port IO Function	Terminal Block Connections			IO Port Default	TCP Default Port [P1/P2]	Blue Activity LED Pair	Comment
	G	P1	P2				
GPIO	Ground	IO ₁	IO ₂	Digital In x 2	5000	ON when IO ports are active	GPIO Analog in & Digital out via Web
Relay	Common	NO ₁	NO ₂	Normally Open x 2	5000	ON when Relay ports are active	
RS-232/RS-485	Ground	Rx	Tx	9600,8,N,1	5001/2	Flashes when port is transmitting & receiving data	Other serial configurations via Web, including RS-485 for Port 3
IR	Ground	IR ₁	IR ₂		5000	ON when ports are transmitting IR data	

Key:

P1 / P2 – Port 1 / Port 2

IO₁ / IO₂ – GPIO Port 1 / GPIO Port 2

NO₁ / NO₂ – Normally open Port 1 / Normally open Port 2

Tx – Transmit, Rx – Receive; 9600, 8, N, 1 – 9600 baud, 8-bits, no parity, 1 stop bit

IR₁ / IR₂ – IR Port 1 / IR Port 2

5 Performing Initial Configuration

This chapter provides an overview of the initial configuration of the **FC-54P** and comprises:

- Configuring the **FC-54P** (see [Section 5.1](#))
- Configuring an Ethernet connection on the PC (see [Section 5.2](#))

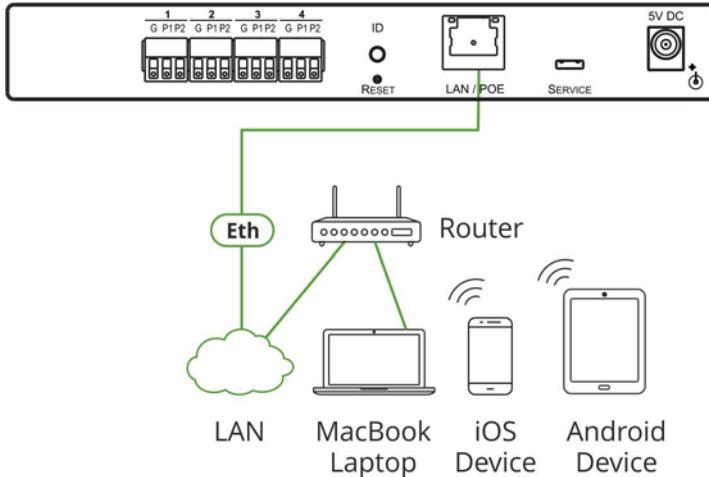


Figure 3: Connecting the FC-54P for Initial Configuration

5.1 Configuring the FC-54P Ethernet Gateway - Serial/IR/GPIO/Relay

Note: The **FC-54P** is shipped from the factory with DHCP enabled (off by default) and a random IP address. To connect the **FC-54P** on first installation, you must identify the IP address that was automatically assigned to the **FC-54P**. To discover the IP address of **FC-54P**, use **K-LAN Configurator**, available for download from our website at www.kramerav.com.

To browse the FC-54P Web UI on taking the device out of the box:

Use the default host name: **FC-54P-xxxx**, where xxxx are the last four digits of the serial number of the device.

To configure the FC-54P:

1. Connect the Ethernet port on the rear panel of the **FC-54P** to a PC, either directly or via a LAN, (see [Section 6.1](#)).
2. Using a Web browser and the relevant IP address or host name (see [Section 9.1](#)), browse the General Info home page (see [Figure 11](#)).
3. Click **Device Settings** to browse to the Device Settings page, (see [Figure 13](#)).
4. Enter the time and date manually, or enter the Time server address for automatic time and date synchronization.
5. Click **Save Changes**.
6. Click **Communication** to browse to the Communication page, (see [Figure 14](#)).
7. Enter the IP address, mask and gateway for static IP addressing and click **Set**. We recommend that you set a meaningful host name.
Note: If you have changed the IP address from the default setting, you must reload the General Info home page again using the new IP address.
8. Click **GPIO Port Settings** to browse to the GPIO Port Settings page, (see [Section 7.5](#)). Here you can configure digital in, digital out and analog in port parameters.
9. Set the trigger type, voltage levels and status of each port.
10. Click **Save Changes**.
11. Click **Relay Port Settings** to browse to the Relay Port Settings page, (see [Section 7.7](#)). Here you can set the relays on or off.
12. If required, click **Security** (see [Section 7.9](#)) to browse to the Security page.
13. Click **ON** to activate security.
The user name and password credentials popup appears.

14. Enter the required user name and password. (The default user name is **Admin** and the password is **Admin**).

5.2 Setting Up an Ethernet Connection on the PC

If the control application can directly connect to the Ethernet driver, select the host IP address and port number according to your **FC-54P** configuration, as illustrated in [Figure 4](#).

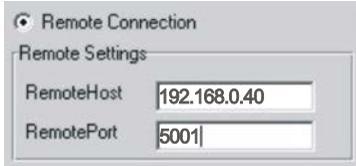


Figure 4: Configuring a Remote Connection

6 Connecting the FC-54P



Always switch off the power to each device before connecting it to your **FC-54P**. After connecting your **FC-54P**, connect its power and then switch on the power to each device.

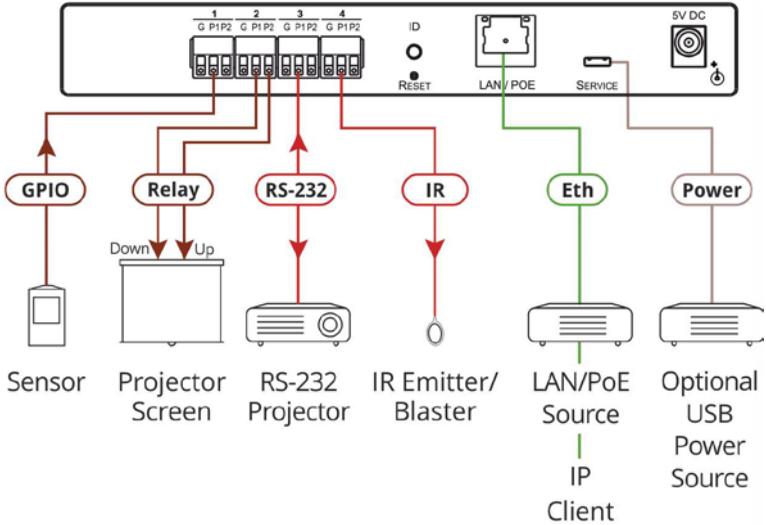


Figure 5: Connecting the FC-54P Ethernet Gateway - Serial/IR/GPIO/Relay

To connect the FC-54P as illustrated in the example in [Figure 5](#):

1. Connect the device to a LAN or PC via the RJ-45 Ethernet connector.
2. Set DIP-switch 1 up to select GPIO.
Connect an input or output device, (for example, a sensor) to terminal block 1, according to the connections shown in [Figure 6](#).
3. Set DIP-switch 2 down to select relay.
Connect a relay-controlled device, (for example, a projection screen) to terminal block 2, according to the connections shown in [Figure 6](#).

4. Set DIP-switch 3 up to select RS-232.
Connect an RS-232-controlled device, (for example, a projector) to terminal block 3, according to the connections shown in [Figure 6](#).
5. Set DIP-switch 4 down to select IR.
Connect an IR device (for example, an emitter/blaster) to terminal block 4, according to the connections shown in [Figure 6](#).

Port IO Function	Terminal Block Connections		
	G	P1	P2
GPIO	Ground	IO ₁	IO ₂
Relay	Common	NO ₁	NO ₂
RS-232/ RS-485	Ground	Rx	Tx
IR	Ground	IR ₁	IR ₂

Figure 6: Terminal Block Connections

6. If the **FC-54P** does not receive power from a PoE provider or a USB power connection, connect the device to the power supply and connect the power adapter to the mains electricity (not shown in [Figure 5](#)).

Note: Changing the DIP-switches resets the ports to their default state: GPIO resets to its low logic state and the relay resets to its open state.

6.1 Connecting via Ethernet

You can connect to the **FC-54P** via Ethernet using either of the following methods:

- Directly to the PC using a crossover cable (see [Section 6.1.1](#))
- Via a network hub, switch, or router, using a straight-through cable (see [Section 6.1.2](#))

Note: If you want to connect via a router and your IT system is based on IPv6, speak to your IT department for specific installation instructions.

6.1.1 Connecting the Ethernet Port Directly to a PC

You can connect the Ethernet port of the **FC-54P** directly to the Ethernet port on your PC using a crossover cable with RJ-45 connectors.



This type of connection is recommended for identifying the **FC-54P** with the factory configured default IP address.

After connecting to the Ethernet port, configure your PC as follows:

1. Click **Start > Control Panel > Network and Sharing Center**.
2. Click **Change Adapter Settings**.
3. Highlight the network adapter you want to use to connect to the device and click **Change settings of this connection**.

The Local Area Connection Properties window for the selected network adapter appears as shown in [Figure 7](#).

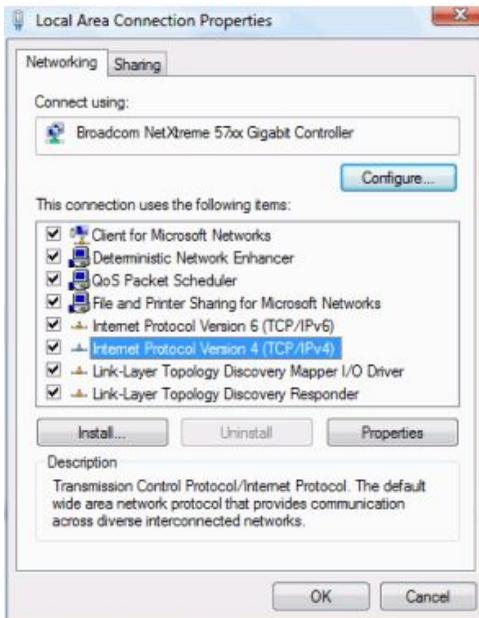


Figure 7: Local Area Connection Properties Window

4. Highlight **Internet Protocol Version 4 (TCP/IPv4)** and click **Properties**.
The Internet Protocol Properties window relevant to your IT system appears as shown in [Figure 8](#) or [Figure 9](#).

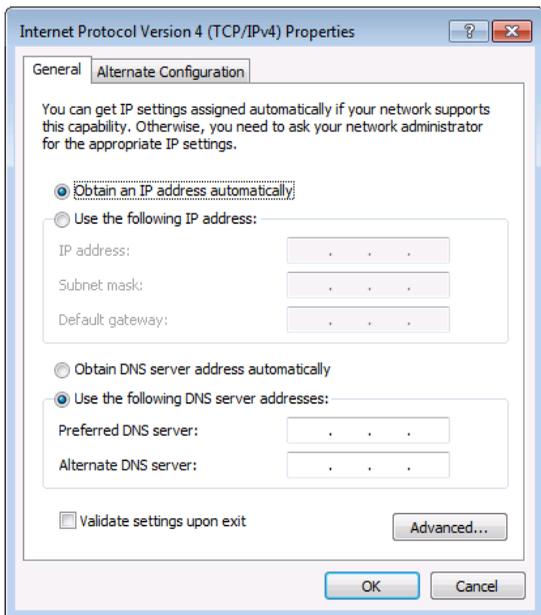


Figure 8: Internet Protocol Version 4 Properties Window

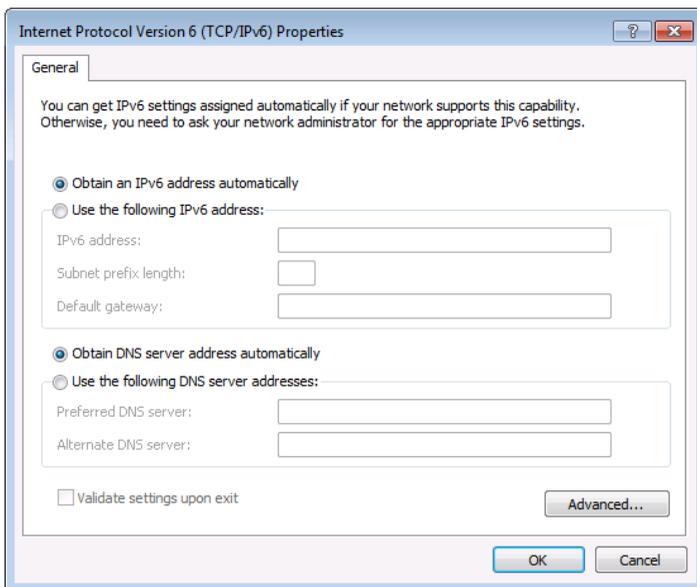


Figure 9: Internet Protocol Version 6 Properties Window

5. Select **Use the following IP Address** for static IP addressing and fill in the details as shown in [Figure 10](#).

For TCP/IPv4 you can use any IP address in the range 192.168.1.1 to 192.168.1.255 (excluding 192.168.1.39) that is provided by your IT department.

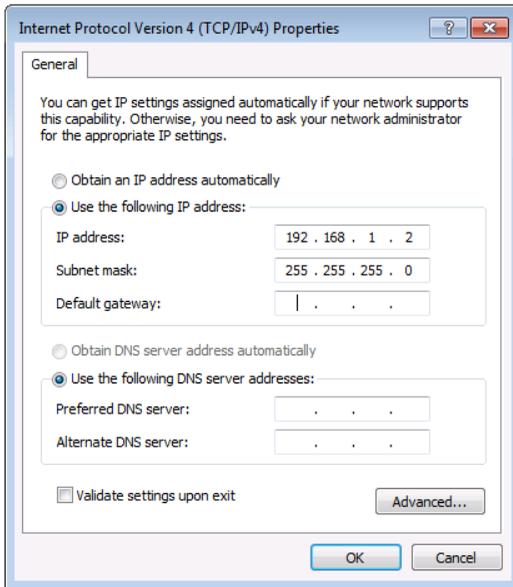


Figure 10: Internet Protocol Properties Window

6. Click **OK**.
7. Click **Close**.

6.1.2 Connecting the Ethernet Port via a Network Hub or Switch

You can connect the Ethernet port of the **FC-54P** to the Ethernet port on a network hub or switch using a straight-through cable with RJ-45 connectors.

6.1.3 Connecting the GPIO Ports on the FC-54P to a Device

To connect the GPIO port on the FC-54P to a device:

- Connect the G pin on the GPIO port to the ground connection on the device
- Connect the S pin on the GPIO port to the signal/positive connection on the device
- Set the DIP-switch for the port UP (Off)

6.1.4 Connecting the Relays on the FC-54P to a Device

To connect the relay port on the FC-54P to a device:

- Connect the C pin on the relay port to the ground connection on the device
- Connect the NO pin on the relay port to the signal/positive connection on the device
- Set the DIP-switch for the port DOWN (On) for Relay

6.1.5 Connecting the RS-232/RS-485 Port on the FC-54P to a Device

To connect to the FC-54P via RS-232/RS-485:

- Connect the RS-232, 3-pin, terminal block connectors on the rear panel of the **FC-54P** using 3-wire cable (pin TX to pin 2, RX to pin 3, and G to pin 5) to the RS-232 9-pin D-sub port on the devices to be controlled



To set the port to RS-485, use the Serial Port Settings UI page in [Section 7.5](#).

6.1.6 Connecting the IR Port on the FC-54P to a Device

To connect to the FC-54P via IR:

- Connect an IR blaster to one of the IR Outputs and place it within 4m to 8m (13 to 26ft) and in line-of-sight of the device to be controlled

—OR—

- Connect an IR emitter cable to one of the IR outputs and stick the emitter to the IR sensor on the device to be controlled

7 Remote Operation via the Web UI

The embedded Web UI can be used to remotely operate the **FC-54P** using a Web browser and an Ethernet connection.


Before attempting to connect:

- Perform the initial configuration in [Section 5.1](#) and connecting via Ethernet in [Section 6.1](#)
- Ensure that your browser is supported (see [Section 9](#))

7.1 Browsing the Web UI

To browse the Web UI:

- Open your Internet browser. Type the IP address or host name of the device (see [Section 5.1](#)) in the Address bar of your browser.

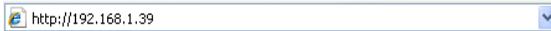

The Loading page appears followed shortly by the General Info page shown in [Figure 11](#).

The General Info page displays the following:

- Model Name
- Firmware version
- Device serial number
- Web UI version

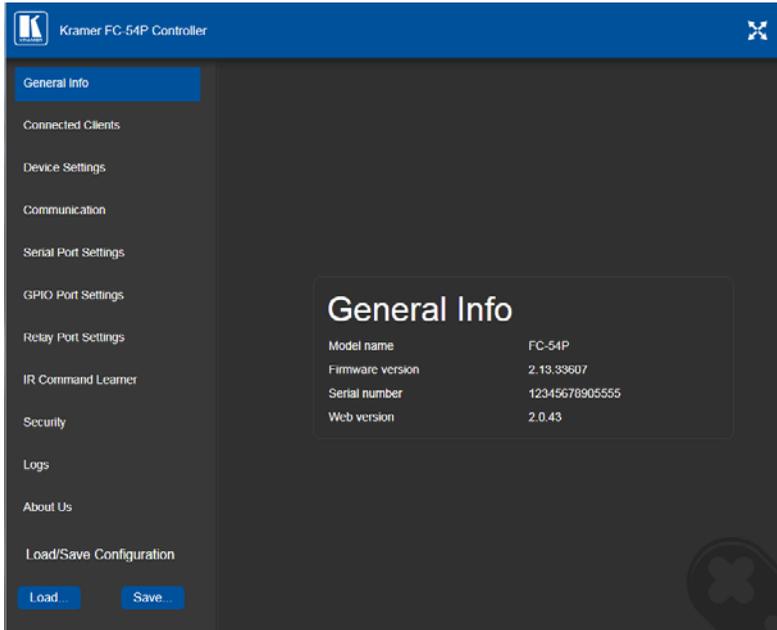


Figure 11: General Info Page

Loading and Saving Configurations

Loading and saving configurations is used for duplicating multiple device definitions for easy system configuration. The configurations are loaded and saved to a local PC. Load and save is performed using the buttons at the bottom left-hand side of the screen for all pages displayed.

To load a configuration:

1. Click **Load**.
The Explorer window opens.
2. Browse to the required file.
3. Select the required file and click **Open**.
The device is configured according to the saved preset.

To save the current configuration:

1. Configure the device as required.
2. Click **Save**.
The Save File window opens.
3. Browse to the required location to which to save the file.
4. Enter the required name for the saved preset.
5. Click **OK**.
The current configuration is saved.

Note: When using Chrome, the file is automatically saved in the Downloads folder.

The following parameters are saved to the configuration file:

UI Page	Parameter
Device Settings (Figure 13)	Model Name Time Zone Daylight Savings Time mode Use Time Server mode Time Server Address Sync Every Day time
Communication (Figure 14)	UDP Port TCP Port
Serial Port Setting (Figure 15)	Serial Port Protocol IP Port TCP Keep Alive Parity Data Bits Baud Rate Stop Bits Send Replies to New Client by Default
GPIO Port Settings (Figure 18)	GPIO Port Trigger Type Pull-up Resistor Threshold VDC Range Min Threshold VDC Range Max Maximum Reported Steps

7.2 Displaying Connected Clients

The Connected Clients page ([Figure 12](#)) allows you to view the following details of any client devices connected via Ethernet to the **FC-54P**:

- IP address
- The port it is connected to
- Method of connection
- Whether or not Send Replies is enabled for the port

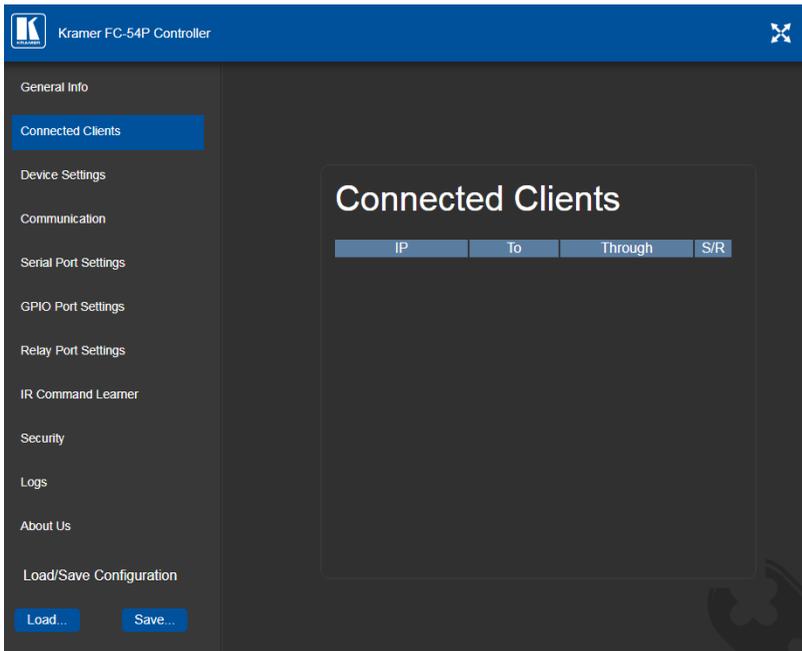


Figure 12: Connected Clients Page

7.3 Setting Device Name and Time Functions

The Device Settings page ([Figure 13](#)) allows you to view the model name and time server status. You can also modify the following fields:

- Device name
- Device time, date, and time zone

- Use a timeserver to set the time and date automatically using a (if the device is connected to the Internet), including the Time Zone and daylight savings time

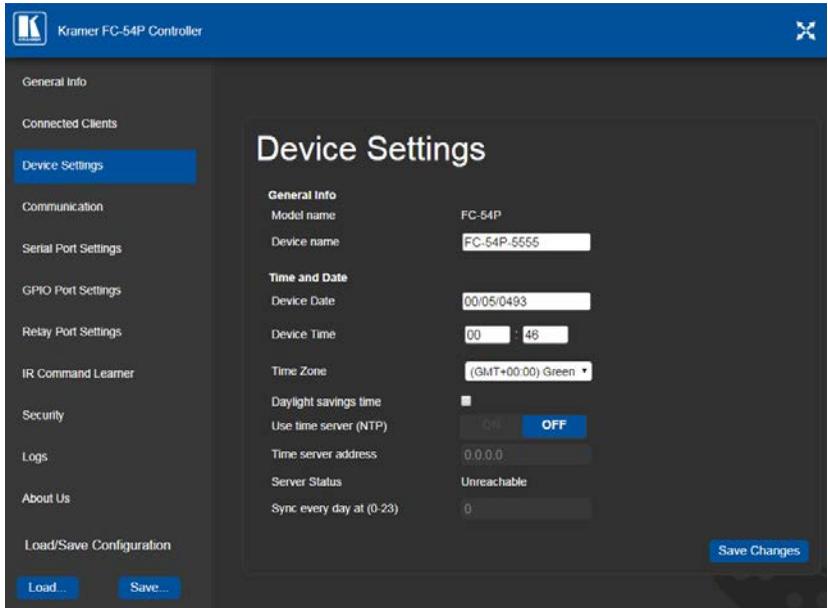


Figure 13: Device Settings Page

The **FC-54P** has a built-in clock that can synchronize with a Time Server if required.

To enable Time Server synchronization:

1. Browse to the Device Settings page by clicking Device Settings.
The Device Settings page is displayed as shown in [Figure 13](#).
2. Click the Use Time Server **ON** button.
3. Enter the IP address of the Time Server.
4. Enter the time of day at which the **FC-54P** should synchronize with the Time Server.
5. Click **Save Changes**.

7.4 Setting Communication Parameters

The communication page allows you to:

- Turn DHCP for the device on and off
- Edit the IP settings for static IP addressing

Note: The default IP address setting for the device is DHCP.

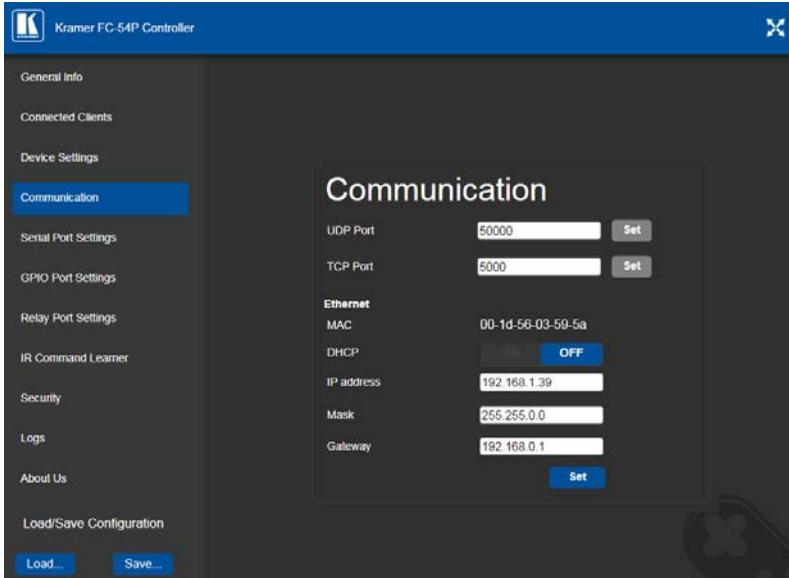


Figure 14: Communication Page

After modifying any of the IP settings, click **Set** to save the changes.

7.5 Setting Serial Port Parameters

The Serial Port Settings page allows you to:

- Set the following Ethernet parameters for each Ethernet port:
 - Select TCP or UDP
 - IP port label
 - TCP keep alive time – 0-3600sec (default 60sec) internal time, after which detected idle connection is disconnected

- Set the following serial parameters for each serial port:
 - Device serial mode – RS-232 or RS-485 with or without termination
 - Parity
 - Data bits
 - Baud rate
 - Stop bits
- Select whether or not to send replies on the port to the new client

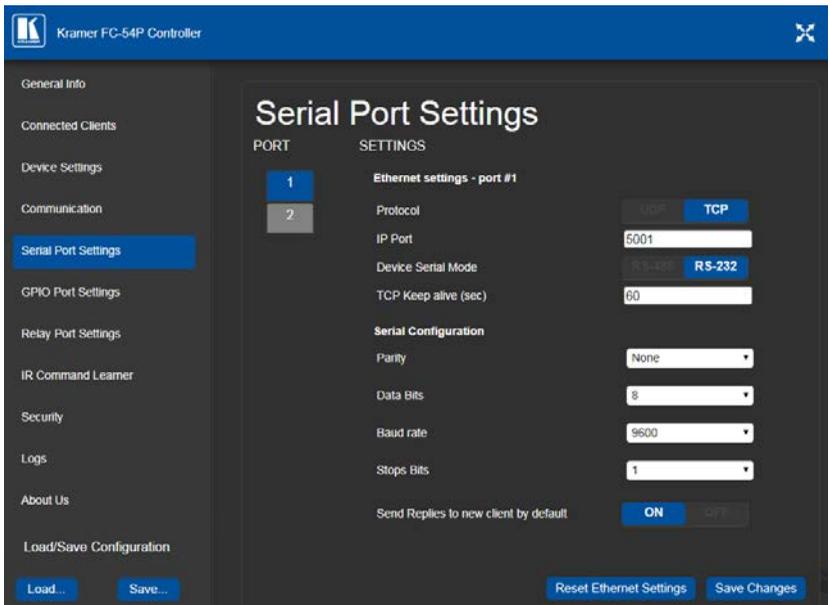


Figure 15: Serial Port Settings Page

To select device serial mode RS-485:

- Click **RS-485** and click to enable or disable termination.

Serial Port Settings

PORT SETTINGS

1 **Ethernet settings - port #1**

2

Protocol UDP TCP

IP Port

Device Serial Mode RS-485 RS-232

RS-485 Termination Enable Disable

TCP Keep alive (sec)

Serial Configuration

Parity

Data Bits

Baud rate

Stops Bits

Send Replies to new client by default ON OFF

Figure 16: Serial Port Settings Page – RS-485



Note: When DIP-switches 3 and 4 are set down to IR, serial ports 1 and 2 are grayed out and the following serial port settings screen appears:

Serial Port Settings

PORT SETTINGS

1 There is no serial port configured

2

Figure 17: Serial Port Settings Page – No Serial Ports Configured

7.6 Setting GPIO Port Parameters

GPIO ports are used to connect and control hardware devices to the **FC-54P** such as sensors, switches and LED indicators that input and output digital signals and input analog signals.

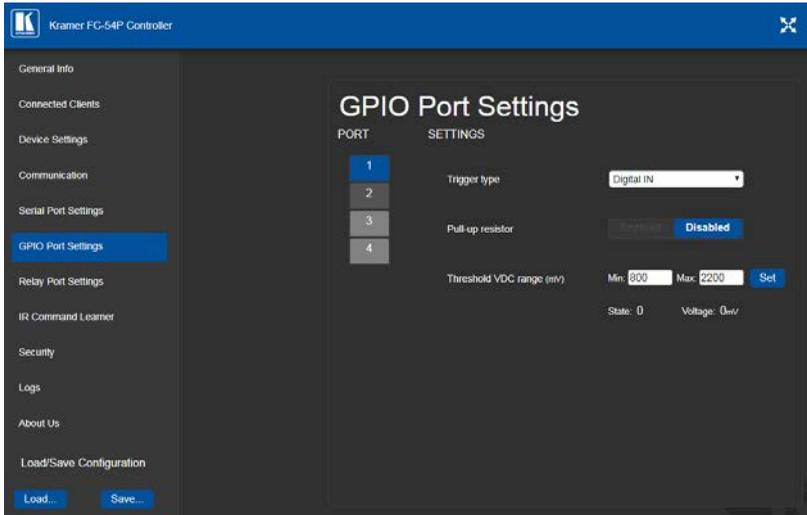


Figure 18: GPIO Port Settings Page

The GPIO Port Setting page allows you to configure the following for each GPIO port:

- Trigger type—digital input, digital output, or analog input
- Enable and disable the pull-up resistor for the digital input and output
- Set the threshold trigger voltage range for the digital input
- Set the current status for the digital output signal to high or low
- Set the maximum number of reported steps for the analog input
- Read—Press to read the state of the port (displayed according to the page)
- State—Displays the digital state of the port, either 1 (high) or 0 (low) (displayed according to the page)

GPIO sub-ports are displayed according to their DIP-switch settings.

Note: The default parameter settings change depending on which trigger type is selected.



Note: When DIP-switches 1 and 2 are set down to Relay, GPIO ports 1 through 4 are grayed out and the following GPIO port settings screen appears:

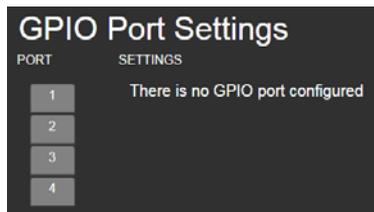


Figure 19: GPIO Port Settings Page – No GPIO Ports Configured

7.6.1 Setting Digital In Trigger Parameters

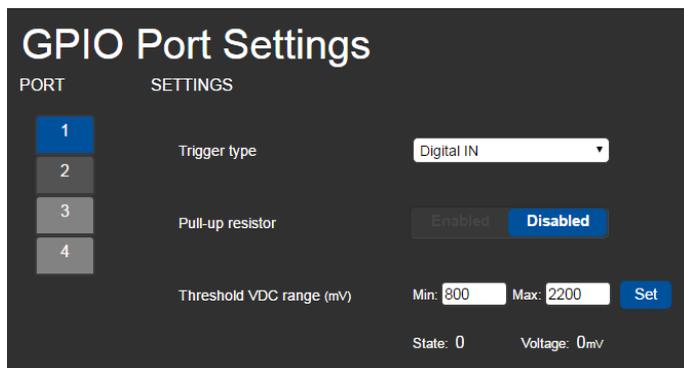


Figure 20: GPIO Port Settings Page Digital IN

Set the trigger type to Digital In (default). With this selection, the digital input trigger mode reads the digital input of an external sensor device that is connected to the GPIO port. It detects high (upon passing Max. threshold from Low state, default 2.2V) or low (upon passing Min threshold from High state, default 0.8V) port states according to the user defined voltage threshold levels:

- Pull-up resistor enabled (default)
Detects an open circuit as High, or a short to ground as Low. This is suitable for example, for a pushbutton switch (connecting one terminal of the switch to ground, and the other to the input) or for an alarm closing a circuit that activates a series of actions.

When the pull-up is enabled, the port state is high and to be triggered it must be pulled low by the externally connected sensor.

- Pull-up resistor disabled

Suitable, for example, for a high-temperature alarm that exceeds the maximum voltage threshold.

When disabled, the port state is low and to be triggered it must be pulled high by the externally connected sensor.

7.6.2 Setting Digital Out Trigger Parameters

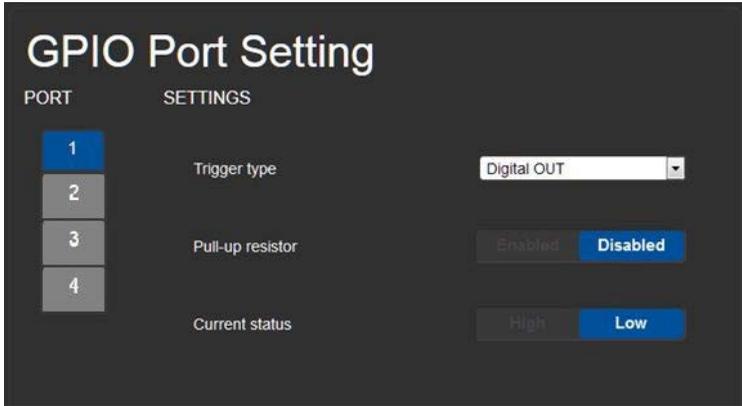


Figure 21: GPIO Port Settings Page Digital OUT

Set the trigger type to Digital Out. With this selection, the external device, (for example, an electric blind) is controlled by the **FC-54P**.

When selecting the Digital Out trigger type, the warning popup shown in Figure 22 is displayed.

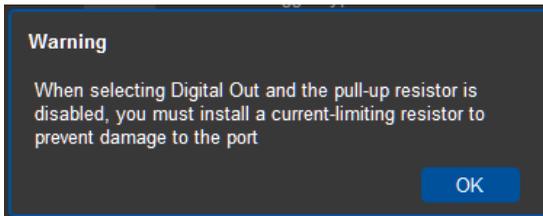


Figure 22: Digital Out Selection Warning Popup

The digital output mode function is defined by the pull-up resistor setup:

- Pullup resistor enabled:

The port is used for controlling external devices such as room or light switches. The external source device determines the voltage output; the maximum voltage is 30V DC and the maximum current is 100mA.

Note: take care that the current in this configuration does not exceed 100mA!

When enabled, the port state is high by default. For the state to be low, you must click Low from the Current Status.

- Pullup resistor disabled (default):

The port can be used for controlling devices that accept a TTL signal such as for powering LEDs. The voltage output is TTL positive logic: open: ~ 3.5V; closed: ~ 0.3V.

When disabled, the port state is low by default and to set it high, you must click High from the Current Status.

7.6.3 Setting Analog In Trigger Parameters

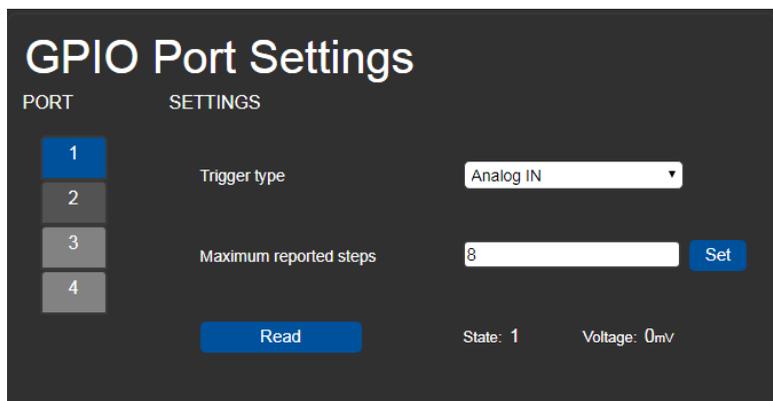


Figure 23: GPIO Port Settings Page Analog IN

Set the trigger type to Analog In. With this selection, the port is triggered by an analog external device, such as, a volume control device. The trigger is activated once when the detected voltage is within 0 to 30V DC voltage range.

You can select the number of steps the analog input signal will be divided into, starting with step 1 and with a maximum of 100 (default 8). The voltage of each step is dependent on the number of steps selected:

$$\text{Individual step voltage} = 30\text{V} / \text{number of steps}$$

When selecting the Analog In trigger type, the Pullup resistor and Threshold settings are disabled.

7.7 Setting Relay Port Status

The Relay Port Settings page allows you to turn the relays on and off to control relay-driven devices such as shades, projection screens and lighting systems.

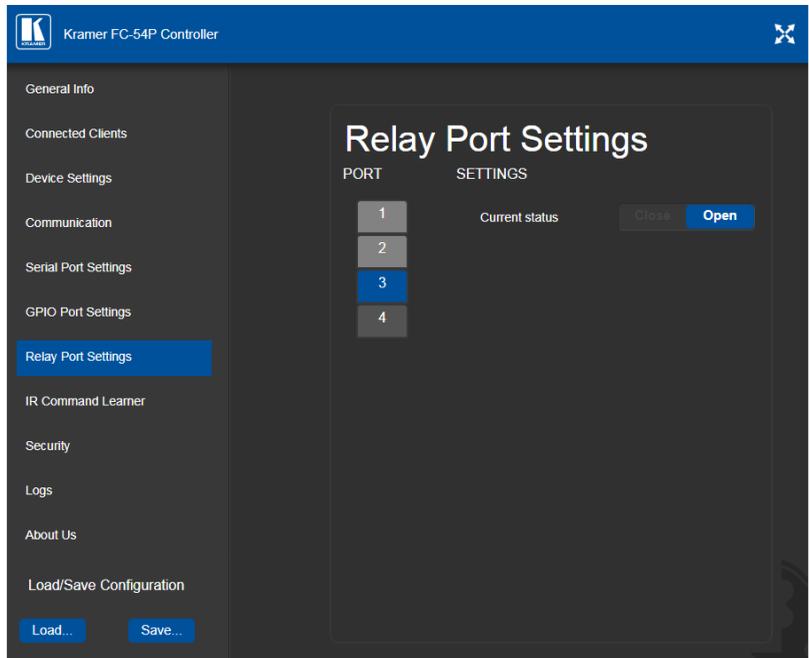


Figure 24: Relay Port Settings Page

The relay ports have the following characteristics:


- Rated at 30V DC and 1A
- Default state of normally open
- A non-latching relay function, that is, the contact is left open when unpowered or on power up state. This means that if a relay is closed and power is lost, the relay returns to its default state. To return it to its pre-power loss state, the setting must be changed using either the Web UI or a Protocol 3000 command

To close a relay, (for example, relay 2):

1. On the Relay Setting page, click Port button 2 to select the second relay. The current relay status is shown to the right of the button.
2. Click Close.
The relay closes, the button changes color, and the Relay 2 LED on the front panel lights green.



Note: When DIP-switches 1 and 2 are set up to GPIO, Relay ports 1 through 4 are grayed out and the following Relay port settings screen appears:

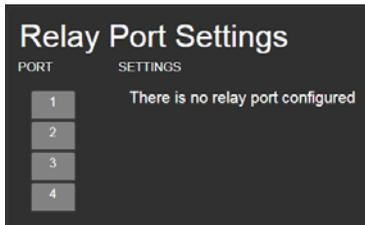

7.8 Configuring IR Command Learning

The IR Command Learner page allows you to teach the **FC-54P** IR commands. These can be saved for later use.

Note: While learning is in progress, the four IR Out LEDs light and the **FC-54P** is not available for normal operation.

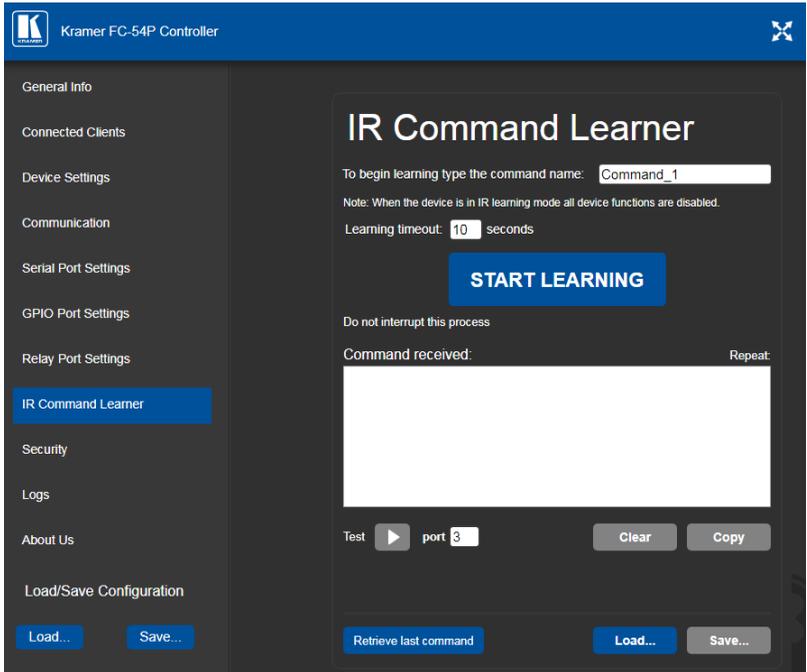


Figure 25: IR Command Learner Page

Feature	Function
Command Name Field	Enter the required name for the command
Learning Timeout	Set the time to elapse before the learning mode is exited if no command is received
Start Learning Button	Press to start the learning process. Note: While learning is in progress, the four IR Out LEDs light and the FC-54P is not available for normal operation.
Command Received Window	Displays the command string received during the process. This command can be copied/pasted to another application
Test Button and Port Selection Spinner	Select the port on which to test the learned command and press the Test button to start the test
Retrieve Last Command Button	Press to retrieve that last command learned
Clear/Copy Buttons	Press to clear or copy the command received
Load/Save Buttons	Press Load to retrieve a previously saved command. Press Save to save the current command

7.9 Activating Security

The Security page allows you to turn logon authentication on or off.

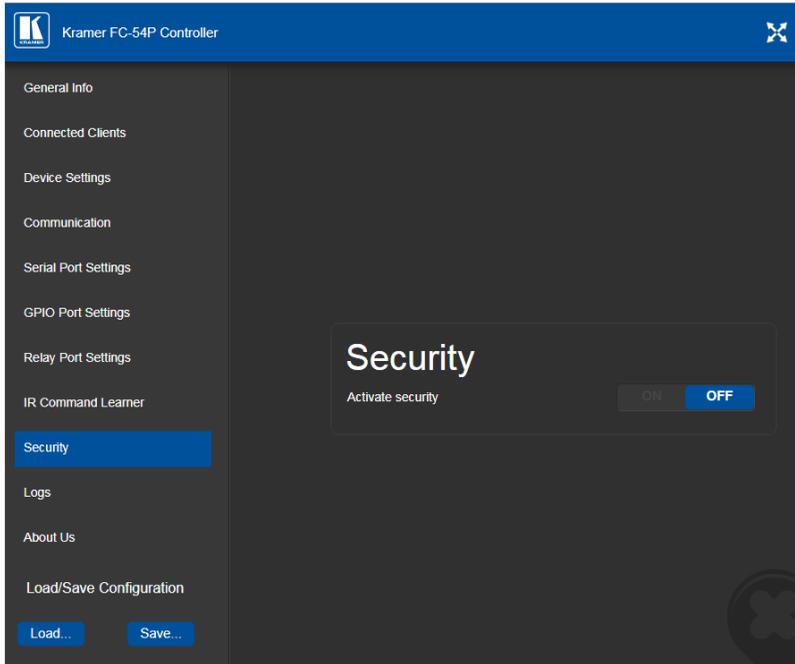


Figure 26: Security Page

When security is on, access to the Web UI is granted only on submission of a valid user and password. The default user ID is **Admin** and the password is **Admin**.

To activate Web UI security:

1. On the Security page, click ON.

The confirmation popup is displayed as shown in [Figure 27](#).

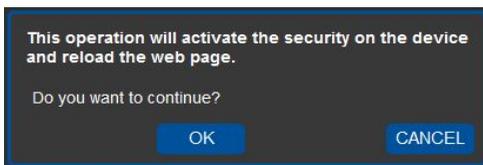


Figure 27: Security Confirmation Popup

2. Click **OK**.

The Authentication Required popup is displayed as shown in [Figure 28](#).

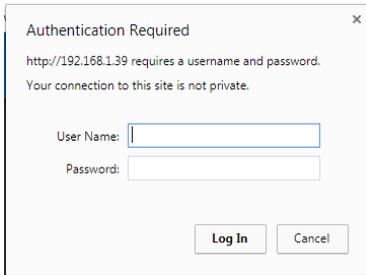


Figure 28: Authentication Required Popup

3. Enter the default username and password.
4. Click **OK**.
5. Wait until the Web UI has reloaded. Click the Security page button. The page show in [Figure 29](#) is displayed.

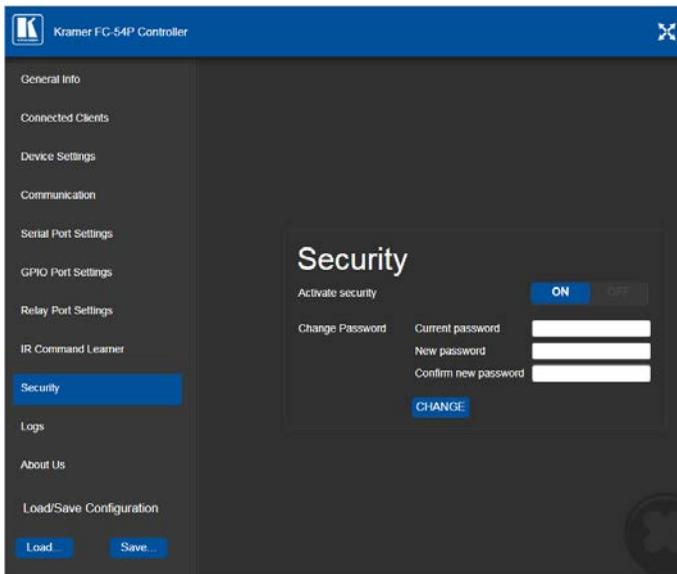



Figure 29: Security Activated Page

6. If required, click **OFF** to turn security off, or change the password and click **Change**.

7.10 Using the Logs Page

The Logs page allows you to:

- View current logs
- Configure the logs
- Filter the logs

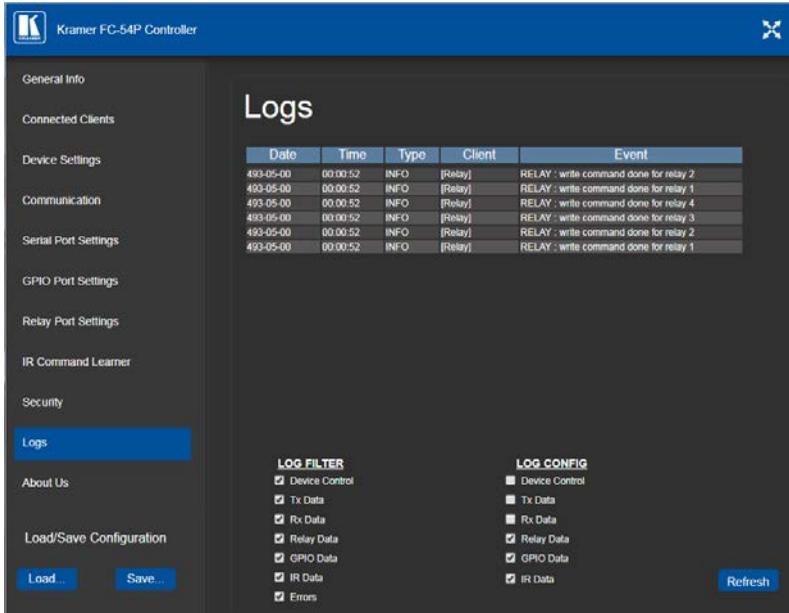

Kramer FC-54P Controller

General Info

Connected Clients

Device Settings

Communication

Serial Port Settings

GPIO Port Settings

Relay Port Settings

IR Command Learner

Security

Logs

About Us

Load/Save Configuration

Load... Save...

Logs

Date	Time	Type	Client	Event
493-05-00	00:00:52	INFO	[Relay]	RELAY : write command done for relay 2
493-05-00	00:00:52	INFO	[Relay]	RELAY : write command done for relay 1
493-05-00	00:00:52	INFO	[Relay]	RELAY : write command done for relay 4
493-05-00	00:00:52	INFO	[Relay]	RELAY : write command done for relay 3
493-05-00	00:00:52	INFO	[Relay]	RELAY : write command done for relay 2
493-05-00	00:00:52	INFO	[Relay]	RELAY : write command done for relay 1

LOG FILTER

- Device Control
- Tx Data
- Rx Data
- Relay Data
- GPIO Data
- IR Data
- Errors

LOG CONFIG

- Device Control
- Tx Data
- Rx Data
- Relay Data
- GPIO Data
- IR Data

Refresh

Figure 30: Logs Page

The display may not update automatically. Click Refresh to update the display.

Use the Log Filter check-boxes to select which events to display from the log. Use the Log Config check-boxes to select which events are recorded.

7.11 Kramer Information

The About Us page displays the Web UI version and the Kramer company details.

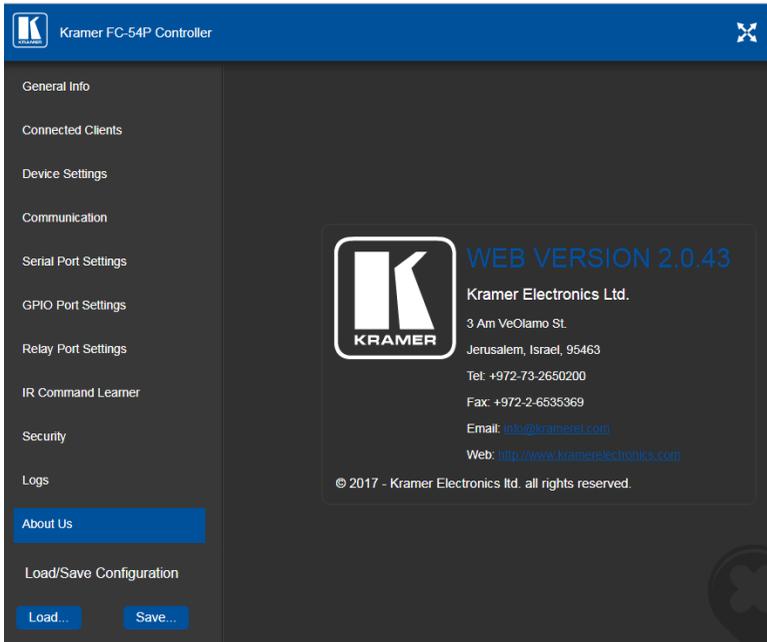


Figure 31: About Us Page

8 Using FC-54P Operations

This section explains how to use IR learning, reset the device and upgrade device firmware.

8.1 Using IR Learning

At the start and end of learning a message is sent to all attached clients.

To perform IR learning, the IR remote control must be approximately five to seven centimeters (2" and 2.7") from the **FC-54P** front panel.

Note: While learning is in progress, the **FC-54P** is not available for normal operation.

To teach the FC-54P an IR command:

1. Put the **FC-54P** in IR Learning mode either by sending the Protocol 3000 command, (see [Section 11.2](#)) or by using the Web pages, (see [Section 7.8](#)). The device is no longer in normal operation, and the **FC-54P** sends an IR Learning start message to all connected clients.
2. Using the IR remote control, send the required command to the **FC-54P**. The **FC-54P** processes the IR detected signal and generates the signal-associated pronto code to be used by the driver. When using the Web page for IR learning, the **FC-54P** also displays the learned command code on screen. (This command can be copied/pasted to other applications, for example, control software when creating a driver.) The **FC-54P** then sends the IR Learning stop message to all connected clients to indicate return to normal operation.
3. Optional—Test the command if using the IR Learning Web page. Test results are displayed on screen.
4. Save the learned command.

8.2 Resetting to the Factory Default Settings

To reset the device to its factory default settings:

1. Turn off the power to the device.
2. Press and hold the Reset button on the front panel.
3. Turn on the power to the device while holding down the Reset button for a few seconds.
4. Release the button.

The device is reset to the factory default settings.

8.3 Upgrading the Firmware

For instructions on upgrading the firmware see the "*Kramer K-Upload User Manual*".

9 Technical Specifications

Ports	4 GPIO	On 2-pin terminal blocks
	2 relays	On 3-pin terminal blocks
	2 RS-232 bidirectional serial or 4 IR (selectable)	On 3-pin terminal blocks
	1 LAN	On an RJ-45 connector
	1 IR sensor	For IR learning
	1 mini USB connector	For programming
Serial	Serial port baud rates	1200, 2400, 4800, 9600, 19200, 38400, 57600, 15200bps
	RS-232 communication	Transparent up to 115200bps
IR	IR emitter cable range	80m (260ft)
	IR output frequencies	20kHz to 1.2MHz
	IR input frequencies	20kHz to 60kHz
Data and Connections	Maximum data handling of device	Up to 150kbps (summed on all ports, see Section 9.1)
	Maximum simultaneous IP-client connections	40
Power	Power consumption	5V DC, 400mA
	Power source	PoE or a USB power source (for extra power resiliency, connect to the 5V DC power supply)
Cooling	Convection ventilation	
Environmental Conditions	Operating temperature	0° to +40°C (32° to 104°F)
	Storage temperature	-40° to +70°C (-40° to 158°F)
	Humidity	10% to 90%, RHL non-condensing
Regulatory Compliance	Vibration	ISTA 1A in carton (International Safe Transit Association)
	Safety	CE
	Environmental	RoHs, WEEE
General	Enclosure type	Aluminum
	Net dimensions	18.75cm x 11.5cm x 2.54cm (2.45" x 2.0" x 1.0") W, D, H.
	Net weight	0.4kg (094lbs) approx.
	Shipping dimensions	34.5cm x 16.5cm x 5.2cm (6.2" x 4.7" x 3.4") W, D, H.
	Shipping weight	0.94kg (2.1lbs) approx.
Accessories	Included	Bracket set, power supply
	Optional	RK-T2B 19" rack adapter, IR and serial cables – see www.kramerav.com/product/FC-54P
Specifications are subject to change without notice at www.kramerav.com		

9.1 Data Handling Performance

The **FC-54P** is designed to support mainly AV-relevant RS-232 communication.

These devices must have overall data bandwidth limits high enough in most AV installations to support the required communication bandwidth.

In extremely demanding cases, we recommend that you take into account the bandwidth limitations.

The total sustained data bandwidth that each device can handle for all ports simultaneously is 150kbps.

9.2 Example Bandwidth Calculation

The **FC-54P** has two serial ports. Each serial port can support up to:

- $150\text{kbps} / 2 = 75\text{kbps}$

If each protocol command is 100 bytes, (that is, 800 bits), you can safely send and receive a minimum of 96 commands per second on each serial port. This is shown using the following calculation:

$$(150\text{kbps} * 1024) / 800 \text{ bits} / 2 = 96$$

The same calculation applies to all devices. A similar calculation applies when fewer ports are used at the same time where a higher bandwidth per port can be achieved.

In critical applications requiring a lossless data transfer, we recommend that communication on all the other ports is stopped when making a long file transfer (for example, when performing a firmware upgrade via one of the serial ports).

10 Default Parameters

RS-232	
Protocol 3000	
Baud Rate:	115200
Data Bits:	8
Stop Bits:	1
Parity:	None

Note: The **FC-54P** is dispatched from the factory with DHCP enabled and a random IP address. After performing a factory reset, the DHCP and the IP address are set to the values shown below.

Ethernet	
DHCP:	Off
IP Address:	192.168.1.39
Host Name:	FC-54P-xxxx where xxxx are the last four digits of the serial number of the device
Subnet Mask:	255.255.0.0
Gateway:	192.168.0.1
Maximum Simultaneous Connections:	40
TCP Port 1:	5001
TCP Port 2:	5002
UDP Port:	50000


Default Logon Authentication

Web UI Access	
User name:	Admin
Password:	Admin

11 Kramer Protocol 3000


The **FC-54P** can be operated using the Kramer Protocol 3000 serial commands. The command framing varies according to how you interface with the **FC-54P**. For example, a basic video input switching command that routes a layer 1 video signal to HDMI out 1 from HDMI input 2 (`ROUTE 1,1,2`), is entered as follows:

- Terminal communication software, such as Hercules:

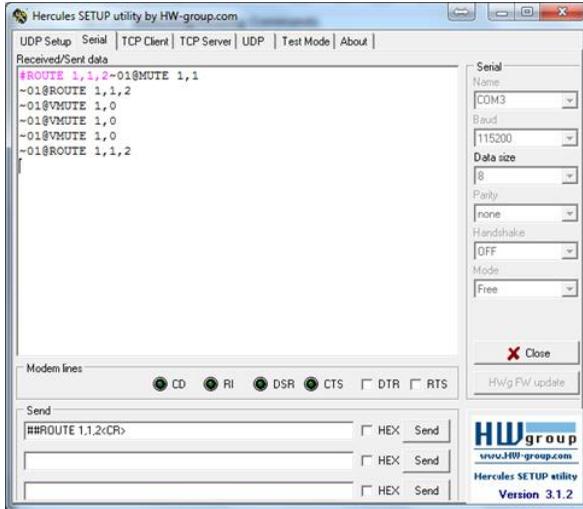


The framing of the command varies according to the terminal communication software.

- K-Touch Builder (Kramer software):

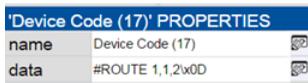

- K-Config (Kramer configuration software):

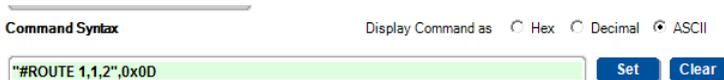

All the examples provided in this section are based on using the K-Config software.

You can enter commands directly using terminal communication software (e.g., Hercules) by connecting a PC to the serial or Ethernet port on the **FC-54P**. To enter **CR** press the Enter key (**LF** is also sent but is ignored by the command parser).

Commands sent from various non-Kramer controllers (e.g., Crestron) may require special coding for some characters (such as, /x##). For more information, refer to your controller's documentation.

11.1 Kramer Protocol 3000 – Syntax

11.1.1 Host Message Format

Start	Address (optional)	Body	Delimiter
#	<i>Destination_id@</i>	Message	CR

11.1.1.1 Simple Command

Command string with only one command without addressing:

Start	Body	Delimiter
#	Command SP <i>Parameter_1,Parameter_2,...</i>	CR

11.1.1.2 Command String

Formal syntax with commands concatenation and addressing:

Start	Address	Body	Delimiter
#	<i>Destination_id@</i>	Command_1 <i>Parameter1_1,Parameter1_2,... </i> Command_2 <i>Parameter2_1,Parameter2_2,... </i> Command_3 <i>Parameter3_1,Parameter3_2,... ...</i>	CR

11.1.2 Device Message Format

Start	Address (optional)	Body	Delimiter
~	<i>Sender_id@</i>	Message	CR LF

11.1.2.1 Device Long Response

Echoing command:

Start	Address (optional)	Body	Delimiter
~	<i>Sender_id@</i>	Command SP [<i>Param1 ,Param2 ...</i>] result	CR LF

CR = Carriage return (ASCII 13 = 0x0D)

LF = Line feed (ASCII 10 = 0x0A)

SP = Space (ASCII 32 = 0x20)

11.1.3 Command Terms

Command

A sequence of ASCII letters ('A'-'Z', 'a'-'z' and '-').

Command and parameters must be separated by at least one space.

Parameters

A sequence of alphanumeric ASCII characters ('0'-'9', 'A'-'Z', 'a'-'z' and some special characters for specific commands). Parameters are separated by commas.

Message string

Every command entered as part of a message string begins with a **message starting character** and ends with a **message closing character**.

Note: A string can contain more than one command. Commands are separated by a pipe ('|') character.

Message starting character

'#' – For host command/query

'~' – For device response

Device address (Optional, for K-NET)

K-NET Device ID followed by '@'

Query sign

'?' follows some commands to define a query request.

Message closing character

CR – For host messages; carriage return (ASCII 13)

CRLF – For device messages; carriage return (ASCII 13) + line-feed (ASCII 10)

Command chain separator character

When a message string contains more than one command, a pipe ('|') character separates each command.

Spaces between parameters or command terms are ignored.

11.1.4 Entering Commands

You can directly enter all commands using a terminal with ASCII communications software, such as HyperTerminal, Hercules, etc. Connect the terminal to the serial or Ethernet port on the Kramer device. To enter **CR** press the Enter key. (**LF** is also sent but is ignored by command parser).

For commands sent from some non-Kramer controllers like Crestron, some characters require special coding (such as, /X##). Refer to the controller manual.

11.1.5 Command Forms

Some commands have short name syntax in addition to long name syntax to allow faster typing. The response is always in long syntax.

11.1.6 Chaining Commands

Multiple commands can be chained in the same string. Each command is delimited by a pipe character ("|"). When chaining commands, enter the **message starting character** and the **message closing character** only once, at the beginning of the string and at the end.

Commands in the string do not execute until the closing character is entered.

A separate response is sent for every command in the chain.

11.1.7 Maximum String Length

64 characters

11.2 Kramer Protocol 3000 – Command List

Command	Description
#	Protocol handshaking
BUILD-DATE	Read device build date
COM-ROUTE	Set/get tunneling port routing
COM-ROUTE-ADD	Add communication route tunnel connection
COM-ROUTE-REMOVE	Remove communication route tunnel connection
DEL	Deletes a file
DIR	List files
ETH-PORT	Sets protocol port
ETH-TUNNEL	Get parameters for open tunnels
FACTORY	Restart the machine with the default
FORMAT	Format the file system
FS-FREE	Print free file space
GET	Get file content
GPIO-CFG	Set/get HW GPIO configuration
GPIO-STATE	Set/get HW GPIO state
GPIO-STEP	Set/get HW GPIO step
GPIO-THR	Set/get HW GPIO threshold voltage
GPIO-VOLT	Get HW GPIO voltage level
HELP	List of commands
IR-LEARN	Send IR learning command
IR-SND	Send IR command to port
IR-STOP	Stop IR command to port
LOGIN	Set/get protocol permission
LOGOUT	Demotes the terminal security level to minimum
MACH-NUM	Set device ID
MODEL	Read device model
NAME	Set/get device (DNS) name
NAME-RST	Reset device name to default
NET-DHCP	Set/get DHCP mode
NET-GATE	Set/get gateway IP
NET-IP	Set/get device IP address
NET-MAC	Get the MAC address
NET-MASK	Set/get the device subnet mask
PASS	Set/get the password for login level
PORT-LOCK	Set/get the port lock state
PORT-TYPE	Set/get the port type
PROT-VER	Get protocol version
RELAY-STATE	Set/get relay state
RESET	Reset device
SECUR	Set/get current security state
SN	Get device serial number
TIME	Set/get the time
TIME-LOC	Set/get local time offset from UTC/GMT

Command	Description
TIME-SRV	Set/get time synchronization from server
UART	Set/get a port serial parameters
VERSION	Get firmware version number

11.3 Kramer Protocol 3000 – Detailed Commands

This section lists the detailed commands applicable to the **FC-54P**.

11.3.1

Functions		Permission	Transparency
Set:	#	End User	Public
Get:	-	-	-
Description		Syntax	
Set:	Protocol handshaking	# CR	
Get:	-	-	
Response			
~ nn @ SE OK CR LF			
Parameters			
Response Triggers			
Notes			
Validates the Protocol 3000 connection and gets the machine number Step-in master products use this command to identify the availability of a device			
K-Config Example			
"#", 0x0D			

11.3.2 BUILD-DATE

Functions		Permission	Transparency
Set:	-	-	-
Get:	BUILD-DATE?	End User	Public
Description		Syntax	
Set:	-	-	
Get:	Get device build date	#BUILD-DATE? CR	
Response			
~ nn @BUILD-DATE SP <i>date</i> SE <i>time</i> CR LF			
Parameters			
<i>date</i> – Format: YYYY/MM/DD where YYYY = Year, MM = Month, DD = Day			
<i>time</i> – Format: hh:mm:ss where hh = hours, mm = minutes, ss = seconds			
Response Triggers			
Notes			
K-Config Example			
"#BUILD-DATE?" , 0x0D			

11.3.3 COM-ROUTE

Functions		Permission	Transparency
Set:	COM-ROUTE	Administrator	Internal
Get:	COM-ROUTE?	End User	Internal
Description		Syntax	
Set:	Set tunneling port routing	#COM-ROUTE <input type="checkbox"/> <input type="checkbox"/> <i>COM_Num, portType, ETHPort, ETH_rep_en, TCP_keep_alive_timing</i> <input type="checkbox"/> <input type="checkbox"/>	
Get:	Get tunneling port routing	#COM-ROUTE? <input type="checkbox"/> <input type="checkbox"/> <i>COM_Num</i> <input type="checkbox"/> <input type="checkbox"/>	
Response			
~ <input type="checkbox"/> @COM-ROUTE <input type="checkbox"/> <i>COM_Num, portType, ETHPort, ETH_rep_en, TCP_keep_alive_timing</i> <input type="checkbox"/> <input type="checkbox"/>			
Parameters			
<p><i>COM_Num</i> - machine dependent <i>portType</i> - 1 (UDP), 2 (TCP) <i>ETHPort</i> - TCP/UDP port number <i>ETH_rep_en</i> - 1 (COM port sends replies to new clients), 0 (COM port does not send replies to new clients) <i>TCP_keep_alive_timing</i> - 0-3600 seconds - every x seconds the device sends an empty string to TCP client (" /0")</p>			
Response Triggers			
Notes			
This command sets tunneling port routing. Every com port can send or receive data from the ETH port. All com ports can be configured to the same ETH port.			
K-Config Example			
Set COM1 as RS-232, port 1, Eth port 1, send replies, keep alive 30 seconds: "#COM-ROUTE 1,1,1,1,30",0x0D			

11.3.4 COM-ROUTE-ADD

Functions		Permission	Transparency
Set:	COM-ROUTE-ADD	Administrator	Internal
Get:	-	-	-
Description		Syntax	
Set:	Add a communication route tunnel connection	#COM-ROUTE-ADD <input type="text" value="SP"/>	
Get:	-	ComNum,PortType,EthPort,EthRepEn,Timeout <input type="text" value="CR LF"/>	
Response			
~nn@COM-ROUTE-ADD <input type="text" value="SP"/> ComNum,PortType,EthPort,EthRepEn,Timeout <input type="text" value="CR LF"/>			
Parameters			
COMNum - machine dependent portType - 1 (UDP), 2 (TCP) ETHPort - TCP/UDP port number ETHRepEn - 1 (COM port sends replies to new clients), 0 (COM port does not send replies to new clients) Timeout - Keep alive timeout in seconds (1 to 3600)			
Response Triggers			
Notes			
K-Config Example			
Add COM1 port as TCP, port 1, Eth port 1, send replies, keep alive 30 seconds: "#COM-ROUTE-ADD 1,1,1,1,30",0x0D			

11.3.5 COM-ROUTE-REMOVE

Functions		Permission	Transparency
Set:	COM-ROUTE-REMOVE	Administrator	Internal
Get:	-	-	-
Description		Syntax	
Set:	Remove a communication route tunnel connection	#COM-ROUTE-REMOVE <input type="text" value="SP"/> ComNum <input type="text" value="CR"/>	
Get:	-	-	
Response			
~nn@COM-ROUTE-REMOVE <input type="text" value="SP"/> ComNum <input type="text" value="CR LF"/>			
Parameters			
ComNum – machine dependent			
Response Triggers			
Notes			
K-Config Example			
Remove comm port 1: "#COM-ROUTE-REMOVE 1",0x0D			

11.3.6 DEL

Functions		Permission	Transparency
Set:	DEL	Administrator	Public
Get:	-	-	-
Description		Syntax	
Set:	Delete file	#DEL <code>SP</code> <i>file_name</i> <code>CR</code>	
Get:			
Response			
~ <code>nn</code> @DEL <code>SP</code> <i>file_name</i> <code>CR</code>			
Parameters			
<i>file_name</i> - name of file to delete (file names are case-sensitive)			
Response Triggers			
K-Config Example			
Delete a file named "test": "DEL test",0x0D			

11.3.7 DIR

Functions		Permission	Transparency
Set:	DIR	Administrator	Public
Get:	-	-	-
Description		Syntax	
Set:	List files in device	#DIR <code>CR</code>	
Get:	-	-	
Response			
Multi-line: ~ <code>nn</code> @DIR <code>CR LF</code> <i>file_name</i> <code>TAB</code> <i>file_size</i> <code>SP</code> bytes, <code>SP</code> ID: <code>SP</code> <i>file_id</i> <code>CR LF</code> <code>TAB</code> <i>free_size</i> <code>SP</code> bytes. <code>CR LF</code>			
Parameters			
<i>file_name</i> - name of file <i>file_size</i> - file size in bytes. A file can take more space on device memory <i>file_id</i> - internal ID for file in file system <i>free_size</i> - free space in bytes in device file system			
Response Triggers			
K-Config Example			
"DIR",0x0D			

11.3.8 ETH-PORT

Functions		Permission	Transparency
Set:	ETH-PORT	Administrator	Public
Get:	ETH-PORT?	End User	Public
Description		Syntax	
Set:	Set Ethernet port protocol	#ETH-PORT _{SP} portType,ETHPort _{CR}	
Get:	Get Ethernet port protocol	#ETH-PORT? _{SP} portType _{CR}	
Response			
~nn@ETH-PORT _{SP} portType,ETHPort _{CR LF}			
Parameters			
portType - 1 (UDP), 2 (TCP) ETHPort - TCP/UDP port number			
Response Triggers			
K-Config Example			
Set ETH port 1 to UDP: "ETH-PORT 2,1",0x0D			

11.3.9 ETH-TUNNEL

Functions		Permission	Transparency
Set:	-	-	-
Get:	ETH-TUNNEL?	Administrator	Internal
Description		Syntax	
Set:			
Get:	Get parameters for open tunnels	#ETH-TUNNEL? _{SP} TunnelId _{CR}	
Response			
~nn@ETH-TUNNEL _{SP} TunnelId,ComNum,PortType,EthPort,EthIp,RemotPort,EthRepEn,Wired _{CR LF}			
Parameters			
TunnelId – tunnel ID number: 1–64 (depends on number of tunnel connections), * (all tunnel connections) ComNum – UART number portType - 1 (UDP), 2 (TCP) ETHPort – TCP/UDP port number EthIp – client IP address RemotPort – remote port number EthRepEn - 1 (COM port sends replies to new clients), 0 (COM port does not send replies to new clients) Wired - 1 (wired connection), 0 (not wired connection)			
Response Triggers			
Notes			
The response displays each tunnel in a separate line.			
K-Config Example			
"ETH-TUNNEL? 1",0x0D			

11.3.10 FACTORY

Functions		Permission	Transparency
Set:	FACTORY	End User	Public
Get:	-	-	-
Description		Syntax	
Set:	Reset device to factory default configuration	#FACTORY <code>CR</code>	
Get:	-	-	
Response			
~nn@FACTORY <code>SP</code> OK <code>CR LF</code>			
Parameters			
Response Triggers			
Notes			
This command deletes all user data from the device. The deletion can take some time. Your device may require powering off and powering on for the changes to take effect.			
K-Config Example			
"#FACTORY" , 0x0D			

11.3.11 FORMAT

Functions		Permission	Transparency
Set:	FORMAT	Administrator	Public
Get:	-	-	-
Description		Syntax	
Set:	Format file system	#FORMAT <code>CR</code>	
Get:	-	-	
Response			
~nn@FORMAT <code>SP</code> OK <code>CR LF</code>			
Parameters			
Response Triggers			
Notes			
Response could take several seconds until formatting completes			
K-Config Example			
"#FORMAT" , 0x0D			

11.3.12 FS-FREE

Functions		Permission	Transparency
Set:	-	-	-
Get:	FS-FREE?	Administrator	Public
Description		Syntax	
Set:	-	-	
Get:	Get file system free space	#FS-FREE? CR	
Response			
~ nn @FS-FREE SP free_size CR LF			
Parameters			
<i>free_size</i> - free size in device file system in bytes			
Response Triggers			
K-Config Example			
"#FS-FREE?",0x0D			

11.3.13 GET

Functions		Permission	Transparency
Set:	-	-	-
Get:	GET	Administrator	Public
Description		Syntax	
Set:	-	-	
Get:	Get file	#GET SP file_name CR	
Response			
Multi-line: ~ nn @GET SP file_name,file_size SP READY CR LF contents ~ nn @GET SP file_name SP OK CR LF			
Parameters			
<i>file_name</i> - name of file to get contents <i>contents</i> - byte stream of file contents <i>file_size</i> - size of file (device sends it in response to give user a chance to get ready)			
Response Triggers			
K-Config Example			
Get a file named "test": "#GET test",0x0D			

11.3.14 GPIO-CFG

Functions		Permission	Transparency
Set:	GPIO-CFG	End User	Public
Get:	GPIO-CFG?	End User	Public
Description		Syntax	
Set:	Set HW GPIO configuration	#GPIO-CFG _{sp} <i>HwGpioNumber, HwGpioType, HwGpioDir, Pullup</i> _{cr}	
Get:	Get HW GPIO configuration	#GPIO-CFG _{sp} <i>HwGpioNumber</i> _{cr}	
Response			
~ _{nn} @GPIO-CFG _{sp} <i>HwGpioNum, HwGpioType, HwGpioDir</i> _{cr lf}			
Parameters			
<i>HwGpioNumber</i> – hardware GPIO number: 1-n <i>HwGpioType</i> – hardware GPIO type: 0 (analog), 1 (digital) <i>HwGpioDir</i> – hardware GPIO direction: 0 (input), 1 (output) <i>Pullup</i> – enable/disable pull-up: 0 (disable), 1 (enable)			
Response Triggers			
Notes			
K-Config Example			
Configure GPIO 2 to analog input with pullup disabled): "#GPIO-CFG 2,0,0,0",0x0D			

11.3.15 GPIO-STATE

Functions		Permission	Transparency
Set:	GPIO-STATE	End User	Public
Get:	GPIO-STATE?	End User	Public
Description		Syntax	
Set:	Set HW GPIO state	#GPIO-STATE _{SP} HwGpioNumber,HwGpioState _{CR}	
Get:	Get HW GPIO state	#GPIO-STATE _{SP} HwGpioNumber _{CR}	
Response			
~nn@GPIO-STATE _{SP} HwGpioNumber,HwGpioState _{CR LF}			
Parameters			
<i>HwGpioNumber</i> – hardware GPIO number: 1-n <i>HwGpioState</i> – hardware GPIO state – see note below			
Response Triggers			
Notes			
GPIO-STATE? can only be sent in digital out mode and the answer is 0 (low), 1 (high). In all other modes an error message is sent. The device uses this command to notify the user of any change regarding the step and voltage in: In digital mode the answer is 0 (low), 1 (high) In analog mode the answer is 0 to 100			
K-Config Example			
Configure GPIO 2 to low state: "#GPIO-STATE 2,0",0x0D			

11.3.16 GPIO-STEP

Functions		Permission	Transparency
Set:	GPIO-STEP	End User	Public
Get:	GPIO-STEP?	End User	Public
Description		Syntax	
Set:	Set HW GPIO step	#GPIO-STEP _{SP} HwGpioNumber,Step _{CR}	
Get:	Get HW GPIO step	#GPIO-STEP _{SP} HwGpioNumber _{CR}	
Response			
~nn@GPIO-STEP _{SP} HwGpioNumber,NumOfStep,CurrentStep _{CR LF}			
Parameters			
<i>HwGpioNumber</i> – HW GPIO number: 1-n <i>NumOfStep</i> – the configuration step – see note below <i>CurrentStep</i> – the actual step depending on the measured voltage			
Response Triggers			
Notes			
In digital mode the response is 2 In analog mode the response is 1 to 100 In other modes an error is returned			
K-Config Example			
Set GPIO 2 step 1 to 50: "#GPIO-STEP 2,1,50",0x0D			

11.3.17 GPIO-THR

Functions		Permission	Transparency
Set:	GPIO-THR	End User	Public
Get:	GPIO-THR?	End User	Public
Description		Syntax	
Set:	Set HW GPIO voltage levels	#GPIO-THR _{SP} HwGpioNumber,LowLevel,HighLevel _{CR LF}	
Get:	Get HW GPIO voltage levels	#GPIO-THR? _{SP} HwGpioNumber _{CR}	
Response			
~ _{nn} @GPIO-THR _{SP} HwGpioNumber,LowLevel,HighLevel _{CR LF}			
Parameters			
HwGpioNumber – hardware GPIO number: 1-n LowLevel – voltage 500 to 28000 millivolts HighLevel – voltage 2000 to 30000 millivolts			
Response Triggers			
Notes			
K-Config Example			
Set GPIO 1 voltage levels between 600mV to 15000mV: "#GPIO-THR 1,600,15000",0x0D			

11.3.18 GPIO-VOLT

Functions		Permission	Transparency
Set:	-	-	-
Get:	GPIO-VOLT?	End User	Public
Description		Syntax	
Set:			
Get:	Get voltage levels of HW GPIO	#GPIO-VOLT? _{SP} HwGpioNumber _{CR}	
Response			
~ _{nn} @GPIO-VOLT _{SP} HwGpioNumber,Voltage _{CR LF}			
Parameters			
HwGpioNumber – hardware GPIO number: 1-n Voltage – voltage 0 to 30000 millivolts			
Response Triggers			
Notes			
This command is not available in digital out mode			
K-Config Example			
"#GPIO-VOLT? 1",0x0D			

11.3.19 HELP

Functions		Permission	Transparency
Set:	-	-	-
Get:	HELP	End User	Public
Description		Syntax	
Set:	-	-	
Get:	Get command list or help for specific command	1. #HELP <code>[CR]</code> 2. #HELP <code>[SP]COMMAND_NAME[CR]</code>	
Response			
1. Multi-line: ~ <code>[nn]</code> @Device available protocol 3000 commands: <code>[CR LF]command, [SP]command... [CR LF]</code> 2. Multi-line: ~ <code>[nn]</code> @HELP <code>[SP]command: [CR LF]description [CR LF]USAGE:usage [CR LF]</code>			
Parameters			
<i>COMMAND_NAME</i> – name of a specific command			
Response Triggers			
Notes			
To get help for a specific command use: HELP <code>[SP]COMMAND_NAME [CR LF]</code>			
K-Config Example			
"#HELP", 0x0D			

11.3.20 IR-LEARN

Functions		Permission	Transparency
Set:	IR-LEARN	End User	Public
Get:	-	-	-
Description		Syntax	
Set:	Send IR learning command	#IR-LEARN <code>[SP]CommandName, Timeout [CR]</code>	
Get:	-	-	
Response			
~ <code>[nn]</code> @IR-LEARN <code>[SP]CommandName, IR_Status [CR LF]</code>			
Parameters			
<i>CommandName</i> – String: IR command name limited to 15 chars. Controlling device must send the correct name (whitespace or commas forbidden) <i>Timeout</i> - 1 to 60 (timeout in seconds) <i>IR_Status</i> - 0 (sent), 1 (stop), 2 (done), 3 (busy), 4 (wrong parameter), 5 (nothing to stop), 6 (start), 7 (timeout), 8 (error)			
Response Triggers			
K-Config Example			
Send the IR learning command volume up with a 3 second timeout: "#IR-LEARN vol_up, 3", 0x0D			

11.3.21 IR-SND

Functions		Permission	Transparency
Set:	IR-SND	End User	Public
Get:	-	-	-
Description		Syntax	
Set:	Send IR command to port	#IR-SND <u>SP</u> PortNum,Cmdid,CmdName,Repeat,TotalPackages,PackageNum,<pronto command...> <u>CR</u>	
Get:	-	-	
Response			
~ <u>nn</u> @IR-SND <u>SP</u> PortNum,Cmdid,CmdName,Status <u>CR LF</u>			
Parameters			
<p><i>PortNum</i> – IR port (1 to 4) transmitting the command. '*' broadcasts to all ports <i>Cmdid</i> – serial number of command for flow control and response commands from device <i>CmdName</i> – command name (length limit 15 chars) <i>Repeat</i> – number of times the IR command is transmitted (limited to 50; repeats > 50 are truncated to 50), 1 (default) <i>TotalPackages</i> – number of messages the original command was divided into, 1 (default) <i>PackageNum</i> – chunk serial number (only valid when Chnk_Num >1) <i>Pronto command</i> – Pronto format command (in HEX format, without leading zeros or '0x' prefix) <i>Status</i> – 0 (IR_SENT), 1 (IR_STOP), 2 (IR_BUSY), 3 (IR_WRONG_PARAM), 4 (IR_NOTHING_TO_STOP)</p>			
Response Triggers			
K-Config Example			
<p>Send a volume up command to port 3 and repeat five times: "#IR-SND 3,04,vol_up,5,1,1,4E 23 C4...",0x0D</p>			

11.3.22 IR-STOP

Functions		Permission	Transparency
Set:	IR-STOP	End User	Public
Get:	-	-	-
Description		Syntax	
Set:	Send IR stop command to port	#IR-STOP <i>SE</i> <i>PortNum</i> , <i>Cmdid</i> , <i>CmdName</i> <i>CR</i>	
Get:	-	-	
Response			
~ <i>nn</i> @IR-STOP <i>SE</i> <i>PortNum</i> , <i>Cmdid</i> , <i>CmdName</i> , <i>Status</i> <i>CR LF</i>			
Parameters			
<p><i>PortNum</i> – IR port (1 to 4) transmitting the command. "*" broadcasts to all ports <i>Cmdid</i> – serial number of command for flow control and response commands from device <i>CmdName</i> – a string, the alias of the IR command. The controlling device is responsible for sending the correct name <i>Status</i> – 0 (IR_SENT), 1 (IR_STOP), 2 (IR_BUSY), 3 (IR_WRONG_PARAM), 4 (IR-NOTHING_TO_STOP)</p>			
Response Triggers			
K-Config Example			
<p>Send a power off command to IR port 2: "#IR-STOP 2,06,power_off",0x0D</p>			

11.3.23 LOGIN

Functions		Permission	Transparency
Set:	LOGIN	Not Secure	Public
Get:	LOGIN?	Not Secure	Public
Description		Syntax	
Set:	Set protocol permission	#LOGIN <code>[SP]</code> <i>login_level,password</i> <code>[CR]</code>	
Get:	Get current protocol permission level	#LOGIN? <code>[CR]</code>	
Response			
Set: ~ <code>[nn]</code> @LOGIN <code>[SP]</code> <i>login_level,password</i> <code>[SP]</code> OK <code>[CR LF]</code>			
or			
~ <code>[nn]</code> @LOGIN <code>[SP]</code> ERR <code>[SP]</code> 004 <code>[CR LF]</code> (if bad password entered)			
Get: ~ <code>[nn]</code> @LOGIN <code>[SP]</code> <i>login_level</i> <code>[CR LF]</code>			
Parameters			
<i>login_level</i> – level of permissions required: User, Admin			
<i>password</i> – predefined password (by PASS command). Default password is an empty string			
Response Triggers			
Notes			
When the permission system is enabled, LOGIN enables running commands with the User or Administrator permission level			
When set, login must be performed upon each connection			
The permission system works only if security is enabled with the SECUR command. It is not mandatory to enable the permission system in order to use the device			
K-Config Example			
Set the protocol permission level to Admin (when the password defined in the PASS command is 33333): "#LOGIN Admin,33333",0x0D			

11.3.24 LOGOUT

Functions		Permission	Transparency
Set:	LOGOUT	Not Secure	Public
Get:	-	-	-
Description		Syntax	
Set:	Cancel current permission level	#LOGOUT <code>[CR]</code>	
Get:	-	-	
Response			
~ <code>[nn]</code> @LOGOUT <code>[SP]</code> OK <code>[CR LF]</code>			
Parameters			
Response Triggers			
Notes			
Logs out from User or Administrator permission levels			
K-Config Example			
"#LOGOUT",0x0D			

11.3.25 MACH-NUM

Functions		Permission	Transparency
Set:	MACH-NUM	End User	Public
Get:		-	-
Description		Syntax	
Set:	Set machine number (device ID)	#MACH-NUM SP machine_number CR	
Get:	-	-	
Response			
~nn@MACH-NUM SP machine_number CR LF			
Parameters			
machine_number – New machine number			
Response Triggers			
Notes			
The new machine number is only set after restarting the device.			
K-Config Example			
"#MACH-NUM 4", 0x0D			

11.3.26 MODEL

Functions		Permission	Transparency
Set:	-	-	-
Get:	MODEL?	End User	Public
Description		Syntax	
Set:	-	-	
Get:	Get device model	#MODEL? CR	
Response			
~nn@MODEL SP model_name CR LF			
Parameters			
model_name – String of up to 19 printable ASCII chars			
Response Triggers			
Notes			
This command identifies equipment connected to Step-in master products and notifies of identity changes to the connected equipment. The Matrix saves this data in memory to answer REMOTE-INFO requests			
K-Config Example			
"#MODEL?", 0x0D			

11.3.27 NAME

Functions		Permission	Transparency
Set:	NAME	Administrator	Public
Get:	NAME?	End User	Public
Description		Syntax	
Set:	Set machine (DNS) name	#NAME[SP]machine_name[CR]	
Get:	Get machine (DNS) name	#NAME?[CR]	
Response			
Set:	~nn@NAME[SP]machine_name[CR LF]		
Get:	~nn@NAME?[SP]machine_name[CR LF]		
Parameters			
<i>machine_name</i> - string of up to 15 alpha-numeric chars (can include hyphen, not at the beginning or end)			
Response Triggers			
Notes			
The machine name is not the same as the model name. The machine name is used to identify a specific machine or a network in use (with DNS feature on)			
K-Config Example			
Set machine name to FC-54P-4321: "#NAME FC-54P-4321" , 0x0D			

11.3.28 NAME-RST

Functions		Permission	Transparency
Set:	NAME-RST	Administrator	Public
Get:	-	-	-
Description		Syntax	
Set:	Reset machine (DNS) name to factory default	#NAME-RST <code>CR</code>	
Get:	-	-	
Response			
~nn@NAME-RST <code>SE</code> OK <code>CR LF</code>			
Parameters			
Response Triggers			
Notes			
Factory default of machine (DNS) name is "KRAMER_" + 4 last digits of device serial number			
K-Config Example			
"#NAME-RST", 0x0D			

11.3.29 NET-DHCP

Functions		Permission	Transparency
Set:	NET-DHCP	Administrator	Public
Get:	NET-DHCP?	End User	Public
Description		Syntax	
Set:	Set DHCP mode	#NET-DHCP <code>SE</code> mode <code>CR</code>	
Get:	Get DHCP mode	#NET-DHCP? <code>CR</code>	
Response			
~nn@NET-DHCP <code>SE</code> mode <code>CR LF</code>			
Parameters			
mode – 0 (do not use DHCP. Use the IP address set by the factory or the NET-IP command), 1 (try to use DHCP. If unavailable, use the IP address set by the factory or the NET-IP command)			
Response Triggers			
Notes			
Connecting Ethernet to devices with DHCP may take more time in some networks To connect with a randomly assigned IP by DHCP, specify the device DNS name (if available) using the NAME command. You can also get an assigned IP by direct connection to USB or RS-232 protocol port if available Consult your network administrator for correct settings			
K-Config Example			
Enable DHCP mode, if available: "#NET-DHCP 1", 0x0D			

11.3.30 NET-GATE

Functions		Permission	Transparency
Set:	NET-GATE	Administrator	Public
Get:	NET-GATE?	End User	Public
Description		Syntax	
Set:	Set gateway IP	#NET-GATE <code>[SP]</code> <code>ip_address</code> <code>[CR]</code>	
Get:	Get gateway IP	#NET-GATE? <code>[CR]</code>	
Response			
~ <code>[nn]</code> @NET-GATE <code>[SP]</code> <code>ip_address</code> <code>[CR LF]</code>			
Parameters			
<i>ip_address</i> – gateway IP address, in the following format: xxx . xxx . xxx . xxx			
Response Triggers			
Notes			
A network gateway connects the device via another network, possibly over the Internet. Be careful of security problems. Consult your network administrator for correct settings.			
K-Config Example			
Set the gateway IP address to 192.168.0.1: "#NET-GATE 192.168.000.001",0x0D			

11.3.31 NET-IP

Functions		Permission	Transparency
Set:	NET-IP	Administrator	Public
Get:	NET-IP?	End User	Public
Description		Syntax	
Set:	Set IP address	#NET-IP <code>[SP]</code> <code>ip_address</code> <code>[CR]</code>	
Get:	Get IP address	#NET-IP? <code>[CR]</code>	
Response			
~ <code>[nn]</code> @NET-IP <code>[SP]</code> <code>ip_address</code> <code>[CR LF]</code>			
Parameters			
<i>ip_address</i> – IP address, in the following format: xxx . xxx . xxx . xxx			
Response Triggers			
Notes			
Consult your network administrator for correct settings			
K-Config Example			
Set the IP address to 192.168.1.39: "#NET-IP 192.168.001.039",0x0D			

11.3.32 NET-MAC

Functions		Permission	Transparency
Set:	-	-	-
Get:	NET-MAC?	End User	Public
Description		Syntax	
Set:	-	-	
Get:	Get MAC address	#NET-MAC? CR	
Response			
~ nn @NET-MAC SP mac_address CR LF			
Parameters			
mac_address – unique MAC address. Format: XX-XX-XX-XX-XX-XX where x is hex digit			
Response Triggers			
Notes			
K-Config Example			
"#NET-MAC?", 0x0D			

11.3.33 NET-MASK

Functions		Permission	Transparency
Set:	NET-MASK	Administrator	Public
Get:	NET-MASK?	End User	Public
Description		Syntax	
Set:	Set subnet mask	#NET-MASK SP net_mask CR	
Get:	Get subnet mask	#NET-MASK? CR	
Response			
~ nn @NET-MASK SP net_mask CR LF			
Parameters			
net_mask - format: xxx.xxx.xxx.xxx			
Response Triggers			
The subnet mask limits the Ethernet connection within the local network Consult your network administrator for correct settings			
Notes			
K-Config Example			
Set the subnet mask to 255.255.0.0: "#NET-MASK 255.255.000.000", 0x0D			

11.3.34 PASS

Functions		Permission	Transparency
Set:	PASS	Administrator	Public
Get:	PASS?	Administrator	Public
Description		Syntax	
Set:	Set password for login level	#PASS[SP]login_level,password[CR]	
Get:	Get password for login level	#PASS?[SP]login_level[CR]	
Response			
~nn@PASS[SP]login_level,password[CR LF]			
Parameters			
login_level – level of login to set: User, Admin password – password for the login_level. Up to 15 printable ASCII chars.			
Response Triggers			
Notes			
The default password is an empty string			
K-Config Example			
Set the password for the Admin protocol permission level to 33333: "#PASS Admin,33333",0x0D			

11.3.35 PORT-LOCK

Functions		Permission	Transparency
Set:	PORT-LOCK	End User	Public
Get:	PORT-LOCK?	End User	Public
Description		Syntax	
Set:	Set the port lock	#PORT-LOCK[SP]PortNumber,LockState[CR]	
Get:	Get the port lock state	#PORT-LOCK?[SP]PortNumber[CR]	
Response			
~nn@PORT-LOCK[SP]PortNumber,LockState[CR LF]			
Parameters			
PortNumber - port number: 1-n LockState – 1 (lock), 0 (unlock)			
Response Triggers			
Notes			
K-Config Example			
Lock port 3: "#PORT-LOCK 3, 1",0x0D			

11.3.36 PORT-TYPE

Functions		Permission	Transparency
Set:	PORT-TYPE	End User	Public
Get:	PORT-TYPE?	End User	Public
Description		Syntax	
Set:	Change the port type	#PORT-TYPE[SP]PortNumber,PortType,PortName,485Term[CR]	
Get:	Get the port type	#PORT-TYPE?[SP]PortNumber[CR]	
Response			
~[n]@PORT-TYPE[SP]PortNumber,PortType,PortName,485Term[CR LF]			
Parameters			
<i>PortNumber</i> - port number: 1-n <i>PortType</i> - 0 (RS-232), 1 (RS-232X), 2 (RS-485), 3 (Relay), 4 (IR), 5 (GPIO) <i>PortName</i> - A string describing the port type <i>485Term</i> - 485 termination state: 1 (enable), 0 (disable)			
Response Triggers			
Notes			
485Term is effective only when the port type is UART			
K-Config Example			
Change port 3 to relay and name it blinds: "#PORT-TYPE 3,3,blinds",0x0D			

11.3.37 RELAY-STATE

Functions		Permission	Transparency
Set:	RELAY-STATE	End User	Public
Get:	RELAY-STATE?	End User	Public
Description		Syntax	
Set:	Set relay state	#RELAY-STATE[SP]RelayNumber,RelayState[CR]	
Get:	Get relay state	#RELAY-STATE?[SP]RelayNumber[CR]	
Response			
~[n]@RELAY-STATE[SP]RelayNum,RelayState[CR LF]			
Parameters			
<i>RelayNumber</i> - relay number: 1-2 <i>RelayState</i> - relay state: 0 (open), 1 (close)			
Response Triggers			
Notes			
K-Config Example			
Close relay 2: "#RELAY-STATE 2, 1",0x0D			

11.3.38 PROT-VER

Functions		Permission	Transparency
Set:	-	-	-
Get:	PROT-VER?	End User	Public
Description		Syntax	
Set:	-	-	
Get:	Get device protocol version	#PROT-VER? CR	
Response			
~mm@PROT-VERSE3000:version CR LF			
Parameters			
version - XX.XX where X is a decimal digit			
Response Triggers			
Notes			
K-Config Example			
"#PROT-VER?", 0x0D			

11.3.39 RESET

Functions		Permission	Transparency
Set:	RESET	Administrator	Public
Get:	-	-	-
Description		Syntax	
Set:	Reset device	#RESET CR	
Get:	-	-	
Response			
~mm@RESETSEOK CR LF			
Parameters			
Response Triggers			
Notes			
To avoid locking the port due to a USB bug in Windows, disconnect USB connections immediately after running this command. If the port was locked, disconnect and reconnect the cable to reopen the port.			
K-Config Example			
"#RESET", 0x0D			

11.3.40 SECUR

Functions		Permission	Transparency
Set:	SECUR	Administrator	Public
Get:	SECUR?	Not Secure	Public
Description		Syntax	
Set:	Start/stop security	#SECUR[SP]security_mode[CR]	
Get:	Get current security state	#SECUR?[CR]	
Response			
~nn@SECUR[SP]security_mode[CR LF]			
Parameters			
security_mode – 1 (on / enable security), 0 (off / disable security)			
Response Triggers			
Notes			
The permission system works only if security is enabled with the SECUR command			
K-Config Example			
Enable the permission system: "#SECUR 0", 0x0D			

11.3.41 SN

Functions		Permission	Transparency
Set:	-	-	-
Get:	SN?	End User	Public
Description		Syntax	
Set:	-	-	
Get:	Get device serial number	#SN?[CR]	
Response			
~nn@SN[SP]serial_number[CR LF]			
Parameters			
serial_number – 11 decimal digits, factory assigned			
Response Triggers			
Notes			
This device has a 14 digit serial number, only the last 11 digits are displayed			
K-Config Example			
"#SN?", 0x0D			

11.3.42 TIME

Functions		Permission	Transparency
Set:	TIME	Administrator	Public
Get:	TIME?	End User	Public
Description		Syntax	
Set:	Set device time and date	#TIME <code>[SP]</code> <code>[day_of_week,date,time]</code> <code>[CR]</code>	
Get:	Get device time and date	#TIME? <code>[CR]</code>	
Response			
~ <code>[nn]</code> @TIME <code>[SP]</code> <code>[day_of_week,date,time]</code> <code>[CR LF]</code>			
Parameters			
<i>day_of_week</i> - one of: SUN, MON, TUE, WED, THU, FRI, SAT			
<i>date</i> - format: DD-MM-YYYY			
<i>time</i> - format: hh:mm:ss			
Response Triggers			
Notes			
The year must be 4 digits			
The device does not validate the day of week from the date			
Time format - 24 hours			
Date format - Day, Month, Year			
K-Config Example			
Set the time to 09:45, Tuesday, 01-July-2015: "#TIME TUE,01-07-2015,09:45:00",0x0D			

11.3.43 TIME-LOC

Functions		Permission	Transparency
Set:	TIME-LOC	End User	Public
Get:	TIME-LOC?	End User	Public
Description		Syntax	
Set:	Set local time offset from UTC/GMT	#TIME-LOC <code>[SP]</code> <code>[UTC_off,DayLight]</code> <code>[CR]</code>	
Get:	Get local time offset from UTC/GMT	#TIME-LOC? <code>[CR]</code>	
Response			
~ <code>[nn]</code> @TIME-LOC <code>[SP]</code> <code>[UTC_off,DayLight]</code> <code>[CR LF]</code>			
Parameters			
<i>UTC_off</i> - offset of device time from UTC/GMT (without daylight time correction)			
<i>DayLight</i> - 0 (no daylight saving time), 1 (daylight saving time)			
Response Triggers			
Notes			
If the time server is configured, device time calculates by adding UTC_off to UTC time (that it got from the time server) + 1 hour if daylight savings time is in effect			
TIME command sets the device time without considering these settings			
K-Config Example			
Set the time offset to GMT +2, standard time: "#TIME-LOC 2,0",0x0D			

11.3.44 TIME-SRV

Functions		Permission	Transparency
Set:	TIME-SRV	Administrator	Public
Get:	TIME-SRV?	End User	Public
Description		Syntax	
Set:	Set time server	#TIME-SRV ^{SP} <i>mode,time_server_IP,time_server_Sync_Hour</i> ^{CR}	
Get:	Get time server	#TIME-SRV? ^{CR}	
Response			
~ ⁿⁿ @TIME-SRV ^{SP} <i>mode,time_server_IP,time_server_Sync_Hour,server_status</i> ^{CR LF}			
Parameters			
<i>mode</i> - 0 (off), 1 (on) <i>time_server_IP</i> - time server IP address <i>time_server_Sync_Hour</i> - hour in day for time server sync <i>server_status</i> - ON/OFF			
Response Triggers			
Notes			
This command is needed for setting UDP timeout for the current client list			
K-Config Example			
Connect the device to a time server at a given IP address, activate and sync at 6AM: "#TIME-SRV 1,xxx.xxx.xxx.xxx,06",0x0D			

11.3.45 UART

Functions		Permission	Transparency
Set:	UART	Administrator	Public
Get:	UART?	End User	Public
Description		Syntax	
Set:	Set com port configuration	#UART ^[SP] <i>COM_Num, baud_rate, data_bit, parity, stop_bit</i> ^[CR]	
Get:	Get com port configuration	#UART? ^[SP] <i>COM_Num</i> ^[CR]	
Response			
Set: ~ ^[nn] @UART ^[SP] <i>COM_Num, baud_rate, data_bit, parity, stop_bit</i> ^[CR Lf]			
Get: ~ ^[nn] @UART ^[SP] <i>COM_Num, baud_rate, data_bit, parity, stop_bit, serial1_type, 485_term</i> ^[CR Lf]			
Parameters			
<i>COM_Num</i> - 1-2			
<i>baud_rate</i> - 9600-115200			
<i>data_bit</i> - 7-8			
<i>parity</i> - N (none), O (odd), E (even), M (mark), S (space)			
<i>stop_bit</i> - 1-2			
<i>serial1_type</i> - 0 (RS-232), 1 (RS-485)			
<i>485_term</i> - 1/0 (optional - this exists exist only when serial1_type = 485)			
Response Triggers			
Notes			
In FC-54P the serial port is selectable to RS-232 or RS-485 (usually serial port 1). If Serial1 is configured when RS-485 is selected, the RS-485 UART port is automatically changed			
K-Config Example			
Configure RS-232 com port 1 to 9600 baud, 8 data bits, no parity, 1 stop bit: "#UART 1,9600,8,N,1,0"0x0D			

11.3.46 VERSION

Functions		Permission	Transparency
Set:	-	-	-
Get:	VERSION?	End User	Public
Description		Syntax	
Set:	-	-	
Get:	Get firmware version number	#VERSION? CR	
Response			
~ nn @VERSION SP firmware_version CR LF			
Parameters			
<i>firmware_version</i> – XX.XX.XXXX where the digit groups are: major.minor.build version			
Response Triggers			
Notes			
K-Config Example			
"#VERSION?" , 0x0D			

LIMITED WARRANTY

The warranty obligations of Kramer Electronics for this product are limited to the terms set forth below:

What is Covered

This limited warranty covers defects in materials and workmanship in this product.

What is Not Covered

This limited warranty does not cover any damage, deterioration or malfunction resulting from any alteration, modification, improper or unreasonable use or maintenance, misuse, abuse, accident, neglect, exposure to excess moisture, fire, improper packing and shipping (such claims must be presented to the carrier), lightning, power surges, or other acts of nature. This limited warranty does not cover any damage, deterioration or malfunction resulting from the installation or removal of this product from any installation, any unauthorized tampering with this product, any repairs attempted by anyone unauthorized by Kramer Electronics to make such repairs, or any other cause which does not relate directly to a defect in materials and/or workmanship of this product. This limited warranty does not cover cartons, equipment enclosures, cables or accessories used in conjunction with this product.

Without limiting any other exclusion herein, Kramer Electronics does not warrant that the product covered hereby, including, without limitation, the technology and/or integrated circuit(s) included in the product, will not become obsolete or that such items are or will remain compatible with any other product or technology with which the product may be used.

How Long Does this Coverage Last

Seven years as of this printing; please check our Web site for the most current and accurate warranty information.

Who is Covered

Only the original purchaser of this product is covered under this limited warranty. This limited warranty is not transferable to subsequent purchasers or owners of this product.

What Kramer Electronics will do

Kramer Electronics will, at its sole option, provide one of the following three remedies to whatever extent it shall deem necessary to satisfy a proper claim under this limited warranty:

1. Elect to repair or facilitate the repair of any defective parts within a reasonable period of time, free of any charge for the necessary parts and labor to complete the repair and restore this product to its proper operating condition. Kramer Electronics will also pay the shipping costs necessary to return this product once the repair is complete.
2. Replace this product with a direct replacement or with a similar product deemed by Kramer Electronics to perform substantially the same function as the original product.
3. Issue a refund of the original purchase price less depreciation to be determined based on the age of the product at the time remedy is sought under this limited warranty.

What Kramer Electronics will not do Under This Limited Warranty

If this product is returned to Kramer Electronics or the authorized dealer from which it was purchased or any other party authorized to repair Kramer Electronics products, this product must be insured during shipment, with the insurance and shipping charges prepaid by you. If this product is returned uninsured, you assume all risks of loss or damage during shipment. Kramer Electronics will not be responsible for any costs related to the removal or re-installation of this product from or into any installation. Kramer Electronics will not be responsible for any costs related to any setting up this product, any adjustment of user controls or any programming required for a specific installation of this product.

How to Obtain a Remedy under this Limited Warranty

To obtain a remedy under this limited warranty, you must contact either the authorized Kramer Electronics reseller from whom you purchased this product or the Kramer Electronics office nearest you. For a list of authorized Kramer Electronics resellers and/or Kramer Electronics authorized service providers, please visit our web site at www.kramerelectronics.com or contact the Kramer Electronics office nearest you.

In order to pursue any remedy under this limited warranty, you must possess an original, dated receipt as proof of purchase from an authorized Kramer Electronics reseller. If this product is returned under this limited warranty, a return authorization number, obtained from Kramer Electronics, will be required. You may also be directed to an authorized reseller or a person authorized by Kramer Electronics to repair the product.

If it is decided that this product should be returned directly to Kramer Electronics, this product should be properly packed, preferably in the original carton, for shipping. Cartons not bearing a return authorization number will be refused.

Limitation on Liability

THE MAXIMUM LIABILITY OF KRAMER ELECTRONICS UNDER THIS LIMITED WARRANTY SHALL NOT EXCEED THE ACTUAL PURCHASE PRICE PAID FOR THE PRODUCT. TO THE MAXIMUM EXTENT PERMITTED BY LAW, KRAMER ELECTRONICS IS NOT RESPONSIBLE FOR DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM ANY BREACH OF WARRANTY OR CONDITION, OR UNDER ANY OTHER LEGAL THEORY. Some countries, districts or states do not allow the exclusion or limitation of relief, special, incidental, consequential or indirect damages, or the limitation of liability to specified amounts, so the above limitations or exclusions may not apply to you.

Exclusive Remedy

TO THE MAXIMUM EXTENT PERMITTED BY LAW, THIS LIMITED WARRANTY AND THE REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL OR WRITTEN, EXPRESS OR IMPLIED. TO THE MAXIMUM EXTENT PERMITTED BY LAW, KRAMER ELECTRONICS SPECIFICALLY DISCLAIMS ANY AND ALL IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. IF KRAMER ELECTRONICS CANNOT LAWFULLY DISCLAIM OR EXCLUDE IMPLIED WARRANTIES UNDER APPLICABLE LAW, THEN ALL IMPLIED WARRANTIES COVERING THIS PRODUCT, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL APPLY TO THIS PRODUCT AS PROVIDED UNDER APPLICABLE LAW.

IF ANY PRODUCT TO WHICH THIS LIMITED WARRANTY APPLIES IS A "CONSUMER PRODUCT" UNDER THE MAGNUSON-MOSS WARRANTY ACT (15 U.S.C.A. §2301, ET SEQ.) OR OTHER APPLICABLE LAW, THE FOREGOING DISCLAIMER OF IMPLIED WARRANTIES SHALL NOT APPLY TO YOU, AND ALL IMPLIED WARRANTIES ON THIS PRODUCT, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR THE PARTICULAR PURPOSE, SHALL APPLY AS PROVIDED UNDER APPLICABLE LAW.


Other Conditions

This limited warranty gives you specific legal rights, and you may have other rights which vary from country to country or state to state.

This limited warranty is void if (i) the label bearing the serial number of this product has been removed or defaced, (ii) the product is not distributed by Kramer Electronics or (iii) this product is not purchased from an authorized Kramer Electronics reseller. If you are unsure whether a reseller is an authorized Kramer Electronics reseller, please visit our Web site at www.kramerelectronics.com or contact a Kramer Electronics office from the list at the end of this document.

Your rights under this limited warranty are not diminished if you do not complete and return the product registration form or complete and submit the online product registration form. Kramer Electronics thanks you for purchasing a Kramer Electronics product. We hope it will give you years of satisfaction.

KRAMER

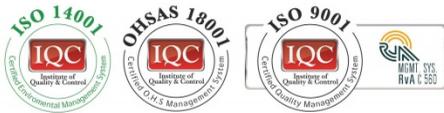

P/N:



2900-300626

Rev: 1



SAFETY WARNING

Disconnect the unit from the power supply before opening and servicing

For the latest information on our products and a list of Kramer distributors, visit our Web site to find updates to this user manual.

We welcome your questions, comments, and feedback.

www.KramerAV.com
info@KramerAV.com