



# CSI-8H8CV2IR

8 HDMI over CAT6 Point-to-Point Transmitter  
(with IR Matrix)



Operation Manual



## DISCLAIMERS

The information in this manual has been carefully checked and is believed to be accurate. Cypress Technology assumes no responsibility for any infringements of patents or other rights of third parties which may result from its use.

Cypress Technology assumes no responsibility for any inaccuracies that may be contained in this document. Cypress also makes no commitment to update or to keep current the information contained in this document.

Cypress Technology reserves the right to make improvements to this document and/or product at any time and without notice.

## COPYRIGHT NOTICE

No part of this document may be reproduced, transmitted, transcribed, stored in a retrieval system, or any of its part translated into any language or computer file, in any form or by any means—electronic, mechanical, magnetic, optical, chemical, manual, or otherwise—without express written permission and consent from Cypress Technology.

© Copyright 2011 by Cypress Technology.

All Rights Reserved.

Version 1.1 August 2011

## TRADEMARK ACKNOWLEDGMENTS

All products or service names mentioned in this document may be trademarks of the companies with which they are associated.





## SAFETY PRECAUTIONS

Please read all instructions before attempting to unpack, install or operate this equipment and before connecting the power supply.

Please keep the following in mind as you unpack and install this equipment:

- Always follow basic safety precautions to reduce the risk of fire, electrical shock and injury to persons.
- To prevent fire or shock hazard, do not expose the unit to rain, moisture or install this product near water.
- Never spill liquid of any kind on or into this product.
- Never push an object of any kind into this product through any openings or empty slots in the unit, as you may damage parts inside the unit.
- Do not attach the power supply cabling to building surfaces.
- Use only the supplied power supply unit (PSU). Do not use the PSU if it is damaged.
- Do not allow anything to rest on the power cabling or allow any weight to be placed upon it or any person walk on it.
- To protect the unit from overheating, do not block any vents or openings in the unit housing that provide ventilation and allow for sufficient space for air to circulate around the unit.

## REVISION HISTORY

VERSION NO.	DATE DD/MM/YY	SUMMARY OF CHANGE
VR0	11/07/12	Preliminary Release



# CONTENTS

<b>1. Introduction</b> .....	1
<b>2. Applications</b> .....	1
<b>3. Package Contents</b> .....	1
<b>4. System Requirements</b> .....	1
<b>5. Features</b> .....	2
<b>6. Operation Controls and Functions</b> .....	3
6.1 Front Panel.....	3
6.2 Rear Panel.....	4
6.3 Remote Control for IR Matrix.....	5
6.4 IR Custom Code .....	5
6.5 Discrete IR Codes.....	6
6.6 IR Dip Switch Position with Output Selection..	6
6.7 IR Cable Pin Assignment.....	7
6.8 RS-232 Pin Assignments.....	8
6.9 RS-232 Commands for IR Matrix.....	9
<b>7. Connection Diagram</b> .....	11
<b>8. Specifications</b> .....	13
<b>9. Acronyms</b> .....	14





## 1. INTRODUCTION

The 8 HDMI over CAT6 Point-to-Point Transmitter (with IR Matrix) supports the transmission of Video (up to 1080p Full HD/1920×1200@60 Hz) with multichannel digital audio, up to eight pairs of high definition source and CAT5e/6 output. It supports digital audio formats such as LPCM 7.1CH, Dolby TrueHD, Dolby Digital Plus and DTS-HD Master Audio. 3D content can be displayed when connecting a 3DTV and 3D source. The Transmitter allows the point-to-point connection between source equipment and output display, over distances up to 100 meters along with PoE (Power over Ethernet) feature. There is a built-in crosspoint IR matrix providing additional control over 8-in-8-out IR channels.

## 2. APPLICATIONS

- Commercial advertising and display
- Lecture room display and control
- Hyper market demonstration and control
- Any Smart AV Installation

## 3. PACKAGE CONTENTS

- HDMI over CAT6 Transmitter with 8×8 IR Matrix
- 8×Receiver for HDMI over CAT6 (Optional)
- 2×IR Extender
- 2×IR Blaster
- 24V/6.25A DC Adaptor
- Remote Control with 3V battery
- Operation Manual

## 4. SYSTEM REQUIREMENTS

- HDMI equipped input source devices with HDMI cables
- HDMI equipped output displays (TVs or monitors) or HDMI equipped AV receivers with HDMI cables
- Industry standard CAT5e/6/7 cables


## 5. FEATURES

- HDMI, HDCP1.1 and DVI compliant
- Supports HDMI 3D, 4k x 2k features
- Supports Stereo digital audio signal input and output
- Supports high bit-rate audio up to 192kHz
- Supports resolutions VGA~WUXGA and 480i~1080p dependent upon the output display's EDID settings
- Supports extension up to 100 meters through CAT5e/6
- Supports 3D signal display dependent upon the output display's EDID settings
- Supports HDMI input up to 10 meters at 8-bit resolution or 3 meters at 12-bit resolution
- Supports bi-directional IR from input and output locations
- Supports RS-232, remote control and on-panel control
- Supports PoE (Power over Ethernet) on compatible receivers only
- 2U size design

*Note: The PoE function is designed for powering compatible receiver units only—non-PoE receivers will need their own power supply. Receivers of another brand may not be compatible.*

## 6. OPERATION CONTROLS AND FUNCTIONS


### 6.1 Front Panel

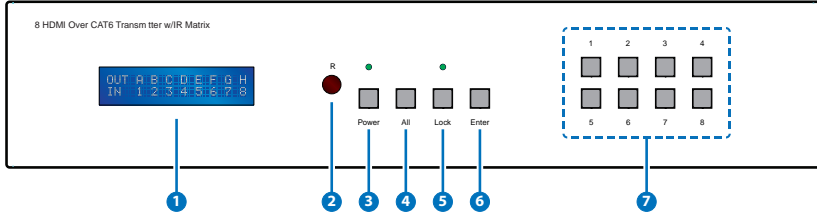

- 1 LCM:** Displays the information for each IR input and output setting.
- 2 IR:** IR Receiver window (accepts the remote control signal of this device and all output displays or source devices).
- 3 Power:** Press this button to power the device on/off. The LED will illuminate green when the power is on, red when it is in 'Standby' mode.
- 4 All:** Press this button to select all IR output with one IR input signal. The sequence should be pressed ALL → Number Key → ENTER.
- 5 Lock:** Press this button to lock all the buttons on the panel; press again to unlock. The LED will illuminate in green when locked.
- 6 Enter:** Press this button to confirm when changing a setting.
- 7 Selection 1-8**  
When selecting the IR input for a specific IR output, press the Number Key first to select the output and then press the Number Key again to select the input.



## 6.2 Rear Panel

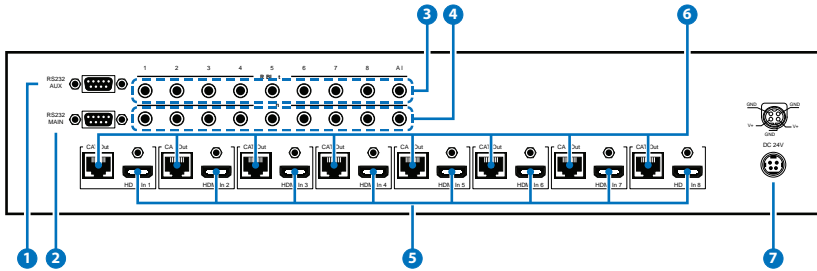

- 1 **RS-232 AUX:** Connect to a device that can be controlled (via D-Sub 9-pin male cable) by RS-232 commands.
- 2 **RS-232 MAIN:** Connect to a PC or laptop with D-Sub 9-pin male cable for the transmission of RS-232 commands.
- 3 **IR Blaster 1~All:** Connect the supplied IR blasters (included in the package) for IR signal transmission. Place the IR blaster in direct line-of-sight of the equipment to be controlled.
- 4 **IR Extender 1~All:** Connect the supplied IR extenders (included in the package) for IR signal reception. Ensure that remote being used is within the direct line-of-sight of the IR extender.
- 5 **HDMI In 1~8:** Connect to the HDMI input source devices such as a DVD player or a Set-top Box with HDMI cables or DVI to HDMI cables.
- 6 **CAT Out 1~8:** Connect to the CAT in port of receiver units with a single CAT5e/6/7 cable for HDMI Audio/Video and IR/RS-232 control signal sending.  
*Note: Do NOT connect these CAT outputs to the LAN port of receiver units—this will cause serious damage to the receiver unit.*
- 7 **DC 24V:** Plug the 24V DC power supply (included in the package) into the unit and connect the adaptor to an AC outlet. This unit will also power PoE (Power over Ethernet) capable receiver units.

### 6.3 Remote Control for IR Matrix

The remote control unit included in the package is for IR Matrix only, and can be used to control the IR channel mapping of individual or all receivers, depends on the dipswitch setting.

There are total of four dipswitches, when all of them are set to ON/↑, the remote control unit is able to control the IR routing of all receivers. For example, if you want to set up the bi-directional IR channel between Output A receiver and Input 5, simply press A first and then press 5.

You can set the remote control unit to control the IR routing of single receiver only, please refer to the dipswitch settings in section 6.6. For example, when all dipswitches are set to OFF/↓, only the IR channel of Output A receiver can be selected, when you want to set up the bi-directional IR channel between Output A receiver and Input 3, simply press 3.



### 6.4 IR Custom Code

NO.	DATA	NO.	DATA
1	88	A	8A
2	8C	B	8E
3	90	C	92
4	85	D	C6
5	C2	E	99
6	9C	F	98
7	D8	G	84
8	87	H	97

## 6.5 Discrete IR Codes



Select / Dipswitch	Custom Code
output A ↓↓↓↓	807F
output B ↑↓↓↓	807B
output C ↓↑↓↓	8077
output D ↑↑↓↓	8073
output E ↓↓↑↓	803F
output F ↑↑↑↓	803B
output G ↓↑↑↓	8037
output H ↑↑↑↓	8033



## 6.6 IR Dip Switch Position with Output Selection

	Selects OUTPUT A		Selects OUTPUT E
	Selects OUTPUT B		Selects OUTPUT F
	Selects OUTPUT C		Selects OUTPUT G
	Selects OUTPUT D		Selects OUTPUT H

## 6.7 IR Cable Pin Assignment

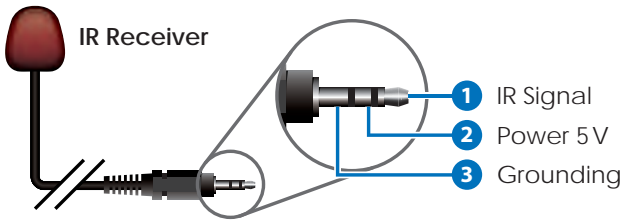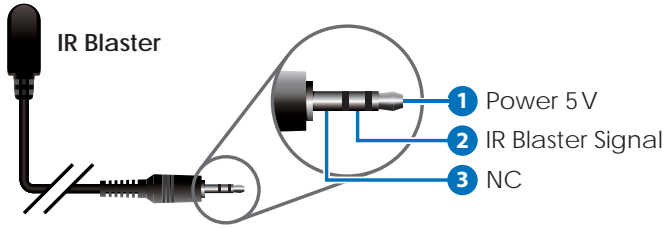

## 6.8 RS-232 Pin Assignments

CSI-8H8CV2IR			Remote Control Console	
PIN	Assignment		PIN	Assignment
1	NC		1	NC
2	TX		2	RX
3	RX	→	3	TX
4	NC		4	NC
5	GND	←	5	GND
6	NC		6	NC
7	NC		7	NC
8	NC		8	NC
9	NC		9	NC

Baud Rate: 19200 bps/A or 9600/B

Data bit: 8-bit

Parity: None

Stop bit: 1-bit

Flow Control: None

## 6.9 RS-232 Commands for IR Matrix

Command A	Description
A1~A8	Switch Output A to 1~8
B1~B8	Switch Output B to 1~8
C1~C8	Switch Output C to 1~8
D1~D8	Switch Output D to 1~8
E1~E8	Switch Output E to 1~8
F1~F8	Switch Output F to 1~8
G1~G8	Switch Output G to 1~8
H1~H8	Switch Output H to 1~8
ABCD...1~ABCD...8	Switch Output A B C D... to 1~8 at the same time
P0	Power OFF
P1	Power ON
I1~I8	Switch all the Output to 1~8
ST	Display the current matrix status and F/W version
RS	System reset to A1, B2, C3, D4, E5, F6, G7, H8
?	Display all available commands

Note: 1. Press "ALL" + "ENTER" + "1" buttons all together from the panel to switch RS-232 to A and the LCM will display baud rate 19200bps.


2. Command "RS" will reset output A~H to 1~8 and shut down the device automatically.

Command B	Description
POWER 00	Power Off (Standby)
POWER 01	Power On
PORT 11~18	Output A select Input1~8
PORT 21~28	Output B select Input1~8
PORT 31~38	Output C select Input1~8
PORT 41~48	Output D select Input1~8
PORT 51~58	Output E select Input1~8
PORT 61~68	Output F select Input1~8
PORT 71~78	Output G select Input1~8
PORT 81~88	Output H select Input1~8



*Note: 1. Press "ALL" + "ENTER" + "2" buttons all together from the panel to switch RS-232 to B and the LCM will display baud rate 9600bps.*

*2. All the commands will not be executed unless followed with a carriage return. All letters are not case-sensitive.*


## 7. CONNECTION DIAGRAM

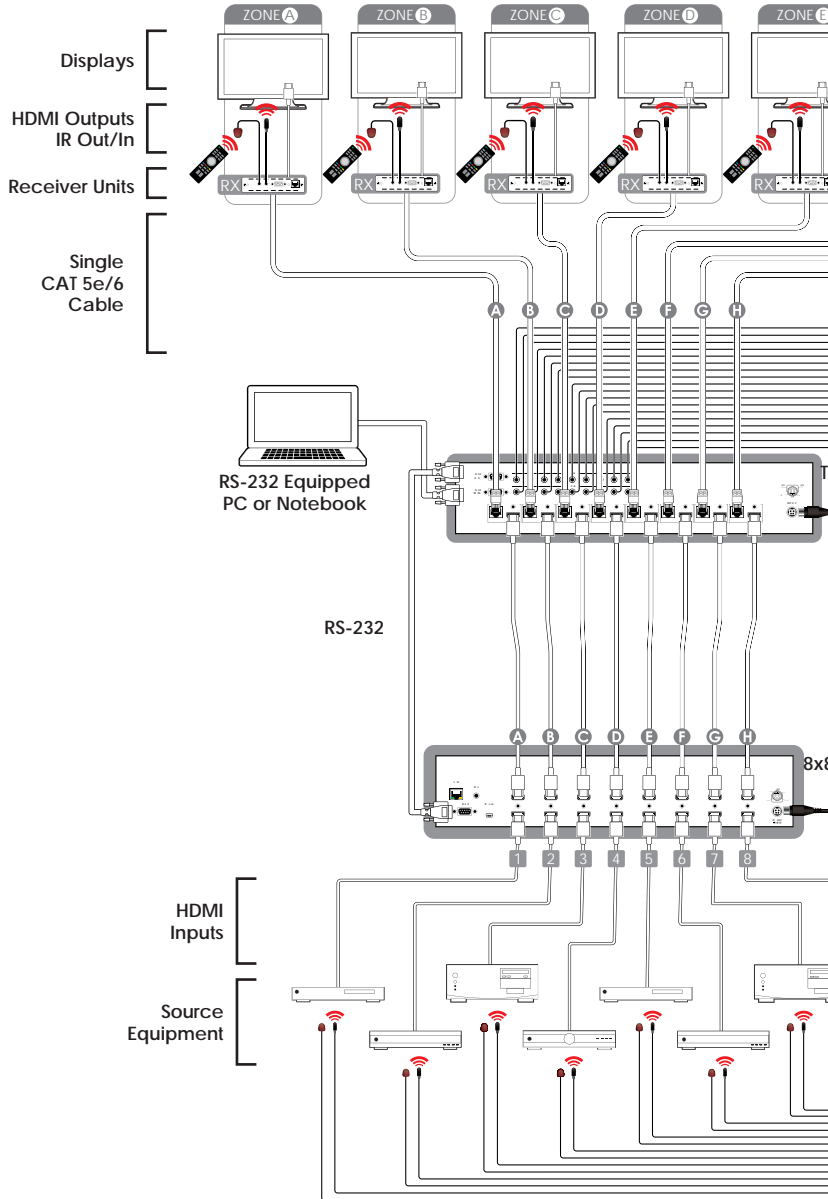



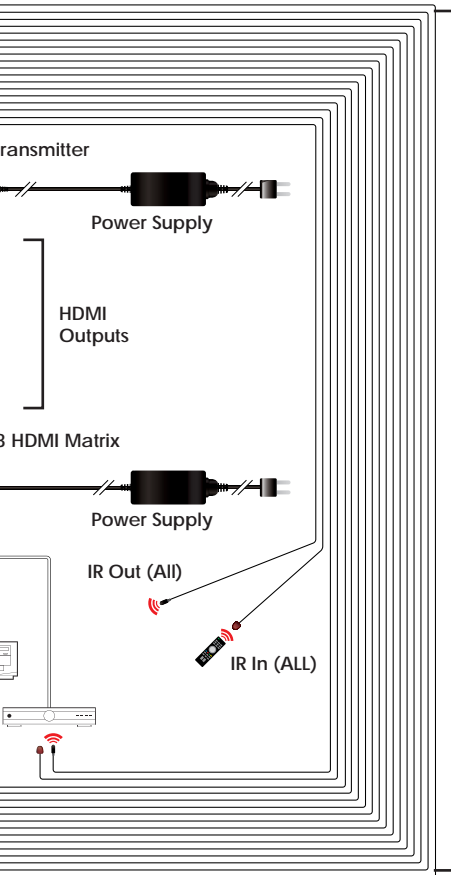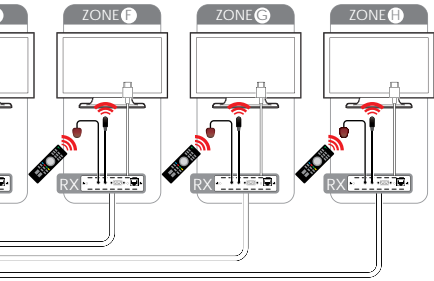

#### IR Out/In

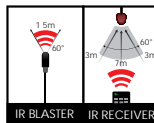



## 8. SPECIFICATIONS

<b>Video Bandwidth</b>	225 MHz/6.75 Gbps
<b>Input Ports</b>	8×HDMI, 9×IR Extender, 1×RS-232
<b>Output Ports</b>	8×CAT5e/6/7, 9×IR Blaster, 1×RS-232
<b>Input/Output Resolution</b>	VGA-WUXGA, 480i~1080p@24/50/60, 4k2k@24/25/30
<b>ESD Protection</b>	Human-body Model: ±8kV (Air-gap discharge) ±4kV (Contact discharge)
<b>Power Supply</b>	24 V/6.25 A DC (US/EU standards, CE/FCC/ UL certified)
<b>Dimensions</b>	432 mm (W)×210 mm (D)×93 mm (H)
<b>Weight</b>	3312 g
<b>Chassis Material</b>	Metal
<b>Silkscreen Color</b>	Black
<b>Operating Temperature</b>	0 °C~40 °C/32 °F~104 °F
<b>Storage Temperature</b>	-20 °C~60 °C/-4 °F~140 °F
<b>Relative Humidity</b>	20~90 % RH (non-condensing)
<b>Power Consumption</b>	90 W (Including Transmitter)

## 9. ACRONYMS

ACRONYM	COMPLETE TERM
DTS	Digital Theater System
DVI	Digital Visual Interface
EDID	Extended Display Identification Data
HDCP	High-bandwidth Digital Content Protection
HDMI	High-Definition Multimedia Interface
LCM	Liquid Crystal Module
USB	Universal Serial Bus
VGA	Video Graphics Array
WUXGA	Widescreen Ultra Extended Graphics Array



**CYPRESS TECHNOLOGY CO., LTD**  
Home page: <http://www.cypress.com.tw>

20120620 MPM-CSI8H8CV2IR