



Scan for full manual

SL-240C Quick Start Guide


This guide helps you install and use your **SL-240C** for the first time.

Go to www.kramerav.com/downloads/SL-240C to download the latest user manual and check if firmware upgrades are available.

Step 1: Check what's in the box

- ☒ **SL-240C** Master / Room Controller
- ☒ TOOL Mounting bracket kit
- ☒ 1 Quick start guide

Step 2: Get to know your SL-240C

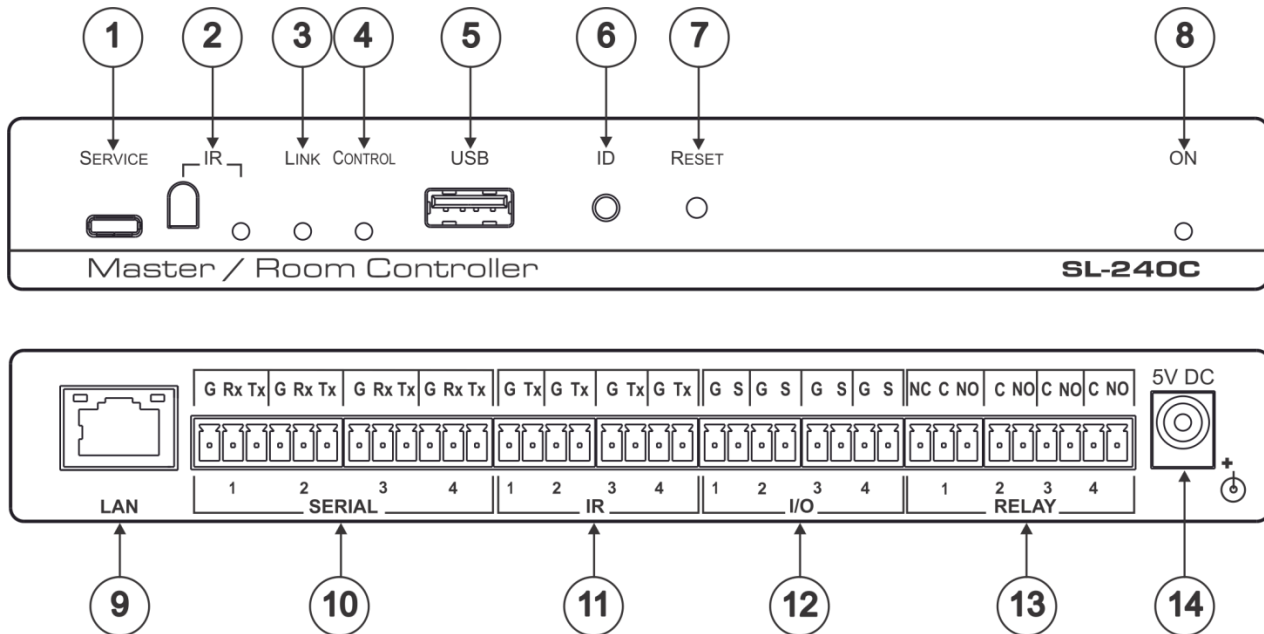

#	Feature	Function
1	SERVICE Mini USB 2.0 Port	Connect to a PC to perform a firmware upgrade.
2	IR Learner and LED	Detects IR signals for IR learning and indicates an active signal by lighting blue.
3	LINK LED	Indicates Ethernet activity: Blue LED on – good connection. Blue LED flashing – no connection. Blue LED off – not ready.
4	CONTROL LED	Indicates control states: Green – the control application (brain) is ready and working. Blue – the control application (brain) is synchronizing. Red – indicates an error in the control application (brain).
5	USB Connector	N/A – For future use.
6	ID Button	For self-identification over the network. Press the button to send (broadcast) the Beacon P3K command. Reply includes: IP address, UDP port number, TCP port number, MAC address, and Model Name.
7	RESET Button	For performing a factory default reset.
8	ON LED	Green – the device is powered.
9	LAN RJ-45 Connector	Connects to a local area network via PoE-enabled Ethernet cable. Indications: LINK LED lights amber – 1000/100/10MB connection. DATA LED flashes green – Ethernet data link activity.




#	Feature	Function
10	SERIAL Ports (1-4) Terminal Block	Connect to up to 4 serial controlled devices, for Ethernet-to-RS232 bidirectional tunneling.
11	IR Ports (1-4) Terminal Block	Connect to up to 4 IR emitters or blasters.
12	I/O Ports (1-4) Terminal Block	Connect to up to 4 sensors or devices to be controlled, (for example, a motion sensor). Port may be configured as a digital input, digital output, or analog input.
13	RELAY Ports (1-4) Terminal Block	3 NO relays and 1 NO/NC relay. Connect to up to 4 devices to be controlled by relay (for example, a motorized projection screen).
14	5V DC	+5V DC connector for powering the unit (optional, power adapter can be purchased separately).

Step 3: Install the SL-240C


Install **SL-240C** using one of the following methods:

- Fasten a bracket (included) on each side of the unit and attach it to a flat surface.
For more information go to www.kramerav.com/downloads/SL-240C.
- Mount the unit in a rack using an optional **RK-T2B** rack adapter.

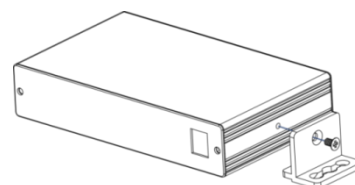

Step 4: Connect the inputs and outputs

Always switch OFF the power on each device before connecting it to your **SL-240C**. For best results, we recommend that you always use Kramer high-performance cables to connect AV equipment to the **SL-240C**.

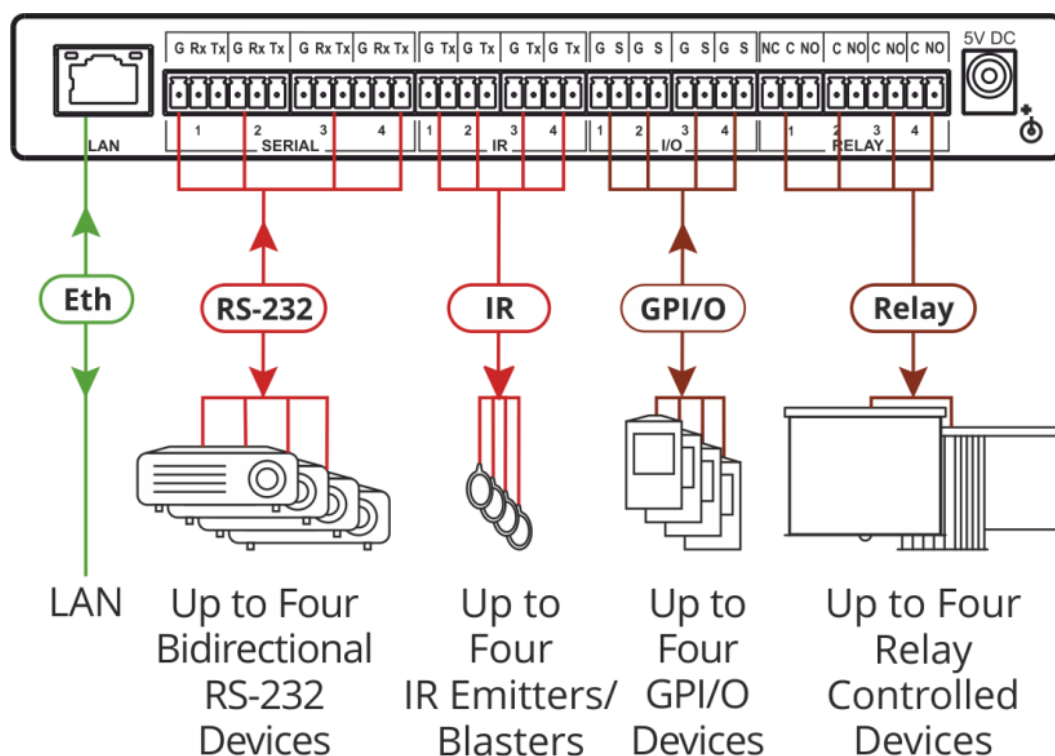

Step 5: Connect the power

Connect to a local area network via PoE-enabled Ethernet cable or optionally connect the power adapter to the **SL-240C** and plug the adapter into the mains electricity (power adapter can be purchased separately).

Safety Instructions



- Caution:** There are no operator serviceable parts inside the unit.
- Warning:** Use only the Kramer Electronics power supply that is provided with the unit.
- Warning:** Disconnect the power and unplug the unit from the wall before installing.
See www.KramerAV.com for updated safety information.